

CONNECT TO TAP

 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

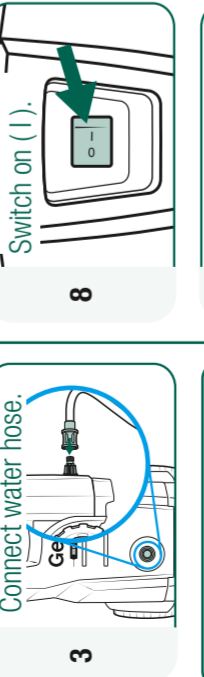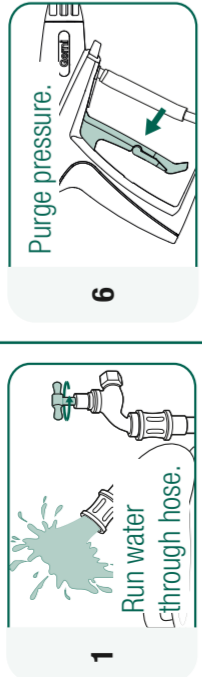

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.

Your Gerni 3000 High Pressure Washer is designed to remove dirt and grime. It is suitable for cleaning small vehicles, small boats, footpaths, fences, outdoor furniture and brickwork with appropriate included accessory for your application. It is not designed to strip paint or kill mildew from surfaces.

 
 
 
 
- For most effective cleaning, keep spray nozzle from 200 - 600 mm away from cleaning surface.
- If you get the spray nozzle too close, especially using high pressure nozzles, you may damage surface being cleaned.
- Apply a high pressure spray to a small area, and then check the surface for damage. If no damage is found, it is okay to continue cleaning.
- Allow detergents to soak in for 3 - 5 minutes (or as directed by the manufacturer) before washing and rinsing. Heavily soiled areas need to be pre-treated with detergent to prevent streaking, do not allow detergent to dry on the surface.
- To rinse detergents, use appropriate nozzle (see Fit An Accessory selection). Start at the top of the area to be rinsed, working down the same overlapping strokes as you used for washing, and applying detergent.
- Never use the pressure washer water inlet to siphon detergents.
- Lay tarps around the house perimeter to protect plants from debris and accidental spray.
- Hold the spray jet at a 45° angle and at a suitable distance to the surface being washed to prevent gouging the surface. Do not hold the spray jet straight on to the surface as this drives dirt in rather than washing it off.
- Work small areas at a time and use overlapping strokes to prevent streaks.

WARNING! When cleaning walls, be sure to keep spray nozzle more than 500mm away from windows as the high pressure can crack them.

TAKE A BREAK

WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Perform the procedure below if taking a break for more than 5 minutes. Failure to do so may damage the pump or cause the equipment to overheat and malfunction.

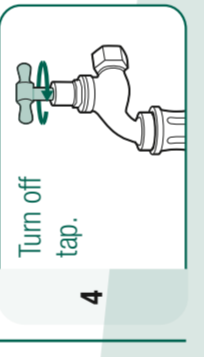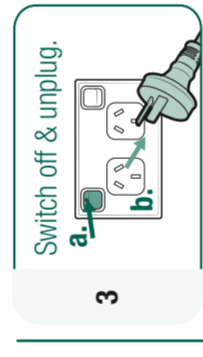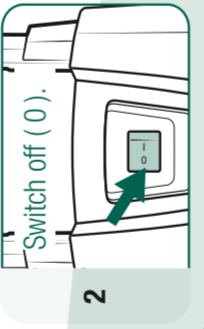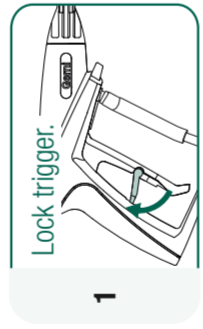

NOT WORKING?

SYMPTOM	POSSIBLE CAUSE	RECOMMENDED ACTION
Fluctuating Pressure	Pump is drawing in air Insufficient water supply	Check that hoses and connections are airtight Increase water supply at the tap, check for blockages or kinks in the hose and/or swap to a larger diameter hose
The machine stops mid-use	Accessory nozzle dirty or blocked Incorrect mains voltage Thermal sensor activated Nozzle partially blocked Air in the inlet hose/pump Kinked water hose	Clean accessory nozzle bore as there may be a blockage from dirt or debris please use cleaning needle provided Check that the mains voltage corresponds to the specification on the model tag Leave pressure washer for 15 minutes to cool down Press & hold the spray gun trigger and allow the machine to run until normal working pressure resumes Unwind the water hose fully
No water emitted	Insufficient water supply Water filter blocked Blocked nozzle	Increase water supply at the tap, check for blockages or kinks in the hose and/or swap to a larger diameter hose. Clean the inlet filter Use cleaning needle to clean outlet
Machine often starts and stops by itself	Spray gun may be leaking due to worn/damaged O-ring	Please contact your closest Gerni Authorised Repair Agent www.gerni.com.au
Thermal Overload Sensor activated	Incorrect extension lead used. Power lead or Extension lead coiled while in use. Incorrect operation of unit. Eg. pulsating trigger, air in line etc. Not sufficient ventilation causing overheating. Product is in direct sunlight. Product is close to heat source when in use, eg. hot water used during application, hot water service, open fire, etc.	Please use 3 x1.5mm extra heavy duty extension lead no longer than 20 metres long. Your machine is air-cooled, it is important to ensure the area around your machine is clear of any debris and your machine is on solid ground to prevent air vents being blocked

CONNECT TO TAP

 
 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

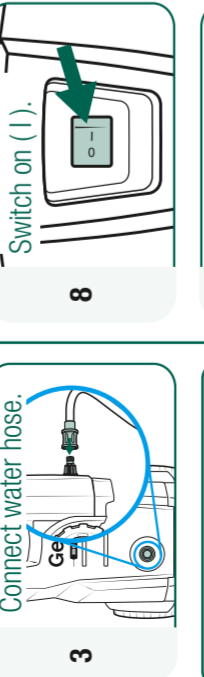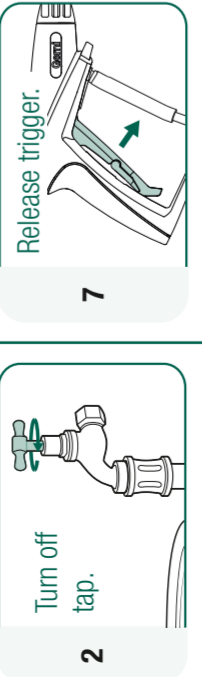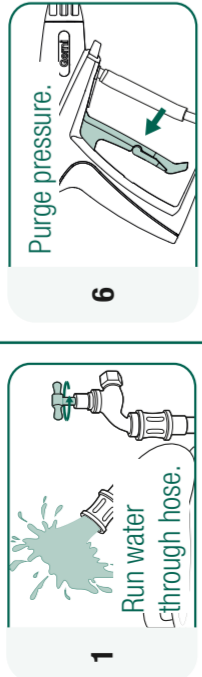

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.

Your Gerni 3000 High Pressure Washer is designed to remove dirt and grime. It is suitable for cleaning small vehicles, small boats, footpaths, fences, outdoor furniture and brickwork with appropriate included accessory for your application. It is not designed to strip paint or kill mildew from surfaces.

 
 
 
 
- For most effective cleaning, keep spray nozzle from 200 - 600 mm away from cleaning surface.
- If you get the spray nozzle too close, especially using high pressure nozzles, you may damage surface being cleaned.
- Apply a high pressure spray to a small area, and then check the surface for damage. If no damage is found, it is okay to continue cleaning.
- Allow detergents to soak in for 3 - 5 minutes (or as directed by the manufacturer) before washing and rinsing. Heavily soiled areas need to be pre-treated with detergent to prevent streaking, do not allow detergent to dry on the surface.
- To rinse detergents, use appropriate nozzle (see Fit An Accessory selection). Start at the top of the area to be rinsed, working down the same overlapping strokes as you used for washing, and applying detergent.
- Never use the pressure washer water inlet to siphon detergents.
- Lay tarps around the house perimeter to protect plants from debris and accidental spray.
- Hold the spray jet at a 45° angle and at a suitable distance to the surface being washed to prevent gouging the surface. Do not hold the spray jet straight on to the surface as this drives dirt in rather than washing it off.
- Work small areas at a time and use overlapping strokes to prevent streaks.

WARNING! When cleaning walls, be sure to keep spray nozzle more than 500mm away from windows as the high pressure can crack them.

TAKE A BREAK

WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Perform the procedure below if taking a break for more than 5 minutes. Failure to do so may damage the pump or cause the equipment to overheat and malfunction.

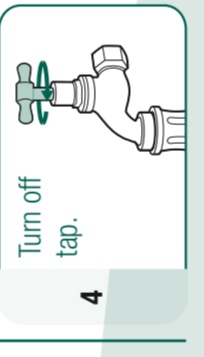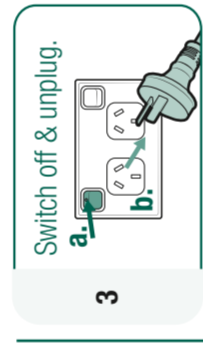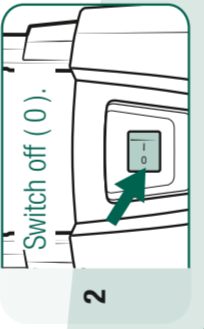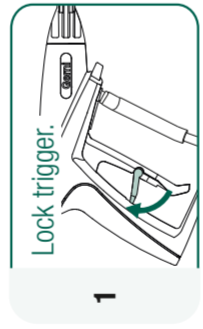

CONNECT TO TAP

 
 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

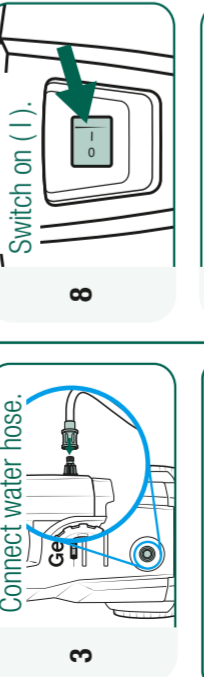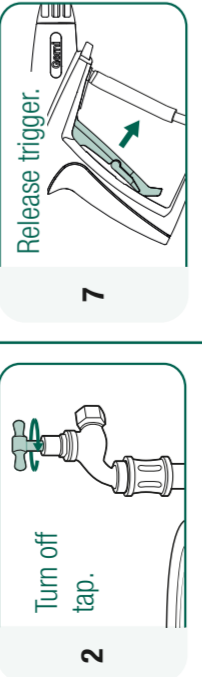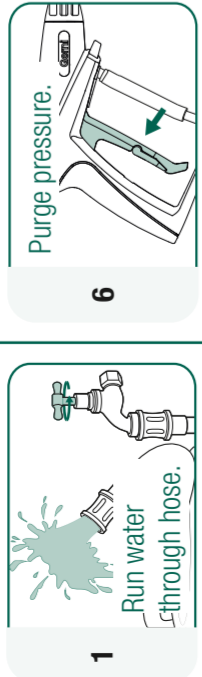

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.

Your Gerni 3000 High Pressure Washer is designed to remove dirt and grime. It is suitable for cleaning small vehicles, small boats, footpaths, fences, outdoor furniture and brickwork with appropriate included accessory for your application. It is not designed to strip paint or kill mildew from surfaces.

 
 
 
 
- For most effective cleaning, keep spray nozzle from 200 - 600 mm away from cleaning surface.
- If you get the spray nozzle too close, especially using high pressure nozzles, you may damage surface being cleaned.
- Apply a high pressure spray to a small area, and then check the surface for damage. If no damage is found, it is okay to continue cleaning.
- Allow detergents to soak in for 3 - 5 minutes (or as directed by the manufacturer) before washing and rinsing. Heavily soiled areas need to be pre-treated with detergent to prevent streaking, do not allow detergent to dry on the surface.
- To rinse detergents, use appropriate nozzle (see Fit An Accessory selection). Start at the top of the area to be rinsed, working down the same overlapping strokes as you used for washing, and applying detergent.
- Never use the pressure washer water inlet to siphon detergents.
- Lay tarps around the house perimeter to protect plants from debris and accidental spray.
- Hold the spray jet at a 45° angle and at a suitable distance to the surface being washed to prevent gouging the surface. Do not hold the spray jet straight on to the surface as this drives dirt in rather than washing it off.
- Work small areas at a time and use overlapping strokes to prevent streaks.

WARNING! When cleaning walls, be sure to keep spray nozzle more than 500mm away from windows as the high pressure can crack them.

TAKE A BREAK

WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Perform the procedure below if taking a break for more than 5 minutes. Failure to do so may damage the pump or cause the equipment to overheat and malfunction.

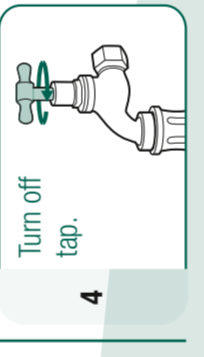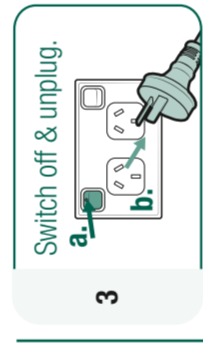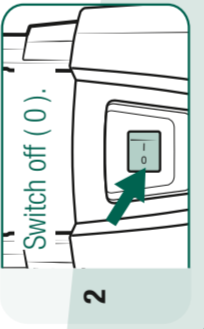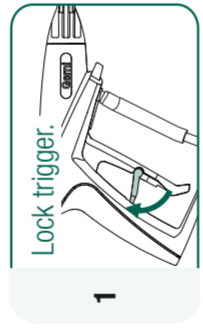

CONNECT TO TAP

 
 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

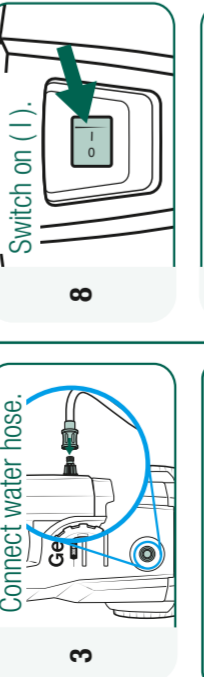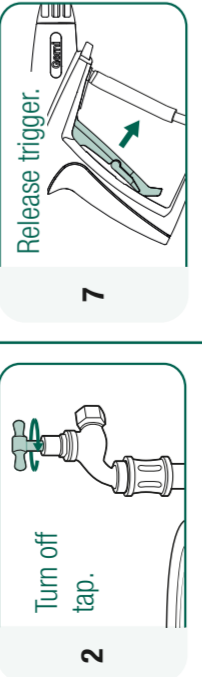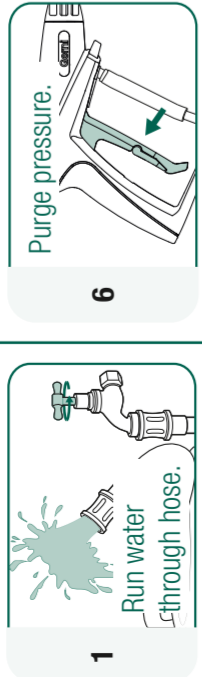

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.

Your Gerni 3000 High Pressure Washer is designed to remove dirt and grime. It is suitable for cleaning small vehicles, small boats, footpaths, fences, outdoor furniture and brickwork with appropriate included accessory for your application. It is not designed to strip paint or kill mildew from surfaces.

 
 
 
 
- For most effective cleaning, keep spray nozzle from 200 - 600 mm away from cleaning surface.
- If you get the spray nozzle too close, especially using high pressure nozzles, you may damage surface being cleaned.
- Apply a high pressure spray to a small area, and then check the surface for damage. If no damage is found, it is okay to continue cleaning.
- Allow detergents to soak in for 3 - 5 minutes (or as directed by the manufacturer) before washing and rinsing. Heavily soiled areas need to be pre-treated with detergent to prevent streaking, do not allow detergent to dry on the surface.
- To rinse detergents, use appropriate nozzle (see Fit An Accessory selection). Start at the top of the area to be rinsed, working down the same overlapping strokes as you used for washing, and applying detergent.
- Never use the pressure washer water inlet to siphon detergents.
- Lay tarps around the house perimeter to protect plants from debris and accidental spray.
- Hold the spray jet at a 45° angle and at a suitable distance to the surface being washed to prevent gouging the surface. Do not hold the spray jet straight on to the surface as this drives dirt in rather than washing it off.
- Work small areas at a time and use overlapping strokes to prevent streaks.

WARNING! When cleaning walls, be sure to keep spray nozzle more than 500mm away from windows as the high pressure can crack them.

TAKE A BREAK

WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Perform the procedure below if taking a break for more than 5 minutes. Failure to do so may damage the pump or cause the equipment to overheat and malfunction.

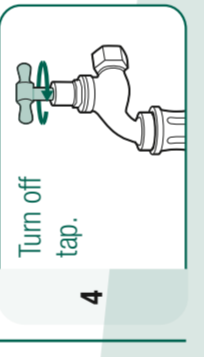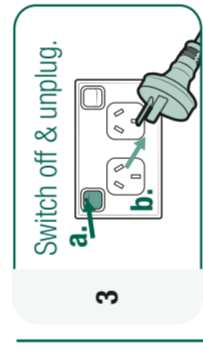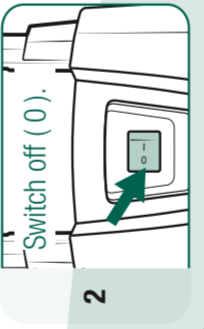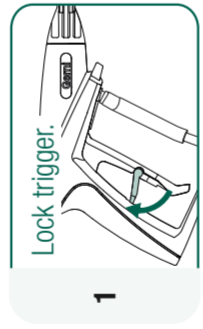

CONNECT TO TAP

 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

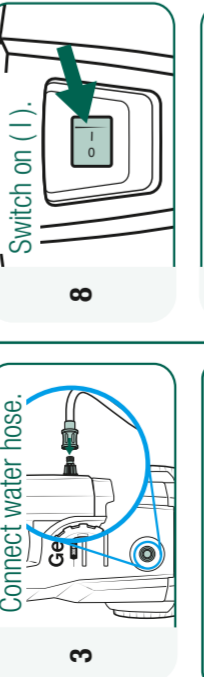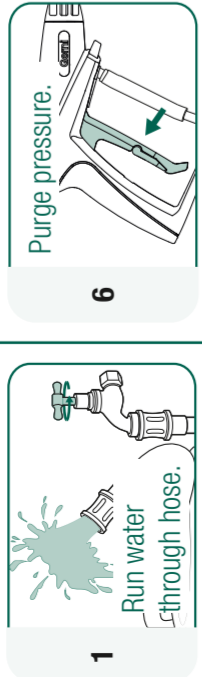

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.

Your Gerni 3000 High Pressure Washer is designed to remove dirt and grime. It is suitable for cleaning small vehicles, small boats, footpaths, fences, outdoor furniture and brickwork with appropriate included accessory for your application. It is not designed to strip paint or kill mildew from surfaces.

 
 
 
 
- For most effective cleaning, keep spray nozzle from 200 - 600 mm away from cleaning surface.
- If you get the spray nozzle too close, especially using high pressure nozzles, you may damage surface being cleaned.
- Apply a high pressure spray to a small area, and then check the surface for damage. If no damage is found, it is okay to continue cleaning.
- Allow detergents to soak in for 3 - 5 minutes (or as directed by the manufacturer) before washing and rinsing. Heavily soiled areas need to be pre-treated with detergent to prevent streaking, do not allow detergent to dry on the surface.
- To rinse detergents, use appropriate nozzle (see Fit An Accessory selection). Start at the top of the area to be rinsed, working down the same overlapping strokes as you used for washing, and applying detergent.
- Never use the pressure washer water inlet to siphon detergents.
- Lay tarps around the house perimeter to protect plants from debris and accidental spray.
- Hold the spray jet at a 45° angle and at a suitable distance to the surface being washed to prevent gouging the surface. Do not hold the spray jet straight on to the surface as this drives dirt in rather than washing it off.
- Work small areas at a time and use overlapping strokes to prevent streaks.

WARNING! When cleaning walls, be sure to keep spray nozzle more than 500mm away from windows as the high pressure can crack them.

TAKE A BREAK

WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Perform the procedure below if taking a break for more than 5 minutes. Failure to do so may damage the pump or cause the equipment to overheat and malfunction.

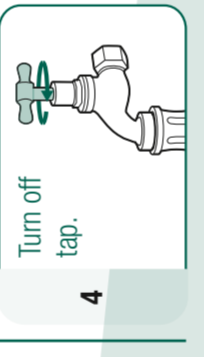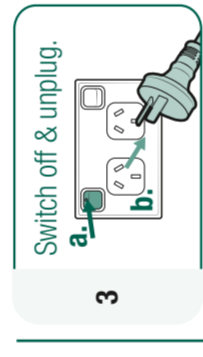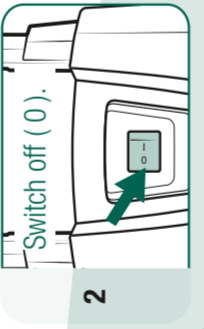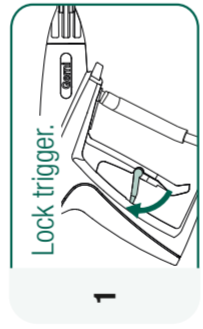

CONNECT TO TAP

 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

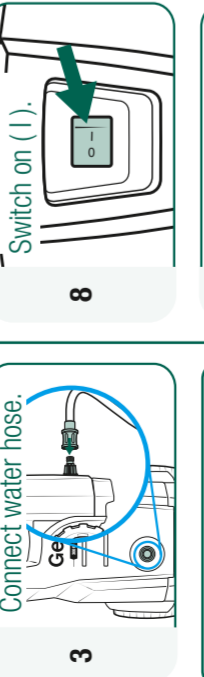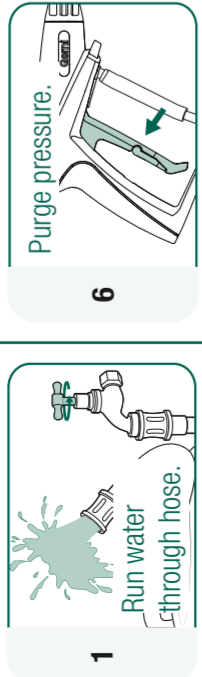

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.

Your Gerni 3000 High Pressure Washer is designed to remove dirt and grime. It is suitable for cleaning small vehicles, small boats, footpaths, fences, outdoor furniture and brickwork with appropriate included accessory for your application. It is not designed to strip paint or kill mildew from surfaces.

 
 
 
 
- For most effective cleaning, keep spray nozzle from 200 - 600 mm away from cleaning surface.
- If you get the spray nozzle too close, especially using high pressure nozzles, you may damage surface being cleaned.
- Apply a high pressure spray to a small area, and then check the surface for damage. If no damage is found, it is okay to continue cleaning.
- Allow detergents to soak in for 3 - 5 minutes (or as directed by the manufacturer) before washing and rinsing. Heavily soiled areas need to be pre-treated with detergent to prevent streaking, do not allow detergent to dry on the surface.
- To rinse detergents, use appropriate nozzle (see Fit An Accessory selection). Start at the top of the area to be rinsed, working down the same overlapping strokes as you used for washing, and applying detergent.
- Never use the pressure washer water inlet to siphon detergents.
- Lay tarps around the house perimeter to protect plants from debris and accidental spray.
- Hold the spray jet at a 45° angle and at a suitable distance to the surface being washed to prevent gouging the surface. Do not hold the spray jet straight on to the surface as this drives dirt in rather than washing it off.
- Work small areas at a time and use overlapping strokes to prevent streaks.

WARNING! When cleaning walls, be sure to keep spray nozzle more than 500mm away from windows as the high pressure can crack them.

TAKE A BREAK

WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Perform the procedure below if taking a break for more than 5 minutes. Failure to do so may damage the pump or cause the equipment to overheat and malfunction.

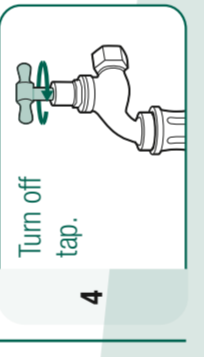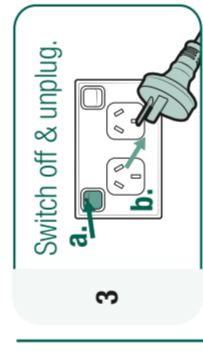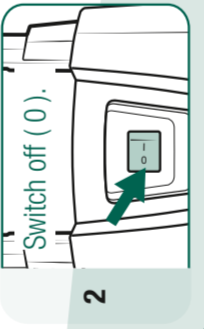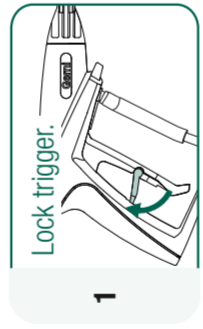

CONNECT TO TAP

 
 
WARNING! High pressure jets can be dangerous if not used properly. Do not direct the jet at persons, animals, live electrical equipment or the pressure washer itself.

WARNING! Do not point the spray jet at any part of your body, other people, pets or animals. The pressurised water stream can cause cuts and injuries.

WARNING! Always wear safety boots, safety gloves, safety helmet with visor and hearing protection while operating the equipment.

WARNING! Ensure that the spray jet is not directed at power lines, electrical outlets and electronics.

WARNING! High pressure hoses, fittings & couplings are important for the safety of the user. Use only hoses, fittings & couplings supplied.

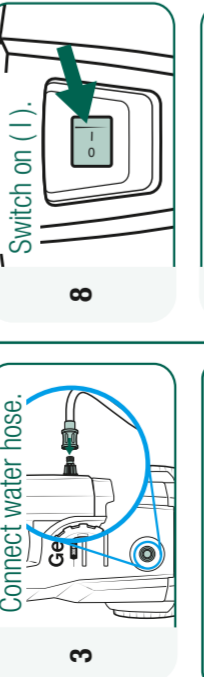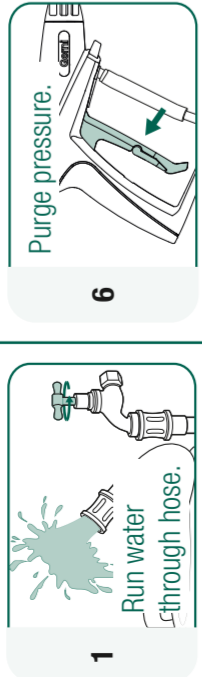

Note: The water inlet is fitted with a mesh inlet filter. This filter must be in place to prevent impurities in the water source from entering the unit and damaging the pump.

USAGE TIPS

WARNING! Ensure the pressure washer is placed on a flat, hard surface. Always have the pressure washer in an upright position during use & be sure to make sure air vents positioned on the rear & underneath the machine is clear & not blocked.