 


click®

SLIM DUAL SOLAR PANEL LIGHT

1200 LUMENS

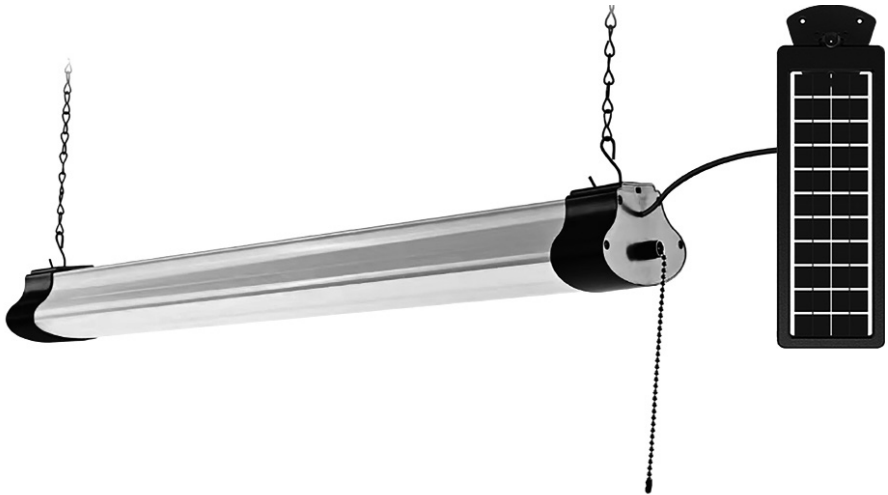

INSTRUCTION MANUAL

Item number: 0590350

IMPORTANT SAFEGUARDS

When using battery products, in order to reduce the risk of fire, and/or injury to persons, basic safety precautions should always be followed.

Please read all instructions carefully prior to use, even if you are quite familiar with the type of product. Please retain these instructions for future reference.

 
SAFETY PRECAUTIONS

When using this appliance, below safety precautions should always be followed.

- Do not immerse the product in water or any other liquid.
- Do not operate the product if it is damaged.
- The light is designed exclusively for indoor use, while the solar panel is installed outdoors.
- Do not put the light in a fire or near any flammable objects as this may cause an explosion.
- Do not look directly into the light source or point it into the eyes of others. This can lead to retinal damage.
- Do not use excessive force on the product as it may cause permanent damage to the unit. Do not attempt to use the solar light for anything other than its intended use.
- This product is NOT a toy. Keep out of reach of small children. Young children should be supervised to ensure that they do not play with this product.
- The battery in this unit should be properly disposed of in accordance with local council regulations.
- Do not allow children to play with the packaging materials.
- The light source contained in this light shall only be replaced by the manufacturer or its service agent or a similar qualified person. Do not attempt to access/maintain the LED lamp as it is non-replaceable, and any contact may damage the product. This product has no user serviceable parts. If any part is damaged, discontinue use and consult with qualified personnel.
- **Warning : The light source and battery of this luminaire is not replaceable; when the light source and battery reaches its end of life, the whole luminaire should be replaced. Do not attempt to open the casing.**

SAVE THESE INSTRUCTIONS

FEATURES OF YOUR SOLAR POWERED SHED LIGHT

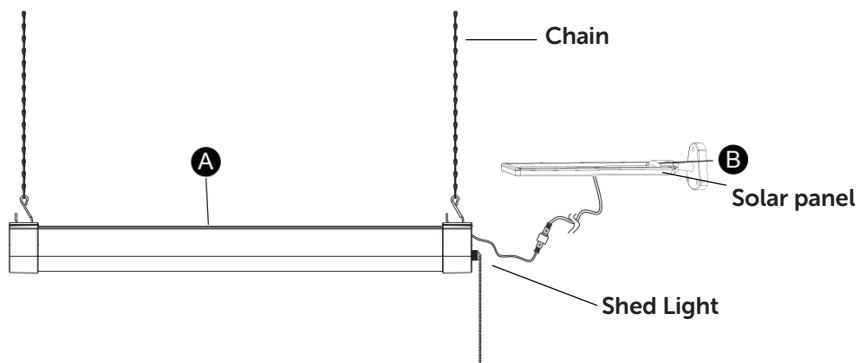

AA



 
Mounting Chain With "S" Hook X2

BB




Additional Pull Chain X1

CC



Drywall Screw X5

 DD



Anchor X5

OPERATION

Installation

1. The light comes with one solar panel supplied. During the day, the light automatically absorbs light energy from the sun and stores it in the built-in rechargeable battery.
2. The solar panel must be installed facing up and capturing maximum sunlight hours each day. To get better efficiency of charging, ensure that the solar panel is installed in a bright sunlight location and not in a shaded area.
3. The work time of the light depends on your geographical location, weather conditions and seasonal sunshine availability. Must be taken into consideration that the sun trajectory is at a much lower angle and with shorter available day light hours during winter. Daylight hours will be longer in summer.

Securing the Light & Solar Panel

This light also comes with wall mounting accessories to wall mount the solar panel. The following installation instructions must be adhered to in order to ensure that it is installed and secured safely:

 
1. When installing the solar panel and light, it is important to ensure that the light is securely mounted indoors and the solar panel is mounted on the outdoor wall area. Take care during the installation process to avoid damaging any concealed cables.
2. The wall mount must be secured into solid substrate (brick, concrete etc.) or aligned with timber or metal wall studs. Do not secure onto just plaster or similar materials that cannot support the weight of the light. Screws and wall plugs are included.
3. Ensure that the solar panel is mounted away from any surrounding combustible materials.
4. Do not use the light until properly fixed to the wall and the instructions are read fully.
5. Please be careful while drilling the holes.

Securing steps for Solar Panel:

Note: Remove the packaging material completely. Before assembly, decide where you want to install the product. Pay attention to the following when selecting an installation location.

The light must be turned off before securing the panel

1. Ensure your solar panel (B) is installed so it can receive direct sunlight. Be aware of objects such as trees or property overhangs that may impede the panel's ability to generate a charge. To adjust the solar panel, loosen the wing nut and position the panel. When desired position is achieved, tighten wing nut until secure. The solar panel is equipped with a 4.5m connecting wire, so the light fixture and solar panel can be installed up to 4.5m apart.
2. Put the solar panel base on the wall to mark the 3 screws holes (applicable to solid substrate of brick, concrete etc.) and ensure it is vertical. Use 6.0mm Masonry drill bit, drill 25 mm deep holes, insert wall plugs into the holes. Use 3pcs ST4X25 screws (provided) to fix the solar panel of the right way up on the wall.

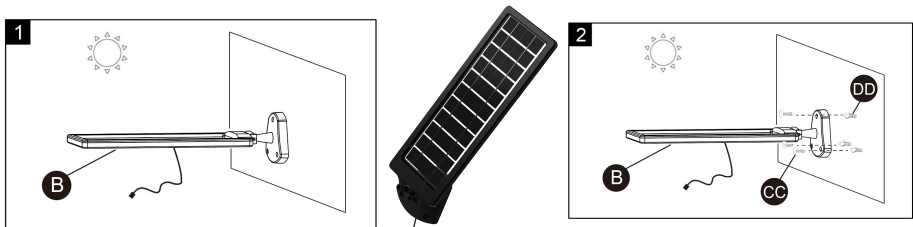


The right way up of the solar panel

Securing steps for Shade Light:



The light can be ceiling mounted, ceiling hanging and wall mounted

Ceiling hanging installation :

 1. Select suitable location that can support the weight of the fixture and make sure it is within the reach of the power cord of the solar panel. Determine method of mounting before drilling. Mark two spots on the ceiling 582mm apart for the mounting hardware (not included).




2. Attach the "S" hook at the bottom of the mounting chain (AA) to the hanger on the light fixture (A). Repeat this step on the other side of the light fixture (A).
3. Hang fixture body (A) by placing one mounting chain (AA) over each hook (not included) that has been installed in the ceiling. You may need to adjust the mounting chains (AA) slightly on the hooks for light fixture (A) to hang level.

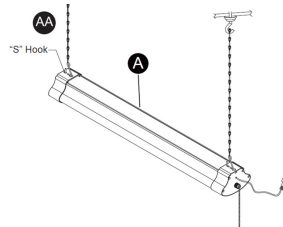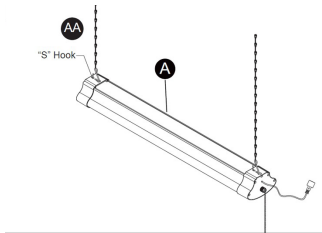  

4. Carefully route the power cord of the solar panel (B) to the light fixture (A) and plug into the socket located on the light. Use the solar panel (B) only for charging the light fixture (A). It is not designed to charge other equipment or devices. Pull the chain once to turn on the light on low brightness mode (600 lumens). Pull the chain twice for a higher brightness mode (1200 lumens). To turn the light off, pull the chain three times.

 
NOTE: Solar panel needs to charge in direct sunlight for 10-15 hours to fully charge the battery. The light will charge in the ON or OFF position.

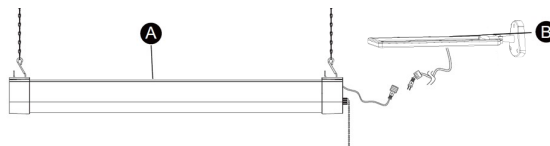

Ceiling mounted and wall mounted installation

1. Select suitable location that can support the weight of the fixture, and make sure it is within the reach of the power cord of the solar panel. Determine method of mounting before drilling.

 Mark the 2 screws holes (applicable to solid substrate of brick, concrete etc.) on the ceiling or wall, and ensure it is leveled on a line. Use 6.0mm Masonry drill bit, drill 25 mm deep holes, insert anchor into the holes. Secure with the 2 pcs ST4x25mm screws provided. For fastening to wall stud there is no need to drill 6.0mm hole, drilling a 3.0mm pilot hole for securing with screw directly into wall stud is sufficient.




NOTE: A minimum distance of 1.5m from the floor for wall mounted installation. Ensure the two screws holes are equally levelled by using a spirit level whilst marking out the hole positions.

2. Lift the light and place it carefully onto the wall brackets. Slide unit to the right to secure light into key hole slots as shown in picture below.




3. Carefully route the power cord of the solar panel (B) to the light fixture (A) and plug into the socket located on the light. Use the solar panel (B) only for charging the light fixture (A). It is not designed to charge other equipment or devices. Pull the chain once to turn on the light on low brightness mode (600 lumens). Pull the chain twice for a higher brightness mode (1200 lumens). To turn the light off, pull the chain three times.

 NOTE: Solar panel needs to charge in direct sunlight for 10-15 hours to fully charge the battery. The light will charge in the ON or OFF position.

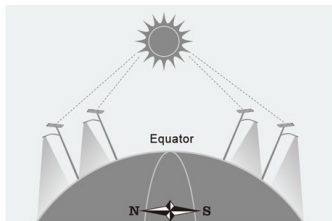

Picture 1

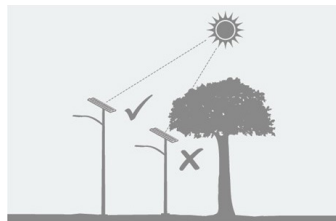 

Picture 1.2

TECHNICAL DATA

Rechargeable Battery	7.4V 2400mAh Li-ion
Solar panel	Double-side-charge PERC mono crystalline 300x90mm, 4W/11V
Brightness	High mode: 1200lm Low mode: 600lm
Working hours	High mode: 4-6 hours Low mode: 9-12 hours
Protection class	IP20 for Shade Light IP44 for Solar panel

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The light isn't working	The light switch is not on	Turn light switch to ON
	LED light is not fully charged	The solar panel needs to charge in direct sunlight for 10-15 hours to fully charge the battery.
	Cable connection is loose	If the light does not turn on, please check if the cable connection is loose. If yes, please reconnect the cable.
The light flash on and off	Low battery	1. Charge light fixture in direct sunlight for 10-15 hours to fully charge the battery. 2. Replace the battery pack.

CARE AND CLEANING

Switch the light off before cleaning.

In order to ensure that the solar panel receives the light efficiently, please use clean water to remove the dirt mark on the surface of the panel regularly and prohibit the use of chemicals or corrodents which include chlorobenzene.

1. Wipe the light and solar panel with a slightly damp cloth regularly and polish with soft dry cloth.
2. Keep the surface of solar panel clean. If not, the efficiency of charging will be diminished.
3. Do not immerse the light in water or any other liquid.

Caution: Never use a damaged product (e.g. worn cable, cracked casing).

DISPOSAL

If the product is no longer suitable for use, dispose of it in an environmentally friendly manner in accordance with your local council requirements.

Dispose of used batteries according to your local council requirements.

NOTE

WARRANTY CONDITIONS FOR PURCHASE IN AUSTRALIA & NEW ZEALAND

Thank you for purchasing one of our quality Click products. Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations).

Bunnings Group Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or the Consumer Guarantees Act(NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications, neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited.
ABN 26 008 672 179, Botanicca 3, Level 2 East Tower 570 Swan Street, Burnley, VIC 3121,
e-mail: CustomerSupport@bunnings.com.au, PH: 1800 797 586.
Bunnings NZ Limited: PO Box 14436, Panmure Auckland 1741,
email: OnlineEnquiries@bunnings.co.nz PH: 1800 797 586

WARRANTY EXCLUSIONS

Damage to the base or diffuser or any part through accident, misuse or negligence.

