

click®

**90CM
HIGH VELOCITY
FLOOR FAN**

CHV-90



INSTRUCTION MANUAL

CONTENTS

| | |
|-----------------------|----|
| General Safety | 4 |
| Product Overview | 7 |
| Assembly instructions | 8 |
| Operation | 10 |
| Cleaning & Storage | 11 |
| Specifications | 11 |

GENERAL SAFETY

Read this manual thoroughly before you start using the Fan.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire.
 - Do not temper or change or modify the product in any way.
 - Only use Accessories outlined and recommended by the manufacturer.
 - Please do not expose the product to splashing or water contact
-
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
 - This product should not be used in the immediate vicinity of water such as bathtub, washbowls, swimming pool etc, where the likelihood of immersion or splashing could occur.
 - No naked flame source, such as candles, should be placed on the product.
 - Do not operate the fan while power cord is coiled up, please completely unwind the power cord before using.
 - Do not allow power cord to hang over edge of table or bench.
 - Never move the fan by the power cord.
 - Move the power cord away from pathways of persons so they do not trip.
 - Do not run power cord under carpeting or cover it with rugs. Must have quick access to unplug the fan.
 - Do not use this fan with an extension cord, power adaptors or external timers.
 - This product is not designed for industrial or outdoor use.
 - Do not leave the fan unattended during use. Always switch off and unplug.
 - Children must be supervised at all times while in use. This fan is not a toy. Make sure children do not go near or attempt to play with this fan.
 - **AIRFLOW** - Make sure nothing is obstructing or blocking the airflow outlet at the front of the fan, and the airflow intake which is the back of the fan.
 - Do not insert an foreign objects into the fan grill opening as this may cause damage to the appliance and lead to electric shock and/or a fire hazard.

GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit. Please disconnect the product from main power.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

 
- Not wet or damp and Well ventilated.
- Placed on a stable surface to avoid product from tipping over.
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 50cm above and 80cm spacing on both sides for proper ventilation.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Always disconnect the fan when moving it from one location to another.
- Do not cover the grill or operate in close proximity to curtains, etc.
- Do not place small metallic objects near the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.
- This product is intended for normal domestic/household use.

GENERAL SAFETY (CONT.)

Before first use

 



 


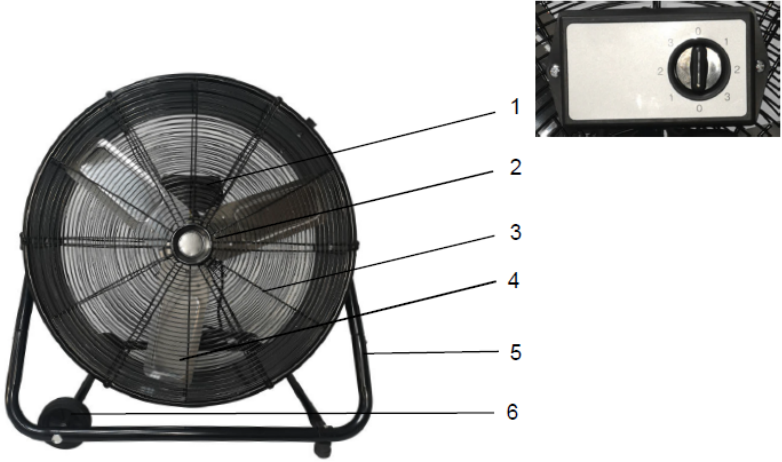


- Unpack the fan and accessories and ensure all parts of the product are undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the power cord to its full length and inspect it for damage before each use. Do not use the product if it or its cord has been damaged or is not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Ensure the fan is not exposed to direct sunlight or placed near a heater or other heat source.
- Placed on a flat and dry surface.
- Do not place in areas of high humidity such as bathrooms, laundry area, near a sink, washer or pool (any source of water).

 
PRODUCT OVERVIEW

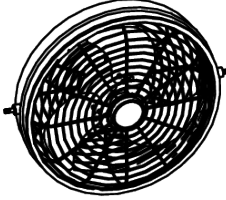

| | | | |
|---|--------|---|-------|
| 1 | switch | 4 | blade |
| 2 | motor | 5 | stent |
| 3 | grille | 6 | wheel |

ASSEMBLY INSTRUCTIONS

| | | |
|---|---|---|
| Ax1  | Bx2  | Cx1  |
| Dx1  | Ex4  | Fx2  |
| Hx2  | Ix2  | Hx2  |
|  x1 | | |

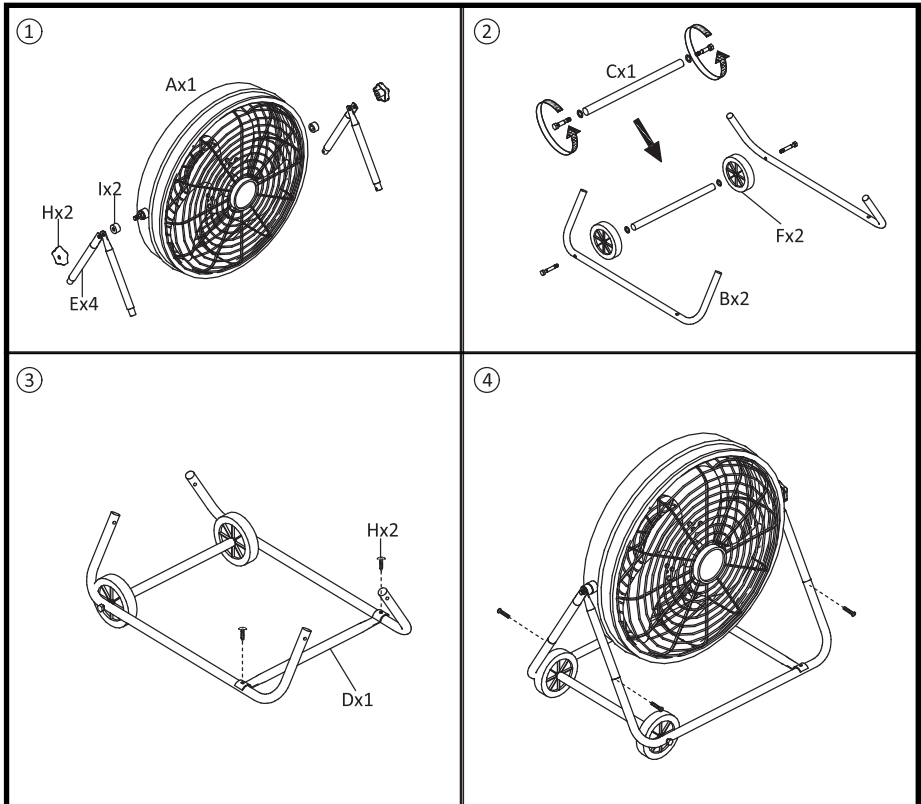

- Remove the packaging material from the fan control box;
- Remove the screws from the two extremities of the base tube.
- Insert the tube into the fan body as shown in Figure I.
- Align the screws hole and tighten the holding screws onto the base.

NOTE: When installing the control box, make sure the electrical wires are located on the outside of the base.

OPERATION

- Plug the power cord into 220-240V volt AC wall outlet.
The 3 speeds system is designed to give you maximum flexibility and to meet all your air circulation needs.
- LOW or MED speed setting can be used for most of your requirements.
- High speed should only be necessary in exceptional circumstances.
- Select the desired speed by using the rotary control switch.
- Adjust to your desired air stream by tilting the fan assembly to the require position.

CLEANING & STORAGE

- Turn the control to OFF and unplug the fan before cleaning.
- Use only a soft, damp cloth to clean the fan.
- Do not place the fan in water and never allow water to drip into the Motor Housing.
- Do not use gasoline, paint thinner or other chemicals to clean the fan.
- To clean the fan Blade, Remove the Front grill and Wipe the Blade and Grills.
- Reassemble the fan by snapping the Front Grill into place.
- Store the fan in its original box or cover the fan to protect it from dust.
- Store it in a cool, dry place.

SPECIFICATIONS

| | |
|------------------------|--------------------------------|
| Ratings | 220-240 V~50-60Hz, 360w |
| Unit Dimensions | 950 (w) x 430 (d) x 930 (h) mm |
| Weights | Net: 14 kgs / Gross: 16.5 kgs |

click[®]