

# jumbuck®



## Portable Charcoal Spit Roaster

 
- High temperature powder coated body
- Galvanized steel body plate & ash tray
- Stainless steel wire cooking grills
- Turns 15kg with adjustable height
- Battery operated
- Bakelite handles
- Dimensions: 825Lx300Wx315Hmm



**Solid Fuel**



**Cooking  
Surface**

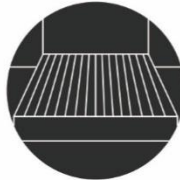

**Grill**



# Jumbuck HS-CBoo7 (0256536) Portable Charcoal Spit Roaster

## IMPORTANT SAFETY INSTRUCTIONS



- For outdoor use only.
- Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation instructions thoroughly before installing this equipment.
- Warning: accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Any modification of the appliance may be dangerous.
- Installer to leave instructions with the consumer and consumer to retain them for future reference.
- Dispose of all polythene packing carefully and keep out of the reach of children

**IMPORTANT: READ THE ASSEMBLY INSTRUCTIONS IN THIS BOOKLET BEFORE REMOVING THE CONTENTS OF THIS CARTON**

## IMPORTANT SAFETY INSTRUCTIONS



This appliance must only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where products of combustion are rapidly dispersed by wind and natural convection

- This BBQ is an **outdoor appliance only**. Under no circumstances should it be used indoors.
- Do not store chemicals or flammable materials near this appliance.
- Unsupervised children should not be near the BBQ while cooking or during warm up or cool down.
- People with flammable clothing such as nylon etc. should keep well away from the BBQ when it is operating.
- Do not leave food unattended on the BBQ.
- Particular care must be taken when removing the ash OR used fuel. Hot ash can cause serious injury.

DO NOT	OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTION BOOKLET
DO NOT	PLACE ARTICLES ON OR AGAINST THIS APPLIANCE
DO NOT	STORE CHEMICALS OR FLAMMABLE MATERIALS OR SPRAY AEROSOLS NEAR THIS APPLIANCE
DO NOT	OPERATE THIS APPLIANCE INDOORS
DO NOT	ENCLOSE THIS APPLIANCE
DO NOT	LIGHT OR OPERATE WITH THE COVER ON(COVER NOT INCLUDED)

### **Lighting the Charcoal BBQ**

- solid fuel is to be used for this product (fire wood, charcoal etc.)
- place solid fuel onto the charcoal grid and light using fire starters
- let the solid fuel light (check occasional to ensure fire is lit)

### **Using the Spit function**

- the Spit Motor requires 2 x D size battery to operate (batteries not included)
- set the cooking height by securing the motor and rotisserie rod onto the motor supports
- switch the motor on to begin using the spit function

### **Cooking**

- ensure solid fuel is lit and that there is sufficient heat for cooking
- place food on the cooking grill
- regularly monitor the temperature to ensure food is not under or over cooked

### **Cleaning**

- once finished cooking, remove left over solid fuel from the BBQ
- always ensure BBQ is clean and free from oil or grease (internally and externally) to ensure longevity of the BBQ
- always keep BBQ dry and under cover to protect from weather and moisture

 
### **Pre-caution**

- always ensure hands are protected when putting or removing food from the BBQ
- always ensure BBQ is cool before touching or cleaning the internal areas
- always ensure hands are protected when making adjustments to the air vent
- do not use flammable liquids for igniting and re-igniting
- open flames and burning embers must never be left unattended
- after use, make sure the BBQ is allowed to cool before moving

### **Important Notes**

- do not use this BBQ indoors.
- do not use this BBQ inside a tent, gazebo or within a confined space.
- this BBQ will become very hot during and for some time after use. Keep children away from the BBQ and do not touch metal parts of the BBQ when in use
- use suitable gloves for protection, especially when loading the BBQ with coal or charcoal
- we recommend protecting your BBQ when not in use with a cover to protect it from weather exposure


 


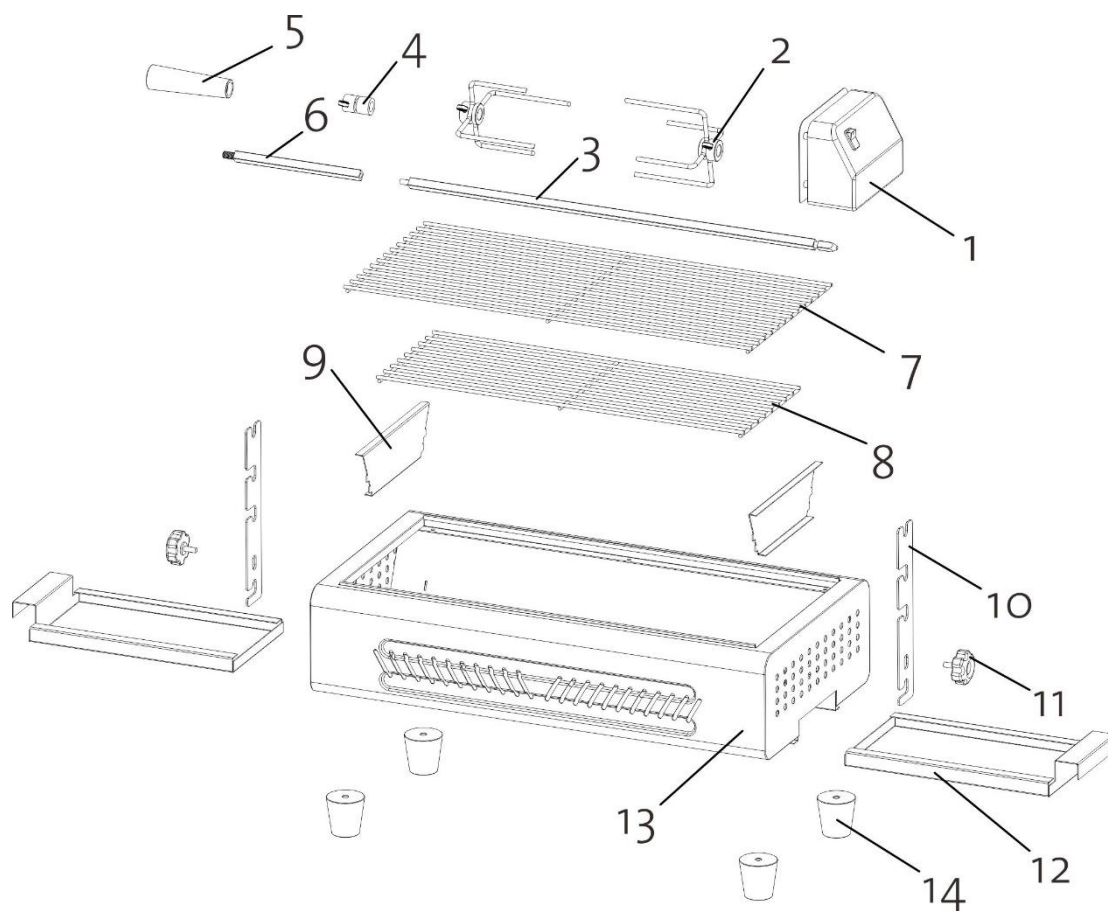






# EXPLODED VIEW



 
 
# PARTS CODE

Parts Number	Parts Name	Parts Code
1	Motor (requires 2 x D size battery to operate, batteries not included)	HS-CB007-01
2	Rotisserie spike	HS-CB007-02
3	Rotisserie arm	HS-CB007-03
4	Weight	HS-CB007-04
5	Handle	HS-CB007-05
6	Rotisserie pole	HS-CB007-06
7	Cooking grill	HS-CB007-07
8	Charcoal grill	HS-CB007-08
9	Charcoal plate	HS-CB007-09
10	Motor support	HS-CB007-10
11	Motor support bolt	HS-CB007-11
12	Ash tray	HS-CB007-12
13	BBQ body	HS-CB007-13
14	Leg	HS-CB007-14

# CARTON CONTENTS

Reference#	Description	Part#	Illustration	Quantity
1	Motor	HS-CB007-01		1
2	Rotisserie spike	HS-CB007-02		2
3	Rotisserie arm	HS-CB007-03		1
4	Weight	HS-CB007-04		1
5	Handle	HS-CB007-05		1
6	Rotisserie pole	HS-CB007-06		1
7	Cooking grill	HS-CB007-07		1
8	Charcoal grill	HS-CB007-08		1
9	Charcoal plate	HS-CB007-09		2
10	Motor support	HS-CB007-10		2
11	Motor support bolt	HS-CB007-11		2
12	Ash tray	HS-CB007-12		2
13	BBQ body	HS-CB007-13		1
14	Leg	HS-CB007-14		4

# HARDWARE PACK CONTENTS

Reference#	Description	Illustration	Quantity
A	Bolt M6x 35mm		4
B	Bolt M6x 15mm		2

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS

 
- Remove all contents from packaging, and make sure all the parts are present before attempting to assemble!
- Tighten all bolt connections by hand first.
- When the BBQ is fully assembled, retighten the screws, nuts and bolts by using a wrench and screwdriver.

### TOOLS REQUIRED

- Philips screwdriver
- Pliers or adjustable spanner


### STEP 1

Install the Leg (part 14) onto the BBQ body (part 13) as per illustration below.

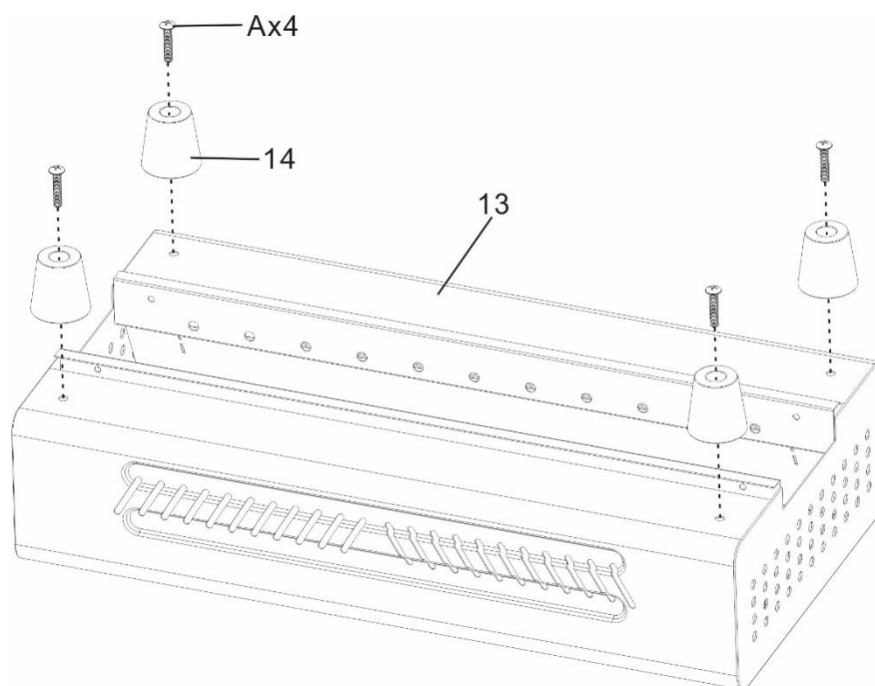


## STEP 2

 Install the Charcoal plate (part 9) onto the BBQ body (part 13) as per illustration below.

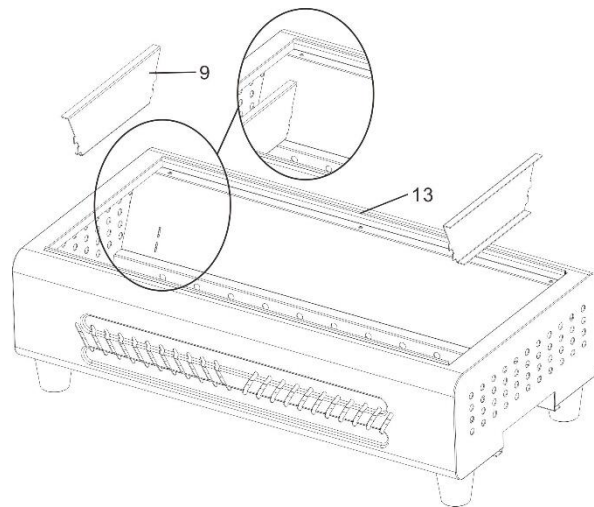


## STEP 3

 Place the Ash tray (part 12) into the assembled BBQ as per illustration below.

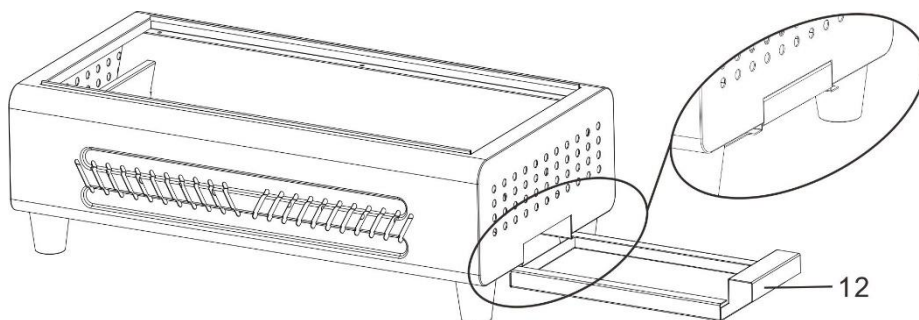

## STEP 4

 
Place the Cooking grill (part 7) and Charcoal grill (part 8) into the assembled BBQ as per illustration below.

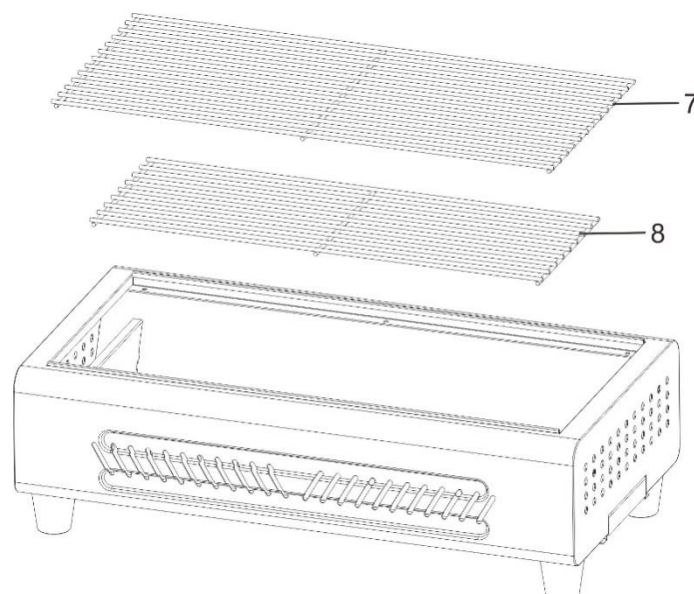




### STEP 5

 Install the Motor support (part 10) onto the assembled BBQ as per illustration below.

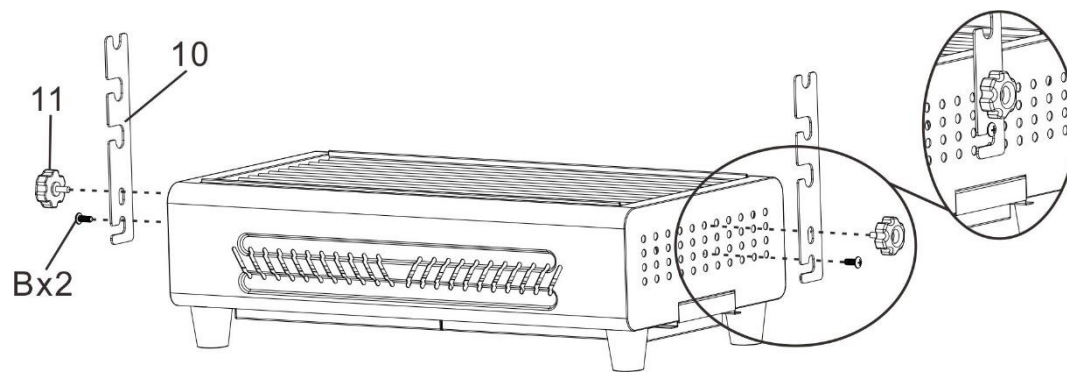

### STEP 6

 
Assemble the Rotisserie spike (part 2), Rotisserie arm (part 3), Weight (part 4), Handle (part 5) and Rotisserie pole (part 6) together as per illustration below.

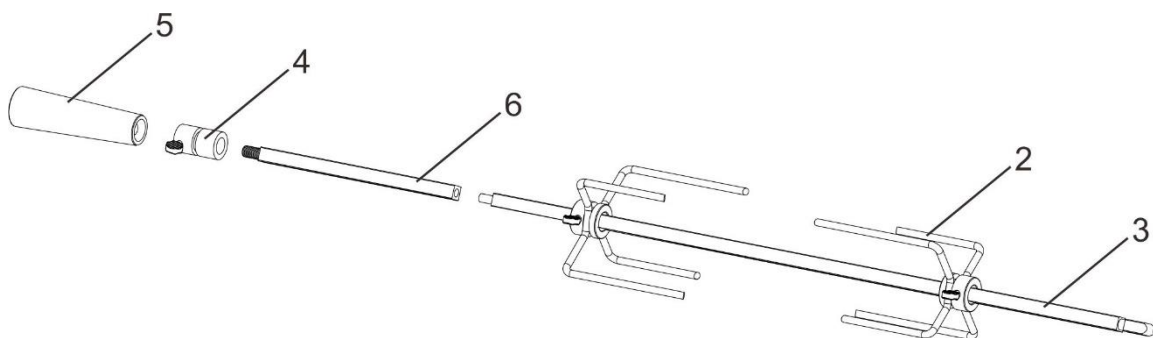

### STEP 7


Place the Motor (part 1) and the assembled rotisserie rod onto the assembled BBQ as per illustration below.

 PLEASE NOTE: MOTOR REQUIRES 2 X D SIZE BATTERY TO OPERATE (BATTERIES NOT INCLUDED)

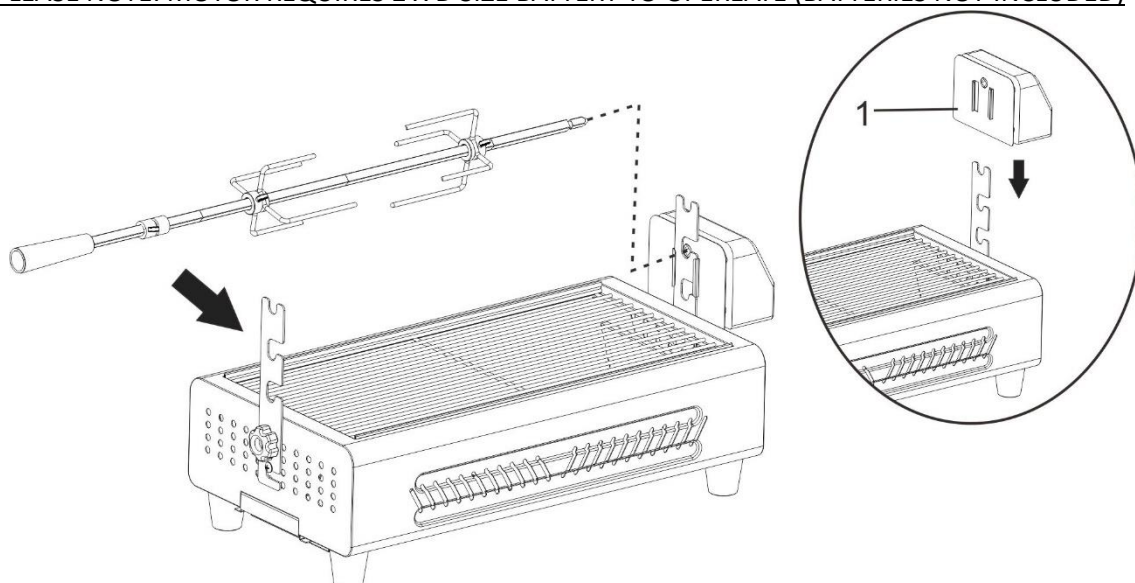



# Fully Assembled

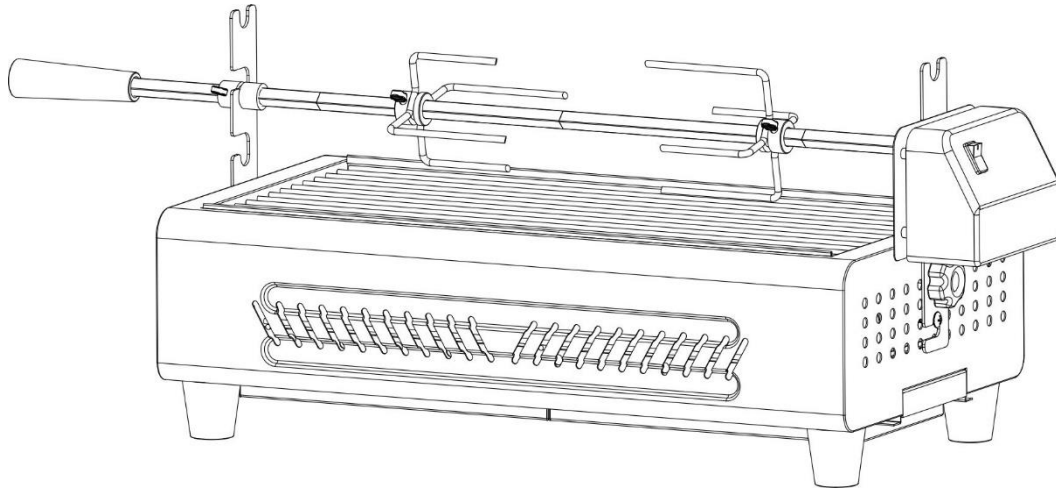 

Your BBQ is now ready for use.  
Please take care when lighting your BBQ.  
Always keep children away from this BBQ at all times



Thank you for purchasing one of our quality Jumbuck BBQs.

**YOUR JUMBUCK BBQ IS COVERED AGAINST DEFECTS FOR A PERIOD OF 12 MONTHS FOR PARTS AND LABOUR, REPAIR OR REPLACEMENT**

**THIS WARRANTY EXCLUDES SURFACE RUST AND DAMAGE CAUSE BY ABUSE OR NEGLECT**

#### **CONDITIONS OF THE WARRANTY**

- The appliance must be operated and maintained in accordance with the instructions supplied in the operating manual.
- Any repair does not extend the warranty period.
- Any parts other than original Jumbuck parts will void this warranty.

#### **FOR WARRANTY CLAIMS**

**The warranty for Australia is given by :**

Genesis International Corporation Pty Ltd

1/71 Truganina Road,

Malaga

Western Australia 6090

AUSTRALIA

(08) 9248 9822

[service@genesiscorp.com.au](mailto:service@genesiscorp.com.au)

Proof of purchase must be presented.

**The warranty for New Zealand is given by :**

Bunnings NZ Limited

PO Box 14436,

Panmure, Auckland, 1471

NEW ZEALAND

(09) 978 2200

[marketing@bunnings.co.nz](mailto:marketing@bunnings.co.nz)

Proof of purchase must be presented.

Any claims under this warranty must be made within 12 months of the date of purchase of the product.



## WARRANTY

### For Australian Customers

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, please contact Genesis International at [service@genesiscorp.com.au](mailto:service@genesiscorp.com.au) or return the product (with proof of purchase) to any Bunnings store. Visit [www.bunnings.com.au](http://www.bunnings.com.au) for store locations.

Genesis International bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof to us for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

### For New Zealand Customer

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store. Visit [www.bunnings.co.nz](http://www.bunnings.co.nz) for store locations.

Bunnings NZ Ltd bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to our store for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.



## WARRANTY

### WHAT IS NOT COVERED IN THE WARRANTY

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service
- Liability will only be accepted for loss or damage during transit if at the time the product was being transported by Bunnings or a Bunnings approved contractor
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliance
- Scratches, dents, corrosion or discoloration caused by heat, abrasive chemicals cleaners
- Corrosions or damage caused by exposure to elements such as insects, weather, hail or grease and fat fires
- Rusting of the grill
- Cleaning and wear and tear, service calls of this nature are chargeable
- Commercial use of this product
- Unauthorized repairs or modification during warranty period

### RECORD THE FOLLOWING INFORMATION

Attached the copy of the purchase receipt here

Date of Purchase.....

Purchased From.....

Location.....

Model Name and Number.....

Serial Number.....

Receipt Number.....

Note: The serial number is located either on the outside of the packing carton or inside on the appliance

### FOR TECHNICAL ASSISTANCE

**For Australia customers** if you experience any technical issues with your JUMBUCK BBQ, in the first instance review the instructions manual or contact the warranty service agent

**For New Zealand customers** if you experience any technical issues with your JUMBUCK BBQ, in the first instance review the instructions manual or contact your local Bunnings warehouse

### FOR SPARE PARTS

Call your local Bunnings warehouse and ask them to order a part for you. You should provide the following information:

Model of BBQ

.....

Year of Purchase

.....

Name of warranty service company

.....

Part that requires replacement (refer to the parts list in the instructions manual)

.....