




Model: BK-701-YTC
Item Code: 04422
Rating: 240V A/C, 50Hz, 260W

Before using this product, please read the following instructions carefully and keep for future reference.

1. WARNING



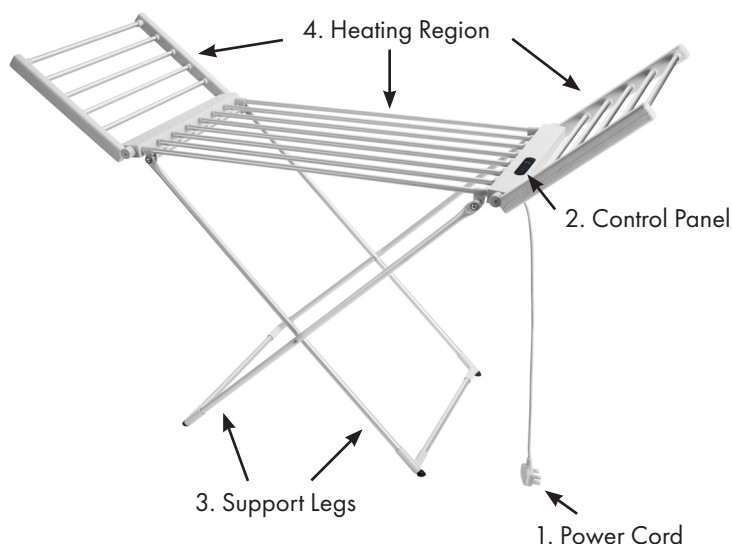

- 1.1 This heated airer should be installed and placed away from the shower, bath, or any area which could cause water damage.
- 1.2 Unplug appliance when not in use
- 1.3 Do not use if airer, power cord or plug is damaged. Please contact Visy Retail Services for any product issues.
- 1.4 Children should not play with the heated airer; this is not a toy.
- 1.5 Cleaning and user maintenance should not be carried out by children.
- 1.6 This heated airer is intended only for drying fabrics washed in water.
- 1.7 Only use to dry washable fabrics. Not suitable for silk.
- 1.8 Do not use to dry fabrics which become marked or damaged by direct heat contact.
- 1.9 To conserve energy and use the heated airer safely, wring out clothes prior to placing them on the hanging rails.
- 1.10 The heated airer should only be connected to a power source compatible with the voltage stated.
- 1.11 Do not use the heated airer if the heating pipes or any other part are damaged.
- 1.12 This heated airer comes equipped with a 3-pin plug.
- 1.13 Not intended for use with an extension cord. Plug the power cord directly into an appropriate wall power outlet.
- 1.14 Always fold the wings out before switching the airer on.
- 1.15 Not suitable for drying quilts, jackets and larger garments.

2. COMPONENTS & FUNCTIONS



Item	Part Description	Function
1	Power Cord	3-pin plug to connect directly to your wall power outlet
2	Control Panel	Turn the heated airer on and off, adjust temperature and set timer
3	Support Legs	Folding base for the heated airer
4	Heating Region	Hanging rails used to dry clothes

3. INSTRUCTIONS

- 3.1 Open the support legs, unfold the heating region and position on a stable floor.
- 3.2 Connect the power cord directly to the wall power outlet and turn on the power button  on the control panel.
- 3.3 Press the temperature control button  to adjust the temperature between 45° and 70°C. The heated airer will reach the desired temperature after being on for approximately 5 minutes.
- 3.4 Press the power button  to set the timer between 1 and 24 hours.
- 3.5 Hang clothes on the hanging rails.
- 3.6 Once finished, turn the appliance off by holding the power button  then unplug from wall power outlet. Allow the heated airer to cool before folding and storing away.

4. CLEANING AND MAINTENANCE

- 4.1 Before cleaning, the heated airer must be disconnected from the power source and the heating region allowed to cool down completely.
- 4.2 Do not immerse any part of the heated airer in water.
- 4.3 Wipe the rack down with a damp cloth then use a soft cloth to dry. Do not use metal balls or scourers to clean the hanging rails.
- 4.4 Ensure the power cord and plug are completely dry before using again.