

BLADE ASSEMBLY

Freecall (Aus) 1800 069 486
(NZ) 0508 069 486

www.ozito.com.au



ELMBA-305

ALWAYS HANDLE THE BLADE WITH CARE - SHARP EDGES CAN CAUSE SERIOUS INJURY, PLEASE USE GLOVES.



WARNING! BEFORE CARRYING OUT ANY MAINTENANCE PROCEEDURE, MAKE SHURE THAT IT IS DISCONNECT FROM THE POWER SUPPLY TO PREVENT ACCIDENTAL STARTING.

REMOVING AND FITTING THE BLADE:

Only replace the blade with a genuine Ozito replacement blade, as this will ensure top performance and safety under all conditions.

1. To remove the blade bolt, hold the blade firmly and with a 13mm socket loosen the blade bolt by turning it anti-clockwise.



Note: A piece of timber will assist in holding the blade while removing or tightening the blade bolt.

2. Remove the blade and bolt.

3. Fit the new blade with the writing and direction arrows facing out, ensuring the blade is located onto the two fan location lugs correctly.

Note: The shape and position of the lugs prevent the blade from fitting in the wrong direction.

4. Fit the bolt with spring washer and flat washer together with a universal wrench. The tightening torque should be approx. 25Nm.

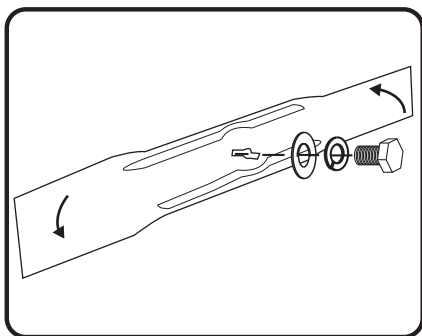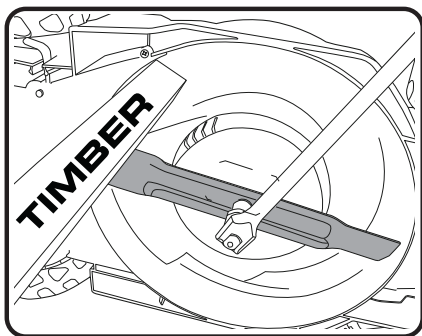

Replace the metal blade after 50 hours mowing or 2 years whichever is sooner. If the blade is cracked or damaged replace it with a new one.