

INSTALLATION INSTRUCTIONS

Flexible Braided Extension Water Connector

Thank you for choosing EnduraSeal.

IMPORTANT!

- Plumbing products must be installed by a licensed plumber in accordance with AS/NZS 3500 and local or state regulations.
- **BEFORE** installing flexible hose, read these instructions carefully to ensure proper assemble, installation and usage.
- **BEFORE** using flexible hose, ensure that all components are installed securely.
- **DO NOT** attempt to use flexible hose if any components are damaged or missing. **DO NOT** use alternative substitute parts. Substitute parts will not be covered by product warranty.

INSTALLATION:

1. Turn off water supply and remove old hose.
2. Clean all connecting threads.
3. Install connector. See notes below.
4. Turn water on and inspect for leaks.

NOTES:

- a. Suitable for hot and cold water.
- b. Do not over tighten nuts. Loose end nut should be tightened between 5-8 N.M.
- c. 1/2" ML x 1/2" FL BSP Class 2 hose.
- d. Hose has a 30mm Minimum bend radius. Do not stretch, twist, kink or expose to naked flames or corrosive agents.
- e. *Operating specifications:
 - Working temperature: min 2°C - max 50°C
 - Pressure limits: min 150kPa - max 500kPa as per state and local regulations.
- f. As per AS3499, hose has undergone burst pressure testing to 5000kPa.
- g. Flexible hose must be used in an accessible location and not buried or submerged or not in direct uv/sunlight application. Not suitable for use inside walls, ceiling, underground etc.

*Warranty shall be void for the following reasons:

- Product not installed by a licensed plumber.
- Product exposed to water pressure and/or temperatures exceeding the stated limitations above.
Note: AS/NZS 3500.1, specifies a maximum water supply pressure of 500 kPa at any outlet within a building for new installations. Please be aware that the 500 kPa maximum water pressure does not apply to fire service outlets.
- Isolation taps are not installed in accordance to relevant local, national and state regulations.

For full warranty terms and conditions, please visit www.kineticsourcing.com.au

Australia

Kinetic Sourcing Group Pty Ltd
ABN 76 139 962 075
15/3 Box Road,
Caringbah, NSW 2229, Australia
Ph: (02) 9524 2570
Email: sales@kineticsourcing.com.au
Website: www.kineticsourcing.com.au

New Zealand

ACM (NZ) Pty Limited
NZBN 4474052
47 Stonedon Drive, East Tamaki
Auckland 2013, New Zealand
Ph: +64 9320 4515
Email: info@acmhardware.com
Website: www.acmhardware.com
Aftermarket Sales Ph: 0800 744 794