



# **AIR NEEDLE SCALER**

- **19 X 180MM NEEDLES**
- **4000 BLOWS PER MINUTE**
- **1/4 NITTO STYLE MALE CONNECTOR**



## **INSTRUCTION MANUAL**




**WARNING:** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electrical shock, fire and/or serious injury. Save all warnings and instructions for future reference.

## SPECIFICATIONS - MODEL NO. FBANS-019

<b>Blows per minute:</b>	4000
<b>Stroke Length:</b>	67mm
<b>Needle Size:</b>	19 x 180mm x Ø3mm
<b>Air Inlet:</b>	1/4 Nitto Style Male Connector
<b>Operating Pressure:</b>	6.2 bar (90 psi)
<b>Maximum Pressure:</b>	10.3 bar (150 psi)
<b>Weight:</b>	2.44kg
<b>Air Consumption:</b>	140 litres/min at 90 psi


## KNOW YOUR PRODUCT

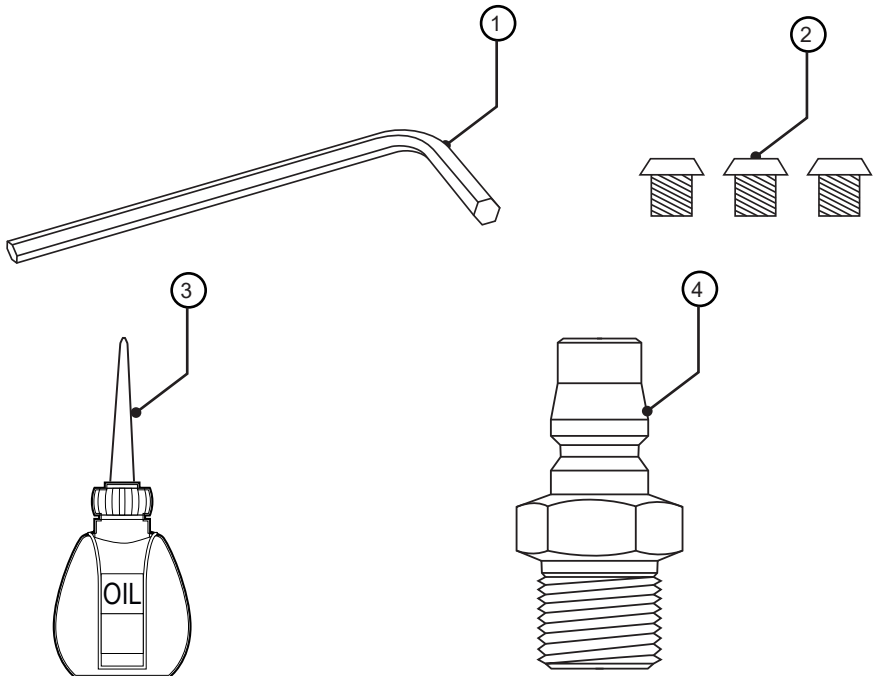

1. 4mm Hex Key
2. M8 6mm Grub Screws (3pcs)

3. Oil Bottle
4. 1/4 Nitto Style Male Connector

## KNOW YOUR PRODUCT

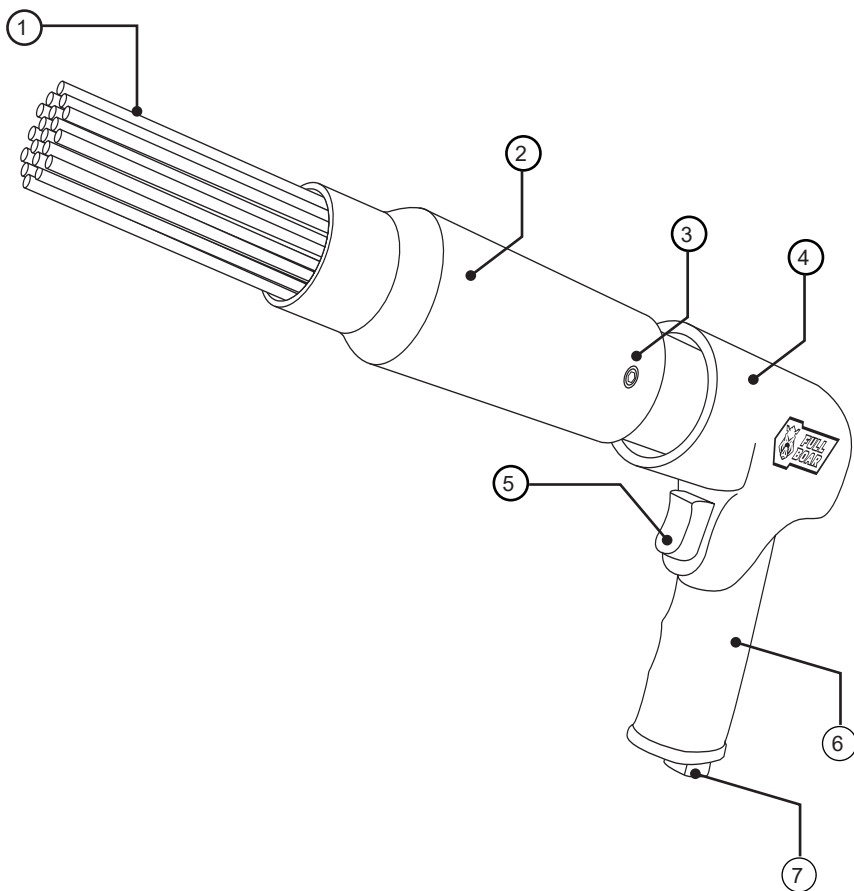

1. 19 x 180 mm x Ø3 mm Needles

2. Sleeve

3. Grub Screw

4. Housing

5. Trigger

6. Grip

7. Air Inlet

## TABLE OF CONTENTS

SPECIFICATIONS.....	Page 02
KNOW YOUR PRODUCT.....	Page 02
INTRODUCTION.....	Page 05
SAFETY INSTRUCTIONS.....	Page 06
SET UP AND PREPARATION.....	Page 10
OPERATION.....	Page 12
MAINTENANCE.....	Page 13
TROUBLE SHOOTING .....	Page 14
DESCRIPTION OF SYMBOLS.....	Page 15
CONTENTS.....	Page 16
WARRANTY.....	Page 17

## INTRODUCTION

This powerful Full Boar Air Needle Scaler is fitted with 19 - 180mm x Ø3mm needles operating at 4000 blows per minute. This dependable air tool is perfect for surface preparation including the removal of paint, rust, dirt and weld slag. Built with a premium lightweight housing and variable speed trigger for balance and control.

Read and understand the Owner's Manual before operating the Air Needle Scaler Failure to do so could result in personal injury or equipment damage.

## LUBRICATION

An automatic in-line filter, a pressure regulator and automatic oiler is recommended as it increases the products service life. The in-line oiler should be checked regularly and filled with air tool oil.

It is most important that the product be properly lubricated by keeping the air line lubricator filled and correctly adjusted. Without proper lubrication the product will not work properly and parts will wear prematurely.

Use correct lubricant in the air line lubricator. The lubricator should be of low air flow or changing air flow type, and should be kept filled to the correct level. Use only recommended lubricants, specially made for pneumatic applications. Substitutes may harm the rubber compounds in the product's O-rings and other rubber parts.

# GENERAL AIR TOOL SAFETY WARNINGS



**WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

## 1. Work area safety

- a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.
- d. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- e. **Check the maximum pressure rating of any tools or accessories that you intend using with the compressor.** The output pressure of the air from the compressor must be regulated so that it never exceeds the rated pressure of the tool or accessory.
- f. **Always wear high safety goggles or glasses when using the air tools.** Never point the air tool towards any part of your body or towards another person.
- g. **Drain the moisture from the tank daily.** It will help prevent corrosion.
- h. Use safety equipment including safety goggles and ear protection, the tool operator and all persons in the working area must wear safety goggles and ear protection.
- i. Air tools should not be used in a potentially explosive environment.
- j. **The tool must be used only for its prescribed purpose.** Any use other than those mentioned in this Manual will be considered a case of misuse. The user and not the manufacturer shall be liable for any damage or injury resulting from such cases of misuse.



**WARNING!** In the event that an air line is cut or broken, the air supply must be turned off at the compressor. A broken air line which is not supported is extremely dangerous and can whip around very quickly, both with the capability of striking people, and blowing foreign particles into the air.

Do not attempt to catch the air line but immediately keep bystanders well clear and turn off the air supply to the hose, turn off the compressor at the On / Off button, and then remove the hose from the compressor.

## GENERAL AIR TOOL SAFETY WARNINGS (cont.)

- Please read and observe these operating instructions before using the tool. Basic safety measures should always be strictly followed to protect against damage to the equipment and personal injury to the user or other people working in the vicinity of operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given the supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children should be supervised to ensure that they do not play with the appliance.**



**WARNING!** Do not over reach. Keep proper footing and balance at all times.



**WARNING!** Do not attempt to modify this tool or install accessories not recommended for use with this tool. Any such in a hazardous condition leading to possible serious personal injury.



**WARNING!** Do not climb rigging or scaffolding while carrying a tool that is connected to an air hose. Doing so could result in serious personal injury..

## AIR NEEDLE SCALER SAFETY WARNINGS



**WARNING!** Disconnect the tool from the air supply before inspecting the air tool. Failure to do so could result in serious personal injury.

- **Read and understand instruction manual before using.**
- **Always wear impact-resistant eye protection during the operation of the air tool.**
- **Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged.** Use of a product that is not properly and completely assembled could result in serious personal injury.
- Do not carry tool with finger on the trigger.
- **Disconnect the tool from the air supply before performing maintenance,** leaving work area, moving tool to another location, making any adjustments, during non-operation or handing tool to another person. Failure to do so could result in serious personal injury.
- **Clean and inspect the tool daily.** Carefully check for proper operation of trigger and safety mechanism.
- **DO NOT use the tool unless the trigger is functional,** or if the tool is leaking air or needs any other repair.
- **Be aware that the failure of the work piece,** or accessories, or even of the air tool itself, can generate high-velocity projectiles.
- Air under pressure can cause severe injury.
- **Whipping hoses can cause severe injury.** Always check for damaged or loose hoses and fittings.
- DO NOT exceed the maximum pressure stated on the tool.
- Never carry an air tool by the hose.
- Quick connector couplings shall be used for connection to the compressed air system and non-sealable air inlet connector must be fitted at the tool in such a way that no compressed air remains in the tool after disconnection.
- Air tools shall only be connected to an air supply where the maximum allowable pressure of the tool cannot be exceeded by more than 10%; in the case of higher pressure, a pressure reducing valve which includes a downstream safety valve shall be built into the compressed air supply.
- Check prior to each operation that the safety and triggering mechanism is functioning properly and that all nuts and bolts are tight.
- Do not carry out any alterations to the air tool.
- **Avoid weakening or damaging the tool, for example by:**
  - punching or engraving;
  - modification not authorized by the manufacturer;
  - guiding against templates made of hard material such as steel;
  - dropping or pushing across the floor;
  - applying excessive force of any kind..



## AIR NEEDLE SCALER SAFETY WARNINGS

- **Do not connect tool** to pressure that potentially exceeds 150 psi (10.3 bar).
- **Only use clean**, dry and regulated compressed air at 6.2 bar (90psi)
- Only technically skilled operators should use the air tool.
- Do not overreach. Only use in a safe working place. Keep proper footing and balance at all times.
- Keep bystanders away (when working in an area where there is a likelihood of through traffic of people). Clearly mark off your operating area.
- Only wear gloves that provide adequate feel and safe control of triggers and any adjusting devices.
- The tool must be disconnected from the air supply and rested on a flat surface when not in use.
- Always wear impact-resistant eye protection with side shields during operation of the tool.
- Appropriate hearing protection shall be worn.
- The risks to others shall be assessed by the operator.
- Ensure the tool is correctly lubricated during use. Only use the correct lubricant as specified in this manual.
- Slips, trips and falls are major causes of workplace injury. Be aware of slippery surfaces caused by use of the tool and also of trip hazards caused by the airline hose.
- Proceed with additional care in unfamiliar surroundings. Hidden hazards may exist, such as electricity or other utility lines.
- This tool is not intended for use in potentially explosive atmospheres and is not insulated from coming into contact with electric power.
- Never use oxygen or combustible gases for operating pneumatic tools as this could create a fire and explosion hazard.
- Do not discard the manual and safety instructions.
- Do not use the needle scaler for anything other than needle scaling. Do not attempt to fit any other accessory on the tool other than needle scalers. Ignoring these warnings can lead to serious injuries.
- For overhead work, wear a safety helmet.
- Ensure the workpiece is securely fixed.
- The use of the tool can expose the operator's hands to hazards including impacts, cuts, abrasions and heat. Wear suitable gloves to protect hands.
- Hold the tool correctly; be ready to counteract normal or sudden movements and have both hands available.
- Release the trigger in the case of an interruption to the air supply
- Check the material of the work piece and ensure adequate respiratory protection such as a mask is worn otherwise serious illness can occur.
- Check the working environment and the material to ensure the dust created

## KNOW YOUR PRODUCT

from the cutting operation does not lead to explosion or fires. Do not use the air saw if there is risk due to dust and employ adequate dust extraction before commencing work.

- The needle operation can cause vibrations which could cause discomfort to the user. If any numbness, tingling, pain or whitening of the skin occurs in the hands, stop using the air saw immediately and seek medical help.

## SET UP & PREPARATION



**WARNING!** Ensure the tool is in the off position before connecting to the air supply.

### Connecting air supply

1. Wrap Teflon tape (not supplied) around the Nitto Style Fitting approximately 4 to 5 times to ensure a leak free seal.
2. Screw in Nitto Style Fitting to the air inlet of the Air Needle Scaler.
3. Fasten the Nitto Style Fitting using a 14mm spanner (not supplied).


Under normal use conditions, the tool should be lubricated with air tool oil before connecting the tool to an air supply. Add air tool lubricate into the air tool once daily with minimal use, or twice a day with heavy use. Only a few drops of oil at a time is necessary. Too much oil will only collect inside the tool and will be noticeable in the exhaust cycle.

Before connecting the tool, check the air compressor gauge to be sure it is functioning within the proper range 6.2 bar (90 psi).

**Note:** The tool and air hose must have a quick-connect hose coupling that allows all pressure to be removed from the tool when the coupling is disconnected.

1. Pull back the sleeve on female quick connector hose coupling, insert male end and release sleeve on quick connector.

**Note:** For best performance use 3/8" I/D supply air hose.

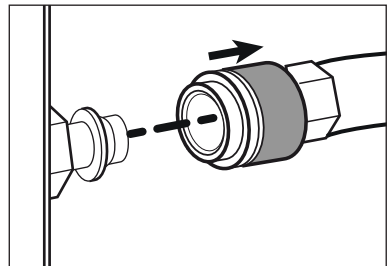

**WARNING!** Ensure that the compressed air does not exceed 150 psi (10.3 bar) while operating the tool. Too high an air pressure and unclean air will shorten the product's life due to excessive wear, and may be dangerous causing damage and/or personal injury.



**WARNING!** Always use a coupling that discharges all the compressed air in the tool at the time the fitting or hose coupling is disconnected. Using a coupling that does not discharge the compressed air could cause unintended operation and serious personal injury..

# OPERATION

## General Operating Instructions

1. Ensure your work area is clean and well lit. Route the air hose along a safe route to reach the work area with creating a tripping hazard.
2. Grip the Air Needle Scaler firmly, for the best control grip the tool with both hands.
3. Ensure the Needles are not touching the working surface before engaging the trigger.
4. Place the vibrating needles on the surface and keeping a light pressure move the tool around the work piece.

Do not apply heavy pressure to the Air Needle Scaler to avoid damage to the work piece and tool.

5. If the tool requires more force to achieve the desired result, ensure the airflow is unobstructed and increase the output pressure of the regulator.

Ensure you do not exceed the maximum pressure of the tool 10.3 bar (150 psi).



**WARNING!** Do not carry tool with your finger on the trigger.



**WARNING!** Do not clamp or hold the trigger with anything other than your hand.

# MAINTENANCE




**WARNING!** Disconnect the air needle scaler from the air supply before carrying out maintenance and/or changing the needles  
Do not touch the needles immediately after operation as they may get hot during use. Wait for the needle to completely cool before handling.


## Changing the Needles

Your Air Needle Scaler comes with 19 x 180mm x 3mm needles installed. To replace the needles follow these steps.


1. Unscrew the needle assembly from the tool body and remove grub screws from the sleeve.

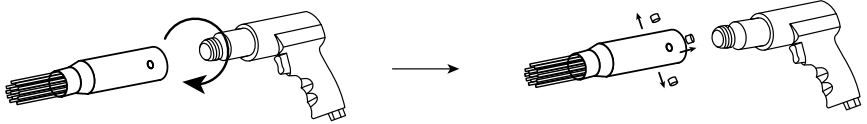


2. Remove the retaining circlip and disassemble the needle assembly.

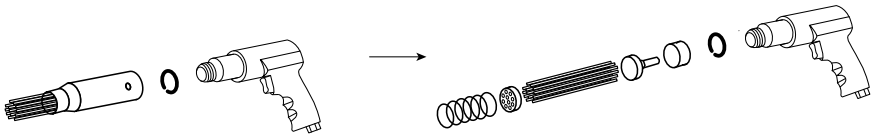

3. Change the 19 x 180 mm x 3 mm needles and reassemble the needles into the sleeve.

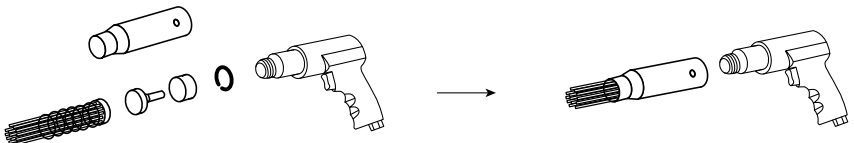

4. Complete the final re-assembly of the Air Needle Scaler screwing the sleeve to the tool body and securing the grub screws.

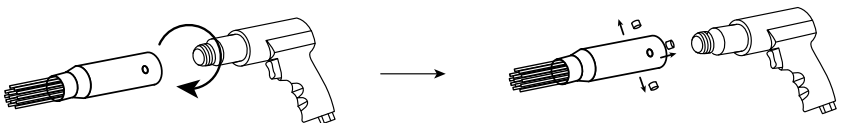

## KNOW YOUR PRODUCT

### General Cleaning

- If the enclosure of the tool requires cleaning, do not use solvents but a moist soft cloth only. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.
- Store the tool in a dry and safe place out of reach of children.
- Oil the air tool after each use with air tool oil.

*Note: TB Imports will not be responsible for any damage or injuries caused by the repair of the tool by an unauthorised person or by mishandling of the tool.*


 






### Spare Parts

Limited spare parts are available subject to availability. Please contact your local Bunnings Special Orders Desk to order the required spare parts.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
Air leak near the top of the tool or in the trigger area.	Loose screws	Tighten screws
	Worn or damaged o-rings or seals	Check and replace O-rings
Air leak near the base of the tool	Loose screws	Tighten screws
	Worn or damages o-rings or seals	Check and replace O-rings
Tool does nothing or operates sluggishly	Insufficient air supply	Increase air flow to tool (Do not exceed 150psi)
	Insufficient lubrication	Lubricate tool
	Worn or damaged o-rings	Check and replace O-rings
Air Needle Scaler does not remove enough material	Insufficient air supply	Increase air flow to tool (Do not exceed 150psi)

## DESCRIPTION OF SYMBOLS

	Revolutions or reciprocations per minute		No load speed
	Wear eye, ear & breathing protection		Wear hearing protection
	Wear breathing protection		Wear eye protection
	Read Instruction Manual		Warning

## CONTENTS

1 x Air Needle Scaler

3 x M8 Grub Screws

1 x M4 Hex Key

1 x Instruction Manual

1 x 1/4 Nitto Style Male Connector

1 x Oil Bottle

## CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

**Note:** The manufacturer's liability shall be deemed void if the tool is modified in any way and the manufacturer shall therefore accept no liability for any damages arising as a result of modifications.

Distributed by:  
TB Imports

### AUSTRALIA (Head Office)

25 Fox Drive, Dandenong South, Victoria, Australia, 3175

Telephone: 1800 951 371 (AUS), 0800 647 840 (NZ)

# WARRANTY

**YOUR WARRANTY FORM SHOULD BE RETAINED BY YOU AT ALL TIMES. IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE (see [www.bunnings.com.au](http://www.bunnings.com.au) or [www.bunnings.co.nz](http://www.bunnings.co.nz) for store locations) WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:**

**Australia 1800 951 371  
New Zealand 0800 647 840**

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

## 1 YEAR WARRANTY

Your product is guaranteed for a period of **12 months from the original date of purchase**. If a product is defective it will be repaired in accordance with the terms of this warranty. Warranty excludes consumable parts, for example: wheels, bearings.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you under law. The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

Our goods come with guarantees that cannot be excluded under Australian Consumer law & Consumer Guarantees Act 1993 (NZ). You are entitled to a replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired and replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## WARRANTY EXCLUSIONS

**The following actions will result in the warranty being void.**

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.
- The warranty excludes damage resulting from product misuse or product neglect.

**This warranty is given by TB Imports.**

**ABN: 17 050 731 756**

**Ph. 1800 951 371 (AUS)**

**0800 647 840 (NZ)**

Australia/New Zealand (Head Office)  
25 Fox Drive, Dandenong South, Victoria, Australia 3175