



MIMOSA®

Installation Guide


Bentota

3 Seater

Lounge



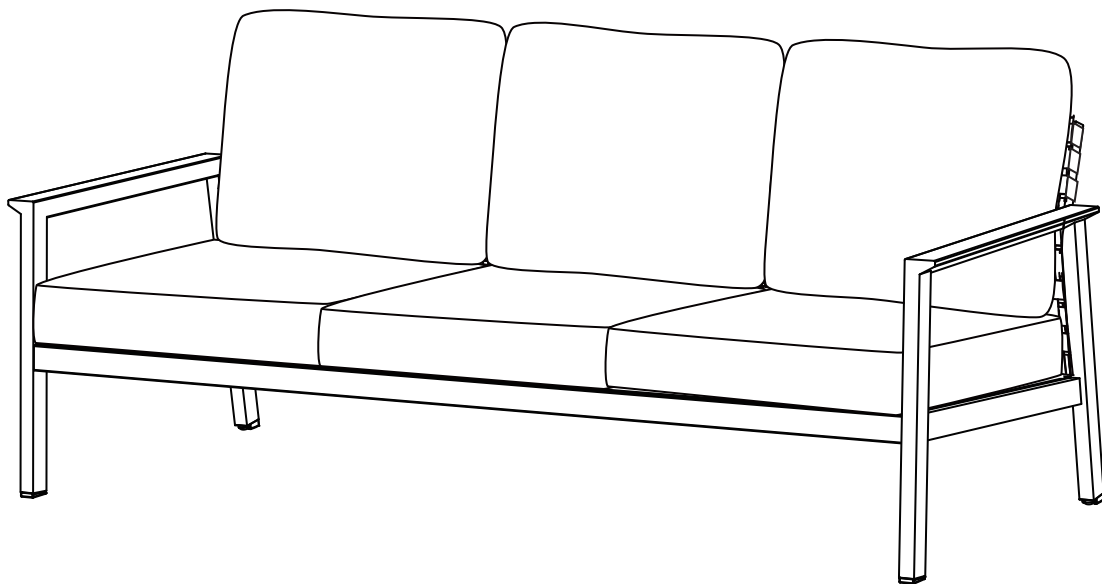



Timber Look Aluminium Frame - Oak
Strap Back Rest - Oatmeal
Sling Seat with Cushion - Oatmeal
Lounge Max. Weight Capacity - 120Kgs





 
Assembly Instructions



Please carefully read the below warnings and instructions. Save the instructions for future reference.


- 1. Please carefully read all instructions before assembly and use**
- 2. Please separate and identify all parts, ensuring that you have all parts listed**
- 3. To avoid damaging your lounge, it is recommended that you assemble it on a clean, protected surface**
- 4. Washers must be used when indicated during the assembly process**
- 5. Loosely tighten the nuts and then securely tighten when all are in position. Be careful not to over tighten the nuts during assembly.**

PARTS LIST		
CODE	PARTS	QTY.
1	 Left Arm	1PC
2	 Right Arm	1PC
3	 Back Rest	1PC
4	 Seat	1PC
5	 Seat Cushion	3PC
6	 Back Cushion	3PC


HARDWARE LIST		
CODE	PARTS	QTY.
A	 M6x20mm	2PC
B	 M6x35mm	10PC
C	 Washer	12PC
D	 Allen Key	1PC
E	 Cap	12PC

Assembly Instructions


- 1 Secure left and right arm (1&2) to seat (4), using bolt (B) and washer (C). Tighten the bolts to 80%, using Allen key (D). Once all bolts are in position, fully tighten and then cover with cap (E).

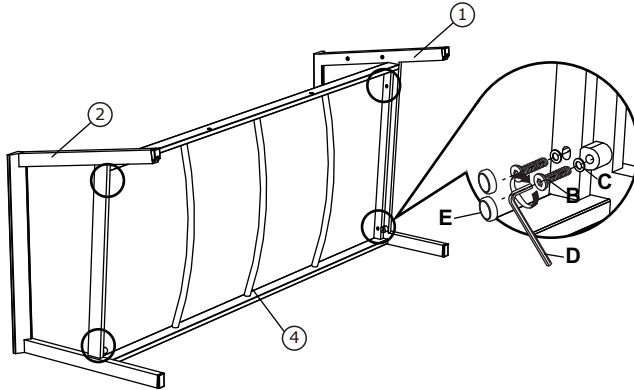


- 2 Secure the back rest (3) to the left and right arms (1 & 2), using bolt (B) and washer (C). Tighten securely with Allen key (D) and cover with cap (E).

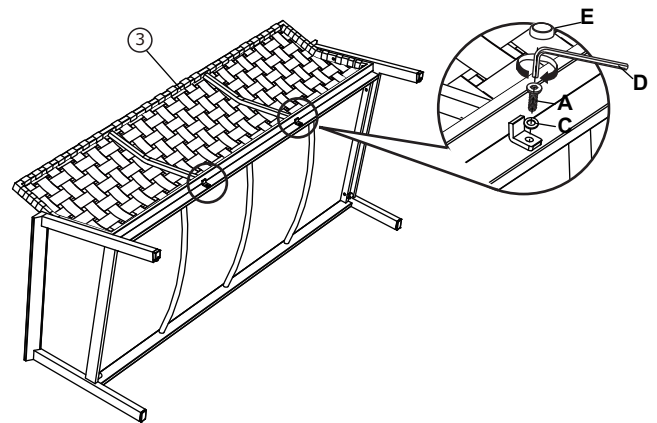

- 3 Secure back rest (3) to seat (4), using bolt (A) and washer (C). Tighten securely with Allen key (D) and cover with cap (E).

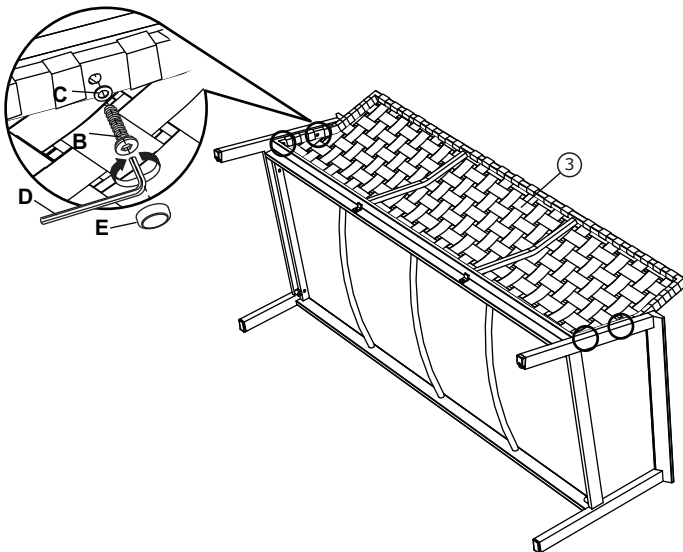

- 4 Place all seat and back cushions on your lounge and locate in desired position. If the surface is uneven, you can level the lounge with the adjustable feet. Your lounge is now ready for use.

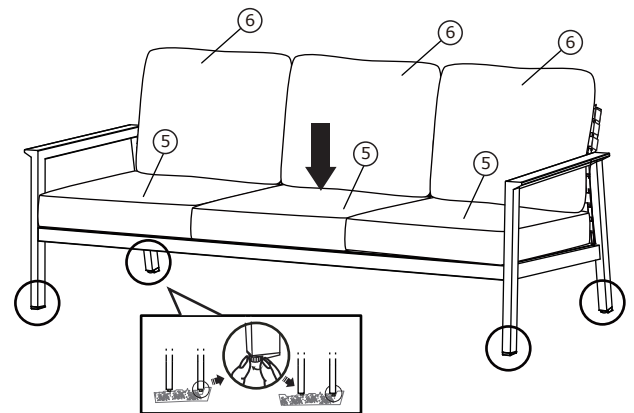

CARE AND CLEANING:

1. TO CLEAN, WIPE WITH DAMP CLOTH. DO NOT USE BLEACH, ACID SOLVENTS OR ABRASIVE CLEANERS ON FRAME PARTS.
2. DURING VARYING WEATHER CONDITIONS AND WINTER PERIOD, WE STRONGLY RECOMMEND THAT IT CAN BE STORED IN A DRY AREA WITH A SUITABLE COVER BEFORE STORAGE, PLEASE ENSURE IT IS CLEAN AND DRY BEFORE STORAGE.
3. IN THE EVENT OF BARE METAL SHOWING DUE TO SCRATCH, IT IS PREFERRED TO TREAT WITH A RUST REPELLING VARNISH OR SIMILAR.
4. PERIODICALLY CHECK AND ENSURE THAT ALL THE SCREWS ARE COMPLETELY TIGHTENED.
5. A PROTECTIVE WEATHER COVER IS ENCOURAGED TO PROLONG THE LIFESPAN OF YOUR LOUNGE.