



Rechargeable Neck Fan USER MANUAL

Model Number: RNF-3



AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

Important Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Charging and USB Cable Handling

- Voltage:** The appliance must only be supplied at a safe extra low voltage corresponding to the marking on the appliance.
- Charging:** This product contains a built-in lithium ion battery pack, which must be charged using the supplied USB cable. Unplug the USB cable when charging is completed. If strong heat occurs during charging, stop charging or using the product and contact our after sales support centre. If the fan cannot be charged, replace the charging connector or cable and try again. If this does not work contact our after sales support centre.
- Water and moisture:** Do not immerse the USB cable or the fan in water or other liquid, or expose the connections to water. If water or other liquid enters the product, switch off the power and dry the product properly.
- Protect the USB cable:**
 - Do not charge the fan with the cable coiled up; always fully unwind.
 - Do not twist the cable or let it touch heated surfaces or sharp edges.
 - Do not allow the cable to hang over the edge of a table, desk or bench.
 - Never pull or carry the fan by the USB cable.
- Damage:** Check the USB cable regularly for visible damage. If the cable is damaged, do not use it to charge the fan.
- WARNING!** Do not pick up or operate the fan if the USB cable or port, or the fan housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support centre.
- Guard removal:** Do not attempt to remove a front or rear guard (grille) for cleaning.

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

Important Safety Instructions (Cont.)

- Disconnection:** Disconnect the fan from the computer when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the USB plug and remove it from the port, do not pull the cable when disconnecting.

Usage Conditions and Restrictions

- Intended use:** Only use this fan as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Assembly:** The fan comes fully assembled, do not take it apart. Do not modify it for any other purpose. Do not disassemble for cleaning.
- Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children:** Keep this fan out of reach of children. This fan is not a toy. Supervise children to ensure they do not play with the fan.
- WARNING!** Do not leave the fan running unattended. Always switch it off when not in use, if left unattended, and before cleaning and storing.
- Do not cover the fan.**
- WARNING! DO NOT use the fan in the following areas:**
 - Near an open flame, a hot burner, oven or other source of high heat
 - In temperatures above 60 °C
 - In areas with high levels of humidity, such as in a bathroom or laundry, or near a pool or tub where it could fall into water
- CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or other objects when the fan is running. Keep hair and loose clothing well away from the fan when in use.
- Handle with care:** Do not drop or strike the fan. Do not place heavy items on top of the fan. Repeated tapping may result in internal damage.
- Free airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles this may cause damage to the fan. Do not insert foreign objects into any opening.
- Before storage:** If the fan will not be used for a long time, please charge the battery completely and then store the product in a dry place.

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761


Important Safety Instructions (Cont.)

- Service/repair:** This product has no user-serviceable parts contained inside. Do not attempt to repair, disassemble, or modify it.
- Caution:** This appliance contains batteries that are only replaceable by skilled persons.
- Disposal:** This product contains a built-in lithium ion battery pack. Do not dispose of the product in a fire as it may explode.
- Misuse:** We accept no responsibility for any damages or personal injuries caused by misuse of the product and/or failure to follow these instructions.
- Caution:** Do not use any form of quick-charge connector, this can result in product failure or damage.

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

Product Overview

Scope of Delivery

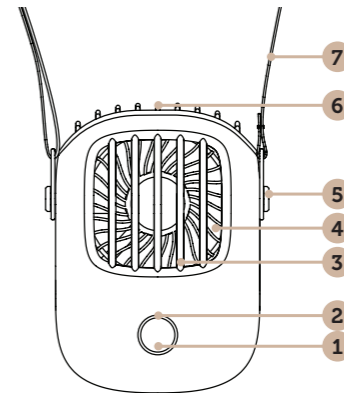


Parts List

- | | |
|---------------------------------------|-----------------|
| 1. Power/Wind Speed Adjustment Button | 4. Fan Blade |
| 2. Indicator | 5. Lanyard Nail |
| 3. Air Inlet | 6. Air Outlet |
| | 7. Lanyard |

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

Product Overview

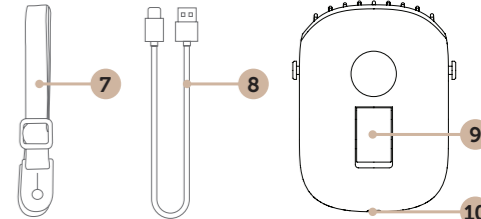

- 7. Lanyard
- 8. USB Cable
- 9. Support Stand
- 10. Cable Input

Documentation (Not Shown)

- Instruction Manual
- Warranty Certificate

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

Getting Started

Before First Use

Unpacking: This product has been packaged to protect it against transportation damage. Unpack it and keep the original packaging materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging materials are to be disposed of, please recycle them where possible.

Safe packaging disposal: Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.

Inspection: Unwind the USB cable to its full length and inspect it for damage. Do not use the product if the USB cable or the fan has been damaged or is not working properly.

Documentation: Make sure you have read and understood all instructions and warnings. Refer to the illustration to familiarise yourself with the product and identify all parts. Pay particular attention to the previous safety instructions.

Assembly: Your new fan has been fully assembled at the factory. No assembly is necessary.

Instructions

Charging the Fan

This product contains a lithium-ion battery, which must be charged before use.

- 1 Connect the supplied USB cable to the type C USB port at the base of the fan and the USB A connectorport to a powered USB port (on a computer, laptop, or other power source).
- 2 During charging, the indicator light will illuminate and pulsate. When the fan is fully charged the indicator light will stop pulsating and remain powered on.
- 3 When charging has finished, disconnect the USB cable.

CAUTION: If strong heat occurs during charging, immediately stop charging or using the fan and contact our after sales support centre for advice.

Note: If you use your computer for charging the fan, make sure to connect the computer to the power supply during charging to avoid battery power drain.

Using the Fan

This product is designed for portability, allowing you to take it with you wherever you go using the included lanyard.


Alternatively, you can utilize the support stand and place it on your desk at home or work for easy access and use. The support stand can rotate up to 90° (Fig 1).

Fan Speed Selection

To activate the fan, press the power button once. The indicator light will illuminate, indicating that the fan is powered on at low speed (fan speed one). Press the button again for medium speed (fan speed two), and once more for high speed (fan speed three). Press the power button once more to switch off the fan, the indicator light will also turn off.

Note: When the fan is low battery the indicator light will start quickly flashing.

Fig. 1

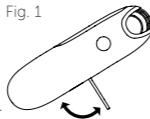

Other Useful Information

Cleaning and Maintenance

Alternatively, use a soft, dry cloth for dusting. If using a slightly damp cloth, ensure to follow with a dry cloth until the fan is completely dry. Do not attempt to open the housing for cleaning.

WARNING!

Before cleaning or maintenance switch off the fan and make sure it is disconnected from the USB charging cable. Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing. Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Storage



Store the clean and dry fan in a safe, dry location, protected from dust. We recommend using the original carton for storage.

Service/Repair

The fan requires no maintenance and contains no user-serviceable parts. Do not attempt to take it apart, repair or modify it. Do not operate the fan if it is damaged, or when it is working abnormally. In case of damage or malfunction, please contact our after sales support centre for advice.

Other Useful Information (Cont.)

Technical Specifications

Model Numer	RNF-3
Rating	5 V  1 A
Dimensions (approx.)	(W) 89 x (D) 32 x (H) 115 mm
Weight (approx.)	157 g (including accessories)
Battery Pack Model Number	18650-1200 mAh
Battery Pack Specification	Li-ion, 3.7 V  1200 mAh

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.



This marking indicates that the appliance is suitable for use in tropical climates under ambient temperatures of 18 °C to 43 °C.

Other Useful Information (Cont.)

Responsible Disposal



PLEASE RECYCLE

Packaging materials are recyclable. Please dispose of them responsibly for recycling.



PLEASE DISPOSE OF THOUGHTFULLY

At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord. Do not throw this appliance out with your household waste. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Or find recycling scheme services listed on Planet Ark's website (www.recyclingnearyou.com.au), or call Planet Ark on 1300 733 712.



Please read the manual

It will help you get the best out of your product.

Still have questions?

Call after sales support

1300 886 649

Or visit www.tempo.org

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6097, North Sydney 2059, NSW Australia

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: 1.1

Issue: June 2024

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761