

# AQUAPRO

CREATE A BIT OF BRILLIANCE IN YOUR OWN BACKYARD

## MULTI COLOUR MIST MAKER - INSTRUCTIONS -



MODEL  
04AM114

DATE  
MAY 2021 v1.0

HOTLINE 1300 278 283 PHONE +61 (8) 6260 1000  
EMAIL [SALES@AQUAPROONLINE.COM.AU](mailto:SALES@AQUAPROONLINE.COM.AU)

[WWW.AQUAPROONLINE.COM.AU](http://WWW.AQUAPROONLINE.COM.AU)



# AQUAPRO

**CONGRATULATIONS ON YOUR PURCHASE  
OF THIS PRODUCT BY AQUAPRO.**

---

## **TECHNICAL SPECIFICATIONS**

DESCRIPTION	MIST MAKER
VOLTAGE*	240-24V
POWER	24W
DISC SIZE	16MM
CABLE LENGTH	1.8M

---

## **FEATURES**

- The Aquapro Mist Maker vaporises the water, creating harmless water vapor.
  - The Mist Maker comes with LED lights to colour the mist, creating dramatic visual effects.
  - The AC adaptor converts the power supply to a safe 24V for peace of mind in your garden.
  - Comes with an automatic water level sensor to turn off the Mist Maker when water is too low.
- 

## **INSTALLATION**

- If required, have a qualified electrician install weatherproof power point near to the pond, (within 3 meters so the Mist Maker cable will reach the AC adaptor).
- Mount the AC adaptor in a dry and protected location, making sure that it can't be wet by either rain or reticulation.
- Please use clean tap water, do not use distilled or boiled water.
- We recommend using a Mister Floater to position the Mist Maker at the right level in the water. Place the Mist Maker in the Mister Floater or in desired location, ensuring the black water level sensor is approximately 2cm below the surface of the water. Place the AC adaptor for the Mist Maker in desired location, taking care not to wet the plug that attaches to the AC adaptor.
- Connect the Mist Maker lead to the AC adaptor and turn on the power to the AC adaptor.
- Take care to ensure the splashing of the small jets of water does not go outside the water container.

**VISIT OUR WEBSITE TO VIEW OUR RANGE OF OUTDOOR/UNDERWATER LIGHTING  
AND WATER GARDENING ACCESSORIES.**

# MULTI COLOUR MIST MAKER INSTRUCTIONS

## MAINTENANCE

- There is minimal maintenance required on the Mist Makers. The Mist Maker should be inspected on a regular basis to ensure the Mist Maker or cable is not damaged in any way.
- The Mist Maker should be cleaned regularly to ensure maximum efficiency. Do not use any abrasive household cleaners. Clean with a soft cloth and clean water.
- After approx 8-12 months, the ceramic discs may require replacement. The mist will diminish or stop.

## REPLACING THE CERAMIC DISC

- Unplug the Mist Maker from the power and remove from the water.

- Using the tool/key (supplied with your replacement ceramic disc), insert the key into the winding ring and turn in a counter clockwise direction.
- Remove the winding ring, filler piece (washer), and ceramic disc. **IMPORTANT:** There is a front and a back of the ceramic disc. Be sure to reinstall the new one correctly, with the plain side (without black ring) facing up.
- Install the new ceramic disc in the reverse order of the above.
- **IMPORTANT:** The inside on the cavity must be completely dry before the parts are installed.

## PART DESCRIPTION

### NOTE:

PLEASE CONSULT YOUR RETAILER FOR QUALITY ORIGINAL AQUAPRO REPLACEMENT PARTS FOR YOUR AQUAPRO PRODUCT.

VISIT [WWW.AQUAPROONLINE.COM.AU](http://WWW.AQUAPROONLINE.COM.AU) FOR NEAREST STOCKISTS.

- 1 MIST MAKER
- 2 FLOAT
- 3 CERAMIC DISC & RING
- 4 AC ADAPTOR



## IMPORTANT SAFEGUARDS

### TO GUARD AGAINST INJURY, BASIC SAFETY PRECAUTIONS SHOULD BE OBSERVED INCLUDING:

- The Mist Maker should only be used in clean water. Do not use the Mist Maker in any solvents or flammable liquids.
- Do not install the light where it will be exposed to extreme hot or cold temperatures.
- The AC adaptor is under no circumstances intended to be placed in the pond or water feature, it must therefore be located within 3m of the pond or water feature in a suitably dry and protected position. It should be out of direct sun light and preferably mounted at least 30cm above ground level.
- Do not operate the Mist Maker if the Mist Maker or any of its components, such as the cord, have been damaged in any way.
- Always use a properly grounded power supply that is connected to an RCD of less than 30mA as per AS/ NZS 3350.2.41:1997.
- Always unplug the Mist Maker from the power supply when not in use or before performing any maintenance on the Mist Maker. Never pull the cord to disconnect the plug from the power supply. Grasp the plug and pull to disconnect.
- Keep out of reach of children and pets. This appliance should not be used by children or infirm persons without supervision.
- Do not cut the cord as this will result in voiding your warranty.
- Care should be taken to arrange the power cord so that it cannot be accidentally tripped over or pulled.
- Do not attempt to repair the Mist Maker yourself. Return to an authorized service centre or place of purchase if a fault occurs.
- Do not use in water above 35°C.
- Do not attempt to use this AC adaptor on any other device without first verifying with Aquatec.
- Do not let body parts, such as fingers, touch the ceramic disc or black water sensor, or come within 10cm. It is not dangerous but can cause local pain.

## WARRANTY

### WARRANTY COVERS ONLY APPLIANCE DEFECTS, FAULTY MATERIAL AND WORKMANSHIP WITHIN A 2 YEAR PERIOD.

- Warranty covers only appliance defects and faulty material and workmanship within a 2 year period.
- Faults arising due to; accidents, misuse, not following manufacturer's guidelines/ instructions, or power surges/spikes/ brownouts will not be covered.
- Warranty will be void if any tampering, removal of warranty labels, or electrical circuitry is evident.
- Loss of livestock, damage to property, or personal injury caused by this product will not be covered.
- Warranty claims caused by installation faults will not be covered.
- It is the customer's responsibility to return the faulty appliance for any warranty claim to Aquatec.
- Warranty will be void if the power cord is cut or damaged in any way.
- Warranty does not cover the ceramic disc; this is a wearing replaceable part available from your local stockist.
- For any warranty to be valid, an original proof of purchase must be provided.
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the

HOTLINE 1300 278 283 PHONE +61 (8) 6260 1000

EMAIL [SALES@AQUAPROONLINE.COM.AU](mailto:SALES@AQUAPROONLINE.COM.AU)

[WWW.AQUAPROONLINE.COM.AU](http://WWW.AQUAPROONLINE.COM.AU)