


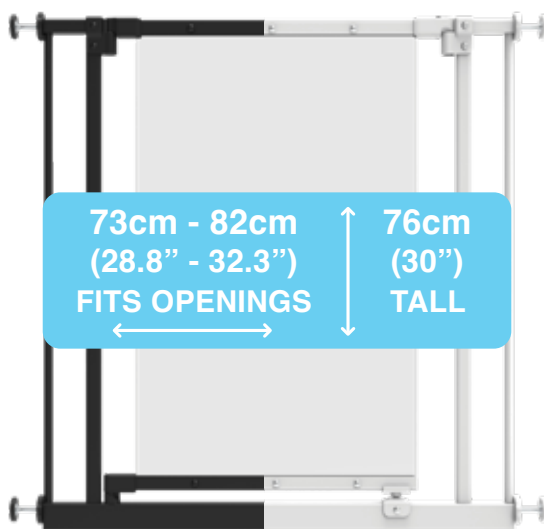

Clear Easy Fit Baby Gate

INSTRUCTION MANUAL

Black #3154
White #3155



**IMPORTANT! READ AND FOLLOW
THESE INSTRUCTIONS
CAREFULLY AND KEEP
FOR FUTURE REFERENCE.**

TABLE OF CONTENTS

SAFETY INFORMATION

General & Maintenance	03
Warnings	04-05
Gate Placement	06-07

WHAT’S IN THE BOX

Parts	08
-------	----

INSTALLATION

Assemble & Test Fit	09
Installation	10-11

OPERATION

How to Operate	
Cleaning Instructions	12
	13

SUPPORT

Warranty Certificate	
Warranty Card	14
After Sales Support	15
	15

SAFETY INFORMATION

GENERAL

The correct use, installation and maintenance of this product is crucial.

Carefully read this instruction manual and keep in a safe place for future reference.

MAINTENANCE

Regularly check that the gate is functioning correctly, lubricate hinges and moving components. Tighten and adjust mounts to ensure secure smooth operation. Inspect all components regularly and stop using if any component is damaged or missing.

Refer to pages 12 & 13 for operation and cleaning instructions.



WARNING

INSTALLATION

ALWAYS install and use gates / enclosures as directed, using all required parts. All parts should be obtained from after sales support.

Barrier must be fitted between rigid surfaces
such as plaster board, timber or hard wall.

This product is intended for use with children from 6 to 24 months
or small to medium pets from 4.5kg (10 lbs) up to 18kg (40 lbs).

To prevent serious injury or death, securely install gate or
enclosure and use according to manufacturer instructions.

Incorrect installation can be dangerous.

The safety barrier must not be fitted across windows.

Never install this product on glass doors.
Install this product against reliable doors or walls.

If the safety barrier is used at the top of the stairs,
it should not be positioned below the top level.

The minimum distance to the first step of the
stairs is 25cm (10") when used at the top of stairs.

If the safety barrier is used at the bottom of the stairs,
it should be positioned at the front of the lowest tread possible.

Children have died or been seriously injured
when gates/ enclosures are not securely installed.

NEVER use to keep child away from pool.

Gate must be installed as close to the ground
as possible, as per the installation guides.

You MUST install wall cups to keep gate in place
without wall cups, child can push out and escape.



WARNING

OPERATION

Regularly check that the safety barrier is properly installed and secure.

Before using this product, carefully inspect for any loose parts and whether any parts need to be tightened.

Danger to older children if climbing over the product.

Do not use the safety barrier if any components are damaged or missing.

This safety barrier has a manual closing system.

Never leave child unattended when using this product.

Always check that the safety barrier is correctly closed.

Use only with the locking / latching mechanism securely engaged.

Never use with a child able to climb over or dislodge / open the gate or enclosure.

Do not put any goods which can be grabbed by children or pets near this product to prevent injury.

This safety barrier is for domestic use only.

Any additional or replacement parts should be obtained from after sales support.

MOUNTINGS

Gate must be installed in a structurally sound opening. Ensure mounting surface (wall, door, stair post, etc.) is strong, rigid and has an even mounting surface.


If unsure, check with a qualified builder or trades person that the installation you intend is suitable and safe.

NOTE: An adapter may be required to achieve an 'even' mounting surface. See page 13 for spare parts.

BENT GATE


When unpacked, the gate may have a gap present.

This is normal for pressure gates, with correct installation this will disappear.

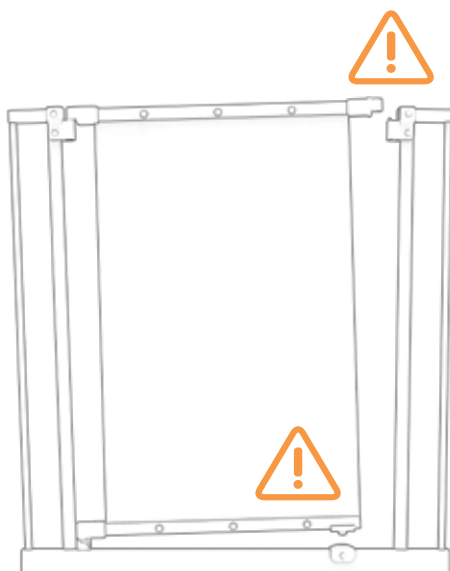

MOUNTINGS

Suitable placement on stairs

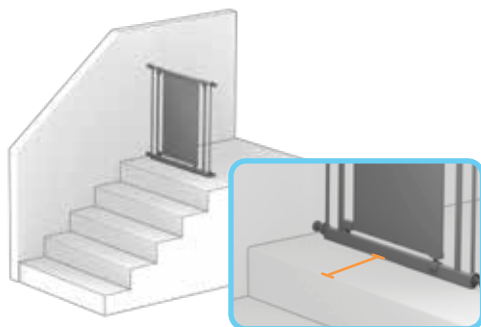


MIN 25cm / 10"

TOP OF STAIRS

If safety barrier is used at top of the stairs, it should not be positioned below the top level.

NOTE:


Ensure gate is mounted minimum **25cm / 10"** from top step tread.

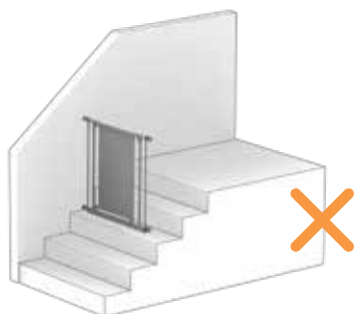

MIDDLE OF STAIRS

CAUTION:

Do not mount anywhere other than top tread or lowest tread.

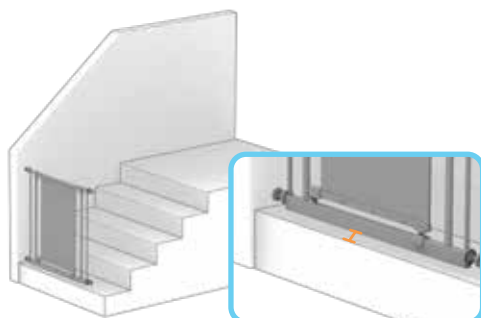

MIN 2cm / 0.8"

BOTTOM OF STAIRS

If safety barrier is used at the bottom of the stairs, it should be positioned at the front of the lowest tread.

NOTE:

Ensure gate is mounted minimum **2cm / 0.8"** back from the edge.

WHAT'S IN THE BOX

PARTS



1x Safety Gate



4x Adjuster Bolts



4x Adjuster Screws



4x Wall Cups



4x Adhesive Pads




4x Screws

INSTALLATION

ASSEMBLE & TEST FIT

Step 1.

Screw Adjuster Bolts and Adjuster Screws together (4x), then fit in the holes on the gate (2x Upper & 2x Lower).

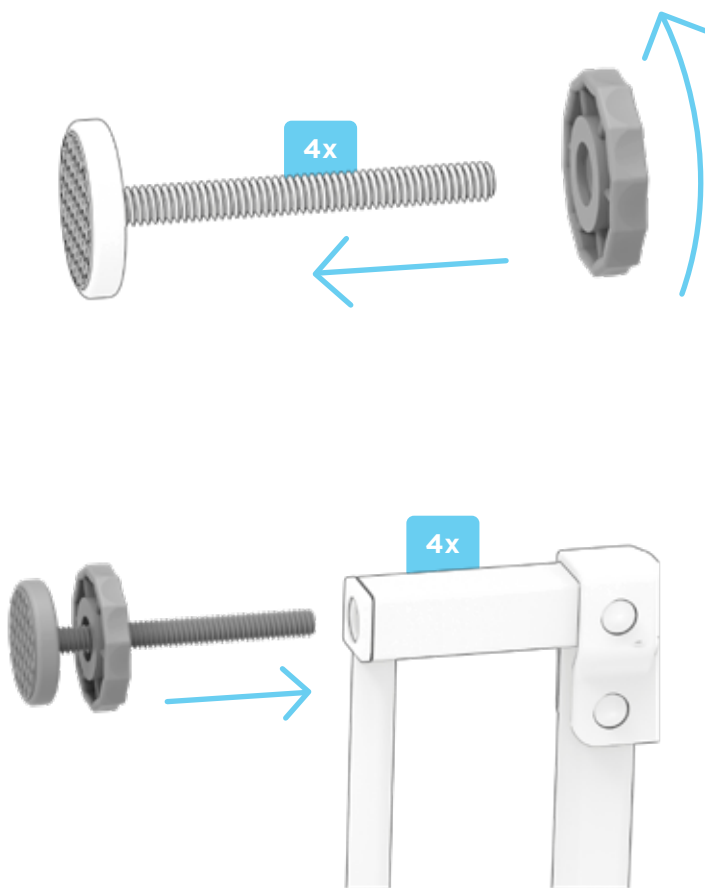

INSTALLATION

Step 2.

Test fit gate in desired location, ensuring the bottom bar is flat on the floor and the gate is centred and plumb. Fit the Wall Cups, mark their position.



INSTALL WALL CUPS

Step 3.

Peel & stick the Adhesive Pads to Wall Cups, then stick the Wall Cups into marked positions (4x).

4x



CAUTION:

For additional security, fix each Wall Cup to the wall using a Philips head screwdriver and the screws provided.



INSTALLATION




ALIGN & ADJUST

Step 4.

Re-Install and align gate with Wall Cups.

Turn & tighten the Adjuster Screws. Start with the lower portion first, then adjust the upper portion.

Tighten equally until there is a 1.5mm / 1/16" gap in the lock mechanism.

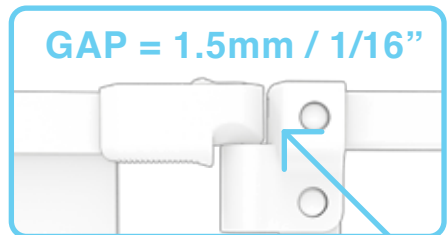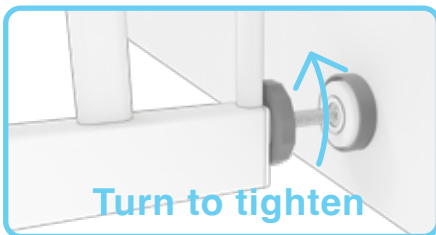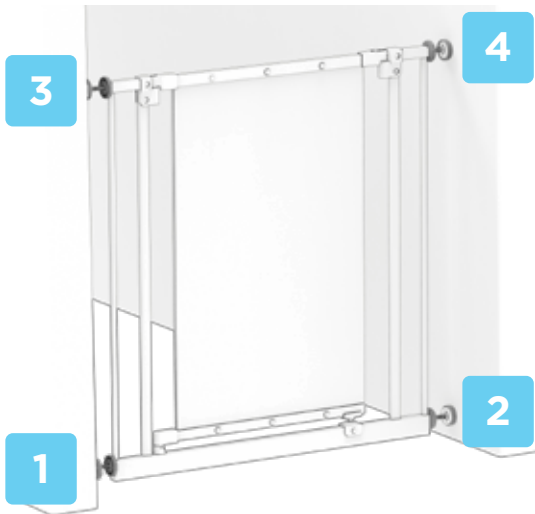


CAUTION:


Always check tension of all
Adjuster Screws and tighten if necessary.

OPERATION


HOW TO OPEN

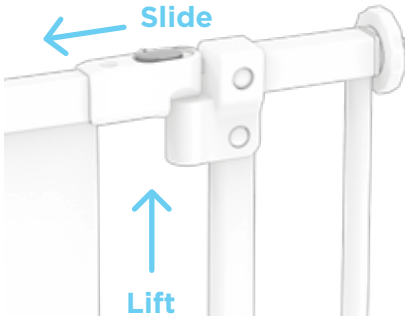

Grip the Gate Panel and place thumb on the button. Slide back the button, and lift the Gate Panel upwards.

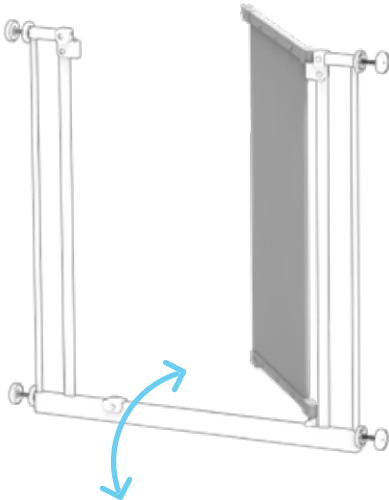


Open gate in either direction. When released gate will swing closed automatically.

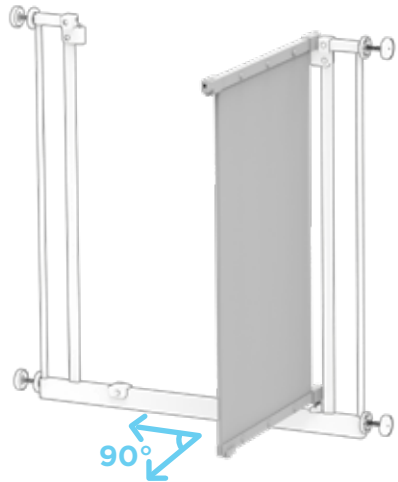

At 90 degrees, the gate will stay open and will not close. To close, simply push shut.


CAUTION: Always check gate is properly closed and secure at all times.

CLEANING INSTRUCTIONS

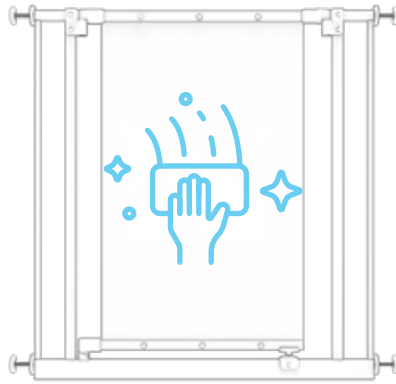

Simply use a soft damp cloth to wipe gate, then wipe down with a clean cloth to dry. Do not use chemical or abrasive cleaners.

SPARE PARTS

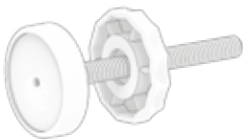

Mounting Bolts



Banister Adapter



Rental Safe
Wall Cups

Scan the QR code to see Spare Parts or visit:
permachildsafety.com



WARRANTY CERTIFICATE

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, we will provide you with a warranty against defects as follows:

WARRANTY

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

PROOF OF PURCHASE

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as proof of purchase and date of which the purchase was made.

EXTENT OF WARRANTY

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover consumable items.

NORMAL WEAR AND TEAR

This warranty does not cover normal wear and tear to the products or parts.

EXCLUSIONS

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.

TO MAKE A CLAIM

If a defect in the goods appears within 12 months, you are entitled to claim a warranty. Please contact after sales support via the link below:

www.permachildsafety.com/pages/warranty-claim-refund

Please ensure that you have a copy of proof of purchase so that we are able to respond as quickly and efficiently as possible.

WARRANTY CARD

DETAILS:

PRODUCT NAME: Clear Easy Fit Baby Gate

PRODUCT NUMBER: Black #3154 / White #3155

YOUR NAME:

ADDRESS:

PHONE:

EMAIL:

DATE OF PURCHASE:

LOCATION OF PURCHASE:

We recommend that you keep a copy of your receipt, showing the date of purchase, with this warranty certificate and keep for your reference. In the event of a product fault, please contact after sales support. Ensure that you include the product details (as shown on this card) so that we are able to respond as quickly and efficiently as possible.



Scan the QR Code to submit Warranty Claim or visit:
permachildsafety.com/pages/warranty-claim-refund



Scan the QR code for Live Chat Support
or visit: permachildsafety.com/contact-us



Perma Child Safety



@permachildsafety