

jumbuck®



120cm Steel Chimenea

I/N 0403640

- Provides the warmth & atmosphere of an open fire to your outdoor area
- Ideal for burning wood & charcoal
- Hardened steel construction for long-lasting durability
- Dimensions: 44cm diameter x 120 Height cm



Scan Here
for product and assembly details



Important: Please retain these instructions for future use

Contents

Thank you	Page 1
Safety Warnings	Page 2
Parts List.....	Page 3
Assembly Instructions	Page 4
Operating Considerations.....	Page 7
First Time Use	Page 8
Operating Instructions.....	Page 9
Care Instructions	Page 10
Product Warranty	Page 11

Thank you


Congratulations on the purchase of this Jumbuck product, and thank you for making Jumbuck a member of your household. At Jumbuck, we strive to provide excellent products at affordable prices. You can rest assured that all Jumbuck products are manufactured to high standards of safety and quality, backed by a 12-month warranty. A lot of thought and development goes into every Jumbuck product, and we truly hope you are satisfied with this Jumbuck product.



Safety Warnings

- **IMPORTANT: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.**
- Outdoor use only. DO NOT use the chiminea indoors. DO NOT use this chiminea inside a tent, gazebo or within a confined space.
- DO NOT position this product on a timber deck or any combustible surfaces.
- DO NOT leave the chiminea unattended during use.
- DO NOT move the chiminea during use
- Remove bark, dried leaves and twigs well clear of this product prior to use.
- Carbon Monoxide Warning. Carbon monoxide is produced whenever solid fuels are burnt. To avoid poisoning or death, never use this product indoors, and never move this product indoors when it contains hot coals.
- WARNING: When in use, all surfaces of the chiminea will get hot. Do not touch the chiminea during use.
- DO NOT allow children or pets near the chiminea during use.
- Ensure your chiminea is positioned on a level surface and positioned at least 2 metres distance from any side or overhead combustible materials. E.g., house, fence, deck, trees, etc.
- DO NOT overload the chiminea with fuel. It may result in product failure, failure to contain hot coals and property damage.
- DO NOT use highly flammable chemicals such as petrol or spirits to light the fire or relight the fire.
- DO NOT use in windy conditions.
- DO NOT store or use flammables in the vicinity of the chiminea.
- We recommend protecting your chiminea when not in use with a cover to protect from rusting and exposure to rain.

Assembly Instructions

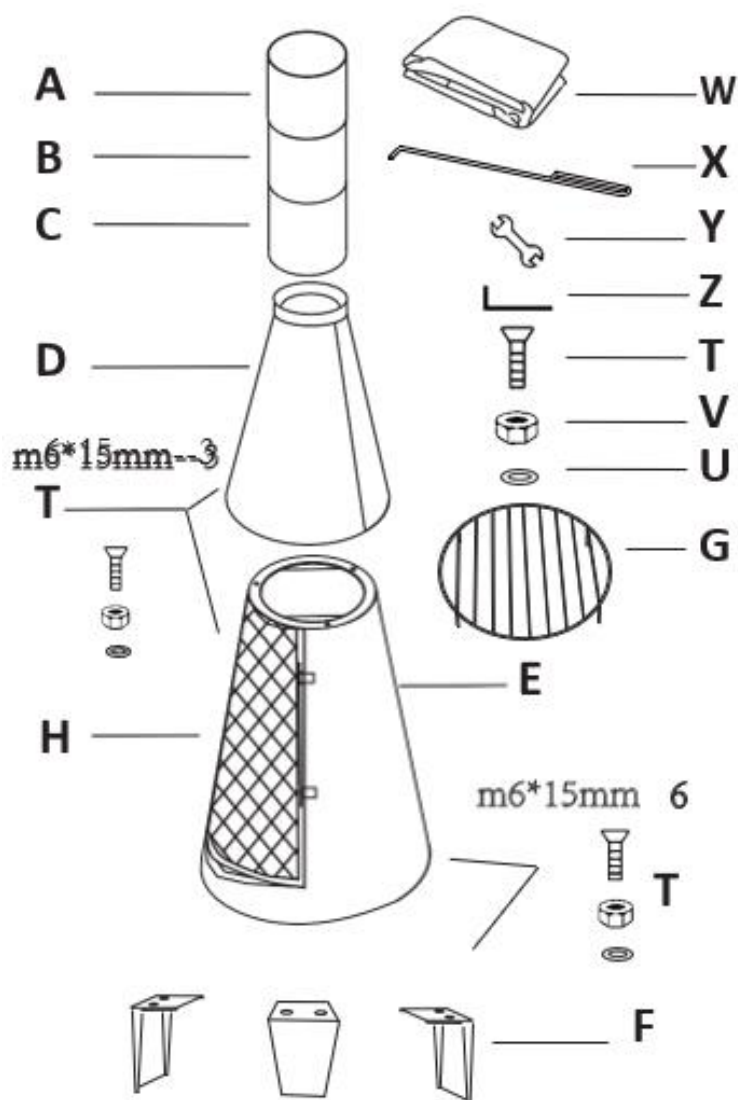

NO.	Parts	Qty.
A	Top flue (same as C)	1
B	Decorated flue	1
C	Base flue (same as A)	1
D	Top body	1
E	Mesh body	1
F	Legs	3
G	Log Grate	1
H	Mesh door	1
T	Bolts (m6*15mm)	9
U	Washer	9
V	Nut	9
W	Chiminea cover	1
X	Poker	1
Y	Hex Spanner	1
Z	Hex Key	1

Assembly Instructions

A hex key and spanner have been provided to assist with assembly.

TIP: Hand tighten all bolts first, then use hex key and spanner to tighten fully.

We recommend wearing gloves during assembly to prevent injuries from sharp edges.

Step 1:

Assemble the Legs (F) to Mesh Body (E) with 6 x Bolts (T), 6 x Washers (U), 6 x Nuts (V).



Step 2:

Attach the Mesh door (H) to Mesh Body (E).



Assembly Instructions

Step 3:

Assemble the Top body (D) to Mesh Body (E) with 3 x Bolts (T), 3 x Washers (U), 3 x Nuts (V).

a. Line up the holes on the Top body (D) with the holes on the Mesh Body (E)


b. Ensure the rear weld marks from the Top Body (D) and Mesh Body (E) align



Step 4:

Place Top Flue (A), Decorated Flue (B), Base Flue (C) on Top Body (D).

Ensure the rear weld marks from Top Flue (A), Decorated Flue (B), Base Flue (C) align with those on Top Body (D).

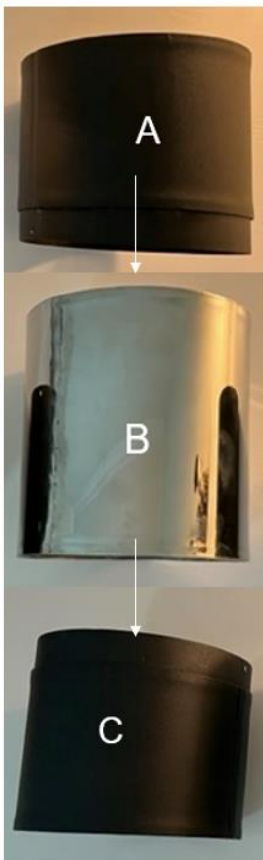

Assembly Instructions

Step 5:

Put Log grate (G) into Mesh Body (E).



Fully Assembled

Set up on a flat surface, ensure your chiminea is positioned on a level surface and positioned at least 2 metres distance from any side or overhead combustible materials. E.g., house, fence, deck, trees, etc.



Operating Instructions

Considerations Before Use

1. Check with your fire department for information on burning bans and chimenea & fire pit regulations in your area.

Chimenea's can remain hot and smoulder for several hours after the visible fire has been extinguished. Smouldering chimeneas or fire pits are a common cause of injuries and burns, especially for children. The surface of this product will discolour when placed outdoors and from first use, due to the nature of the product and the heat/naked flames.

2. Choosing a Location for Setup.

Chimenea's need to be placed in a safe location. Do not place them near buildings, walls, outdoor furniture, inflatable pools or other flammable items. Nearby items could catch fire from heat or flames. Position on a non-flammable surface, clear of overhanging objects.

3. Wind; Do not place Chimenea or Fire pits near anything that could catch fire.

Chimenea's should be protected from wind and not used when winds are high or gusty. Wind causes the smoke and fire to blow around, which could spread burning embers. When using the Chimenea during light breezes, keep an eye on it to ensure no small embers escape.

4. People & Pet Safety.

Supervised Children and Pets when the fire pit is in use.

Ensure that everyone near the Chimenea understands it is an active fire and can produce smoke and embers. Do not allow children or animals get close to Chimenea in order to avoid smoke inhalation and burns.

5. Extinguishing The Fire Properly.

Chimenea's are dangerous if the fire is not extinguished properly. **DO NOT** extinguish the fire by pouring water into a hot fire bowl because this may cause distortion, rust or flaking paint. Fire should be allowed to die out on its own, or extinguished with a fire extinguisher. It's important to note that fire can continue to smoulder and embers remain hot even if there is no visible flame. Make sure to stay near the fire pit after the flame is out to check for burning embers or smoke, which could indicate that a live fire still exists. When in doubt, after the bowl has been allowed plenty of time to cool down, fill the inside of the chimenea with water to make sure all the fire is out. The chimenea could still be hot for hours after use. **DO NOT USE A CHEMICAL BASED CLEANER** as this may ignite a flame on next use.

Operating Instructions

First Time Use:


Curing, or firing as it is sometimes referred to as, is an important step that is often overlooked.

What you'll need:

- Kindling



- Fire Starters & Matches

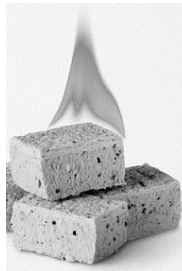

- Firewood



1. Put the grate inside the chiminea and ensure the top flue is open.

2. Build an even base of kindling & light using fire starters.

3. Supervise it to burn for an hour.



4. Add firewood, before things cool down, using larger chunks of wood. Let it

burn for an hour.



5. Then let the chiminea cool down. NEVER use water to put your chiminea out.

The shock of the temperature change can cause cracking.

Operating Instructions

Subsequent Use:

Preparation

1. To get the fire started, you will need material that can be readily ignited or kindling and you will need firewood to fuel the fire.
2. Gather these materials before attempting to light the fire so you are prepared.
3. If the available firewood is too large, cut, trim or split the firewood to fit in the chimenea without overhang.
4. Don't overload the chimenea. As a general rule, the maximum fuel load is half the area provided for the fire to burn. In a chimenea, this means you cannot fill the box above half. In a fire bowl, this means you cannot fill the bowl more than half the diameter of the bowl.
5. Don't arrange the fuel in tight bunches. Allow space between the firewood pieces to ensure good air movement in the fire.

Lighting

1. Place a layer of dry kindling such as sticks or twigs. You can also use firelighters.
2. Place a small amount of firewood directly above the kindling.
3. Use a long match or a gas lighter to light the kindling.

Maintaining the Fire

- Wear oven mitts or protective gloves when tending to the fire.
- After the fire has been established, add more firewood directly on top of the fire as desired but do this gradually to avoid overloading.
- Use a poker to reposition coals and improve airflow as desired.
- Never pour Petrol, Kerosene, Diesel, lighter fluid or alcohol onto the firepit.

Extinguishing

Allow the fire to burn out. DO NOT douse the fire with water, the sudden temperature change can cause immediate damage to the fire pit.

Operating Instructions

Care and Maintenance

Allow the fire pit to cool before cleaning.

Always empty the residual ash after each use.

To extend the life of your chimenea, protect it from the elements when not in use.

The use of harsh, chemical cleaners or rough scourers can severely damage the external surfaces of your fire pit. Only use soap and water during cleaning and allow the surfaces to dry after cleaning to prevent corrosion.

Do not clean this fire chimenea with a high-pressure washer or steam cleaner.

Rust Prevention

Where fire and steel interact, rust will eventually appear due to the extreme heat of the fire. If you want to minimise rust in your chimenea, you may use a light oil or rust preventative spray to reduce rusting when the fire pit not in use however, these oils and sprays are flammable so any oil or rust preventative spray must be cleaned off before the next use.

Warranty Conditions

Thank you for purchasing one of our quality Jumbuck products. Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within 12 Months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations). Bunnings Group Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited

ABN 26 008 672 179, Botanicca 3, Level 2 East Tower 570 Swan Street, Burnley, VIC 3121,

e-mail:
CustomerSupport@bunnings.com.au,
PH: 1800 797 586.

Bunnings NZ Limited: PO Box 14436, Panmure Auckland 1741,

email:
OnlineEnquiries@bunnings.co.nz PH:
1800 797

RECORD THE FOLLOWING INFORMATION Attached the copy of the purchase receipt here

Date of Purchase.....

Location.....

Model Name and Number.....
Item Number.....
Receipt Number.....