



EASY UP GAZEBO
3M X 3M
Item no.: 3192411

ASSEMBLY INSTRUCTIONS

ITEM	PART	QTY (PCS)	PART NAME
A		1	FRAME
B		1	CANOPY
C		1	STORAGE BAG

ITEM	PART	QTY (PCS)	PART NAME
D		8	STAKE
E		4	ROPE
F		2	SIDE WALL

Care and Maintenance

Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents. Inspect frame periodically to ensure all bolts and nuts are tight. Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP



Assembly

<p>Step 1 Place the canopy frame (A) only in the centre of the setup area. With a partner on the opposite side of the frame, hold the two outer legs and lift slightly for ground clearance. Take a few steps back and extend the frame to full arm's length, approximately 1.2 metres.</p>	<p>Step 2 With a partner hold the top and bottom of the eave where it forms a "V". Lift slightly and slowly walk backward until the frame is fully extended. Take care to avoid pinching your hands or fingers.</p>	<p>Step 3 At each corner, hold the leg of the frame with one hand and lift the slider with the other hand until it clicks past the spring pin.</p>	<p>Step 4 Place the canopy (B) over the top of the frame. Use the hook & loop to secure each corner of the frame.</p>
<p>Step 5 The adjustable legs offer two height positions. Tilt one side of the canopy upward and extend a lower leg section until it clicks into place. Repeat on the adjacent leg until all legs are extended. When extending the legs, have a partner hold the frame stable and avoid having only two diagonal legs extended.</p>	<p>Step 6 Stake (D) down the gazebo by driving the 4 stakes through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.</p>	<p>Step 7 Measure out from the leg to a proper distance and secure the 4 stakes to ground at a 45 degree angle. Tie up one end of each rope to the rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground.</p>	<p>Step 8 2 side walls are included. To attach to your gazebo, hang the side wall to each side of the gazebo using the Velcro connectors. Secure the base of the side wall to the frame, by inserting the metal hook at the base of the side wall into the hole in the gazebo frame.</p>

Disassembly

<p>Step 1 Remove the side walls (if applicable) and then press the leg pin in and lower each leg completely. Be careful not to trap your fingers.</p>	<p>Step 2 At each corner, push in the locking button and pull the slider down slowly until the button pops out above the slider. Be careful not to pinch your fingers. Please ensure that all sliders are in an unlocked position below the button prior to attempting to collapse the frame. Closing the frame with any sliders in a locked position will cause damage or breakage.</p>	<p>Step 3 Hold the top of the centre frame section and lift slightly and slowly, walk toward your partner as the frame folds in. Keep walking until the frame is about half-way closed. Be sure to avoid pinching your hands and fingers. Hold outside legs and continue closing canopy as you walk towards your partner.</p>	<p>Step 4 Place the frame into the storage bag (C) slowly until gazebo fits comfortably. Zip the storage bag completely shut. Be sure the gazebo is completely dry before storage.</p>	<p>Step 5 Wheel your gazebo to your desired storage area.</p>
--	---	--	---	--