RETRACTING FLYSCREEN ROLLER DOOR








1300 155 355 info@pillarproducts.com.au www.pillarproducts.com.au

COMPONENT LIST

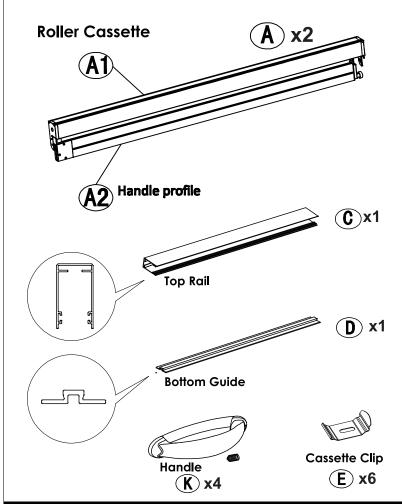





M4X25




G x9


M4X20




(H) x8

TOOLS REQUIRED

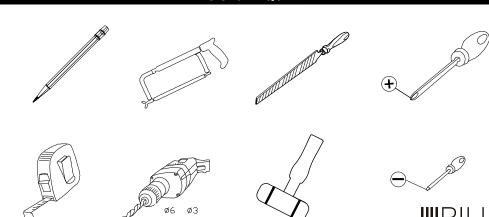

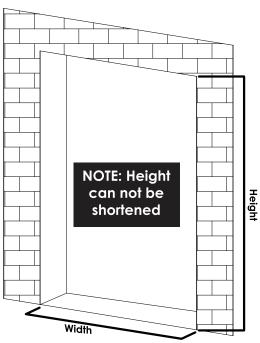


Measure opening Width and Height to ensure correct size door is selected.

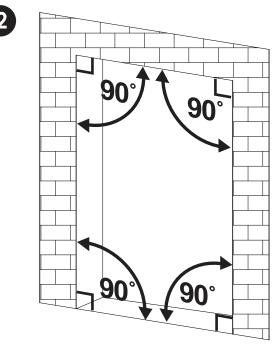


Opening **MUST** be **FLAT, LEVEL** and **SQUARE**.

Door will not operate properly if installed out of square

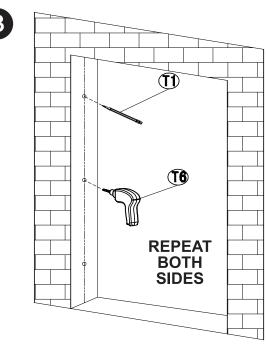


Measure, mark and pre-drill clip positions at even intervals. Use plugs if required.




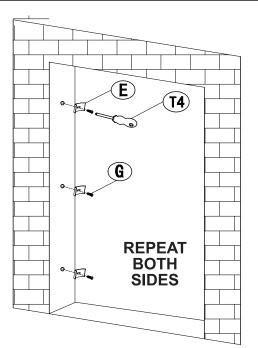


Attach Cassette Clips using screws provided at pre-drilled positions.

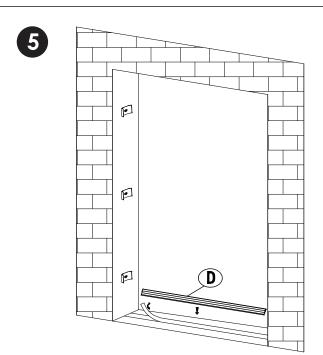


Attach the Bottom Guide to the floor using double sided tape. Additional adhesive may be used such as silicone.

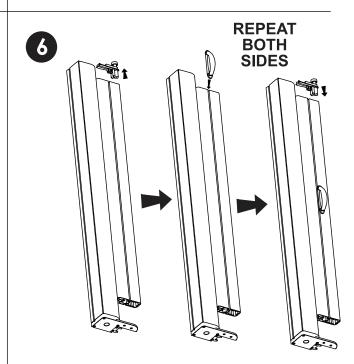


Remove the top guide to allow access for handle to slide into door & replace top guide. Secure at desired height.

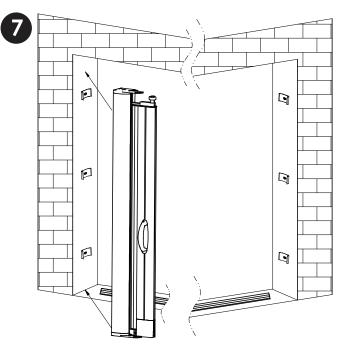





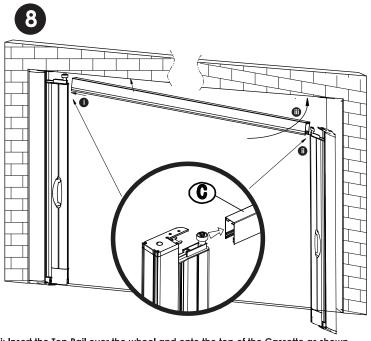

- i: Insert the Top Rail over the wheel and onto the top of the Cassette as shown. ii: Insert 2nd Cassette into Headrail
- iii: Swing both Headrail and 2nd Cassette into door frame and clip into place

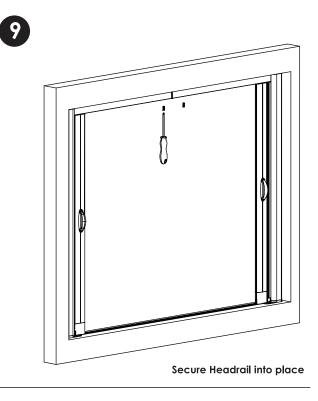

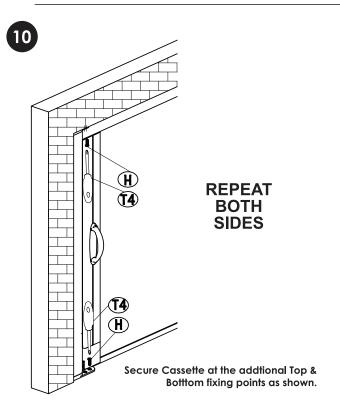

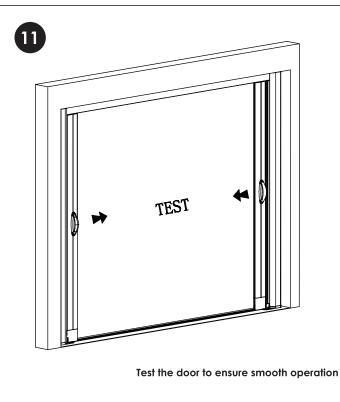

See next page for operating instructions

Operation > Door should operate freely and connect flush to magnet in opposite door. > If magnets do not hold, the door is not square or over tensioned/extended. Check alignment/installation. > Operate by hand when closing AND opening. > **Do not** release door allowing it to spring open, **control the retraction by hand**. > Leave door open in high winds. > Chain links can clip back together if they come apart from rough use. If chain comes out of Handle Bar, simply re-insert If chain comes away from door, simply click back into place **Customer Service** 1300 155 355 info@pillarproducts.com.au www.pillarproducts.com.au