

User Manual

Wireless Headphones with Detachable Microphone HP-KWIN


WHAT'S IN THE BOX

- » Wireless headphones
- » USB-A to USB-C charging cable
- » User manual

YOU MAY ALSO NEED

- » USB-A power source for charging (laptop/PC, powerbank, car charger, 240V wall)

PARTS AND CONTROLS

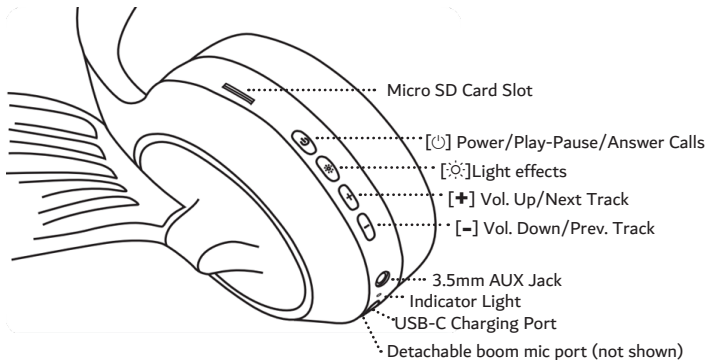

FUNCTION	OPERATION
Charge	<ul style="list-style-type: none">» Connect the USB-C cable to a 5V USB-A power source (wall charger, car charger, laptop/PC, powerbank, etc.).» Red light: Charging. Blue light: Fully charged.[i] Fully charge before first use.
Turn On/Off	<ul style="list-style-type: none">» Press and hold (approx. 5s) the Power [⏻] button.
Change lighting effects	<ul style="list-style-type: none">» Press and hold the Light [☀️] button to turn lights on/off.» Press the Light [☀️] button to change the colour.» Double-press the Light [☀️] button to change the effect.

FUNCTION	OPERATION
Play Music via Bluetooth	<ol style="list-style-type: none"> 1. Turn on the headphones (red and blue lights flash). 2. Open Bluetooth settings on your device (smartphone, tablet, etc.) 3. Select HP-KWIN from the list. 4. Start playback on your device. <ul style="list-style-type: none"> » To disconnect, turn off your device or the headphones.
Play from a Micro SD Card	<ol style="list-style-type: none"> 1. Insert a microSD card (not included) with the metal contacts facing the wing. 2. If the headphones are off, turn them on. They will start in Bluetooth mode. Double-press the Power [⏻] button to switch to Micro SD card mode. <ul style="list-style-type: none"> » If the headphones are on, they will switch to Micro SD card mode automatically. » Supports MP3 files.
Play from AUX Connection	<ol style="list-style-type: none"> 1. Connect an AUX cable to the headphones and your device (laptop/PC, MP3 player, radio, etc.). The headphones switches to AUX mode automatically. 2. Start playing audio on your device.
Switch Between Micro SD & Bluetooth Modes	<ul style="list-style-type: none"> » Double-press the Power [⏻] button.
Control playback*	<ul style="list-style-type: none"> » Press the Power [⏻] button to play or pause.
Adjust volume*	<ul style="list-style-type: none"> » Press the [+] button to increase the volume. » Press the [-] button to decrease the volume.
Skip tracks*	<ul style="list-style-type: none"> » Press and hold the [+] button to go to the next track. » Press and hold the [-] button to go to the previous track. » In Bluetooth mode, device controls also work for skipping tracks.
Answer/end call	<p>Press the Power [⏻] button.</p>
Reject a call	<p>Press and hold (approx. 2s) the Power [⏻] button.</p>

*In Bluetooth mode, you can control playback, adjust volume and skip tracks on your device. In AUX mode, only device controls perform these functions.

SAFETY PRECAUTIONS

- » Always supervise children while using the headphones.
- » Keep out of reach of toddlers and infants to avoid choking hazards.
- » Ensure the headband and cables do not wrap around a child's neck.
- » Ensure a snug, comfortable fit for proper audio quality and safety.
- » Limit listening time and encourage regular breaks to prevent ear fatigue.
- » If the headphones become hot during use or charging, unplug and stop using them immediately.
- » An adult should assist with Bluetooth pairing to avoid unknown connections.
- » An adult should handle the charging process. Do not let children charge the headphones.
- » Charge on a flat, dry surface, away from flammable materials.
- » Unplug the headphones once fully charged to prevent overheating.
- » Keep away from moisture, dust and extreme heat.
- » Clean with a soft, dry cloth. Avoid harsh chemicals.
- » Check for damage regularly. Stop using if parts are cracked, frayed or broken.
- » Use cautiously while walking, cycling or driving to prevent accidents.
- » Avoid dropping or subjecting to impact to prevent damage.
- » Never insert the USB plug if the headphones or cable is wet to prevent short circuits, overheating or damage.
- » To prolong battery lifespan, fully charge at least once every 3 months. Battery life varies by use and settings.
- » Do not alter the charging mechanism, battery or other internal components.

TROUBLESHOOTING

Headphones will not turn on:

- » Charge the battery.

No sound:

- » Check volume level on the headphones and connecting device.
- » Check Bluetooth connection.

Cannot pair Bluetooth device with headphones:

- » Keep headphones next to your device during pairing.
- » Ensure headphones are in pairing mode. Disconnect AUX cable, and remove the Micro SD card. Turn off and on again to switch to pairing mode.
- » If headphones are paired to another device, disconnect before connecting to your device.
- » If headphone's Bluetooth name is not found, refresh or search again. Wait up to 1 minute for device to appear.

SPECIFICATIONS

- » Model: HP-KWINPK-447, HP-KWINBK-430
- » Audio inputs: Bluetooth, 3.5mm AUX, Micro SD
- » Bluetooth pairing name: HP-KWIN
- » Bluetooth version: 5.4
- » Bluetooth range: 10m (unobstructed)
- » Sensitivity: 82dB \pm 3dB at 1kHz
- » Frequency range: 20Hz-20kHz
- » Battery capacity: 400mAh
- » Micro SD card: Up to 64GB in FAT32 format
- » Charging time: Approx. 3 hours
- » Charging power input: 5V, 1A

SUPPORT

Scan the QR code or go to:

<https://help.laserco.com.au/support/home>.

Enter your model number to find troubleshooting steps, FAQs and other helpful information.



Do not dispose of electronic devices with household waste. Follow local recycling rules. Visit <https://recyclingnearyou.com.au> for more information.

LASER

Product Support:

P: (02) 9870 3388

E: support@laserco.com.au

W: www.laserco.com.au/warranty