

Mondella

THANK YOU FOR PURCHASING ONE OF OUR QUALITY MONDELLA PRODUCTS.

Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within the warranty period from date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au or www.bunnings.co.nz for store locations) or contact Blutide Pty Ltd. Blutide Pty Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof to Blutide Pty Ltd for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with

guarantees which cannot be excluded under the Australian Consumer Law (ACL) or the New Zealand Consumer Guarantees Act (CGA). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications. This warranty is given by Blutide Pty Ltd, ABN 39 669 825 003, P.O.Box 535, Elsternwick, Vic, Australia, 3185, phone number: 1300 900 213, service@blutide.com.

WARRANTY PERIODS

MIXERS, TAPWARE, TOILETS & SHOWERS

- 10 years replacement cartridge
- 10 years replacement product or parts
- 5 years replacement flexible mixer hoses
- 1 year replacement product or parts and labour

OTHER ITEMS

- 10 years replacement product or parts

The warranty covers domestic use only and does not apply to commercial applications.

AFTERMARKET SERVICE PROCEDURE

Please email service@blutide.com and include the following information: proof of purchase, item number and product description, installing person's name and contact details.

PRODUCT WARRANTY


WARRANTY SHALL BE VOID FOR THE FOLLOWING REASONS:

- Inability to provide proof of purchase.
- Plumbing products not installed by a licensed plumber.
- Products not installed to relevant local, national and state regulations.
- Products not installed in accordance with the manufacturer's installation instructions.
- Fitting of other devices to the outlet of the tapware, e.g. water filters.
- Fitting of non-approved flow controllers in tap bodies or end of the line devices.
- Products used for incorrect applications, non-portable water etc.
- Damage as a result of obstructions due to inadequate flushing of system before use.
- Service or repairs with non-standard replacement parts previously undertaken without written approval.
- Damage to finishes by adhesive, sealant etc.
- Damage to product and/or components due to exposure to caustic or corrosive substances or environments.
- Damage to flexible mixer hoses due to exposure to caustic or corrosive substances or environments.
- Failure to clean and replace outlet aerator inserts etc.
- Any damage which arises from installation or post-installation use.
- Relevant products are exposed to water pressure and or temperatures that exceed the following limitations:
 - Maximum Temperature: 75 degrees;
 - Maximum Pressure: 500kPa;
 - Minimum Temperature 1 degree;
 - Minimum Pressure: 150kPa (300kPa for shower / Bath Diverter)

Note: AS/NSZ 3500.1-2018 (Clause 3.3.4) Specifies 500kPa maximum water supply pressure at any outlet within a building for new installations.

The warranty work is limited to the pre-approved work by Blutide Pty Ltd.

Warranty claims for labour undertaken will only be honoured if the work is conducted by a licensed tradesperson as defined by local, state or national regulations.

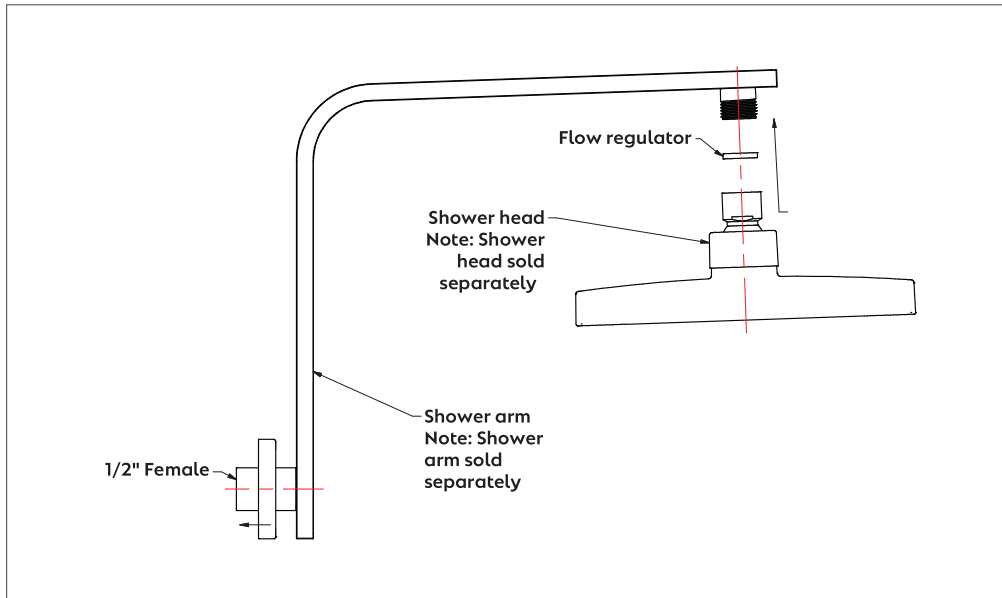

SHOWER HEAD AND ARM

Shower Arm Installation:

1. Screw the shower arm clockwise onto the exposed 1/2" male outlet in the wall. Ensure the adequate amount of thread seal tape is used to prevent leaks
2. Turn on the water and check all connections for leaks
3. Slide cover plate until flush on the wall.

Shower Head Installation:


1. Screw the shower head clockwise onto the high rise shower arm. Ensure the included flow regulator is seated correctly.
2. Turn on the water and check all connections for leaks.
3. Refer to drawing on packaging for product dimensions.

PRODUCT CARE INSTRUCTIONS:

- Avoid harsh detergents and acetone silicones when installing as well as abrasive cleaners, as they can scratch the surface or damage the product
- Clean using a soft, dry cloth or a soft cloth with warm soapy water
- Aerators and regulators should be cleaned regularly
- In coastal areas, product surface should not be exposed to direct ocean salt spray
- Ensure that product surfaces are cleaned regularly.

INSTALLATION REQUIREMENTS:

This installation must comply with the regulations of the relevant authority, the National Construction Code Volume Three - Plumbing Code of Australia, and any applicable reference standards at the time, including AS/NZS 3718. Any flow controller in the outlet should be securely tightened to prevent removal by hand.

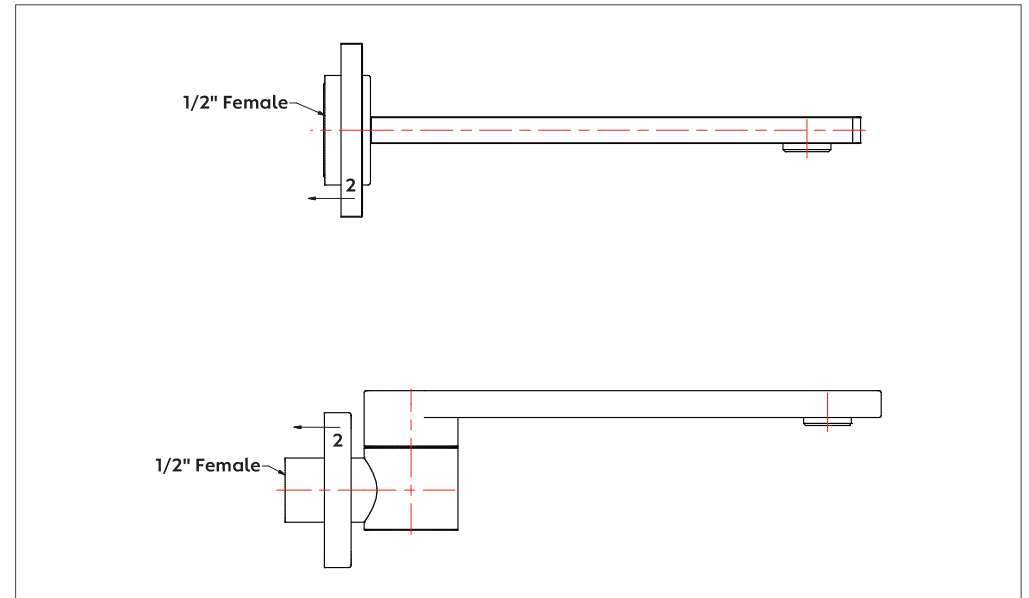

BATH SPOUT

1. Screw the spout clockwise onto the exposed 1/2" male outlet in the wall. Ensure an adequate amount of thread seal tape is used to prevent leaks
2. Turn on the water and check all connections for leaks
3. Slide cover plate until flush on the wall
4. Refer to drawing on packaging for product dimensions.

IMPORTANT:

- WELS approved flow regulators are fitted and should not be attached via the outlet to any additional water control device e.g. dishwasher, water filter
- Inspect all parts thoroughly for defects or damage before installation. Warranty claims will be void if the product is installed with pre-existing defects
- This product is designed for indoor use and is certified to meet AS/NZ 3662 and AS/NZS 6400 standards
- Installation should be performed by a licensed plumber in accordance with AS/NZ 3500 and any other relevant local, state, and national building codes and regulations. Check these regulations before attempting any DIY work
- Operating specifications:
Pressure: min 150 kPa - max 500 kPa, Temperature: min 2°C - max 50°C.