

**click®**

# **2400W CERAMIC HEATER**

**OVERHEAT PROTECTION**



## **INSTRUCTION MANUAL**

Item No.: 0670097

# IMPORTANT SAFEGUARDS

---

**When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:**

## SAFETY PRECAUTIONS

---

- To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
- Dangerous high voltages are present inside this enclosure. To avoid electric shock, DO NOT open the cabinet, refer servicing to qualified personnel only.
- To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray with liquids.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed near the product. Dry location use only.
- No naked flames sources, such as candles, should be placed on the product.
- Any ventilation holes should not be impeded by covering with items, such as newspaper, table paper, tablecloths, curtains etc. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. Never obstruct the air inlet and outlet. Do not use any object to cover this appliance.
- Only connect to a suitable AC 230/240V~50Hz mains wall outlet. Do not overload the wall outlet.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system. Other use not recommended may cause fire, electric shock or injury.
- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
- To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord. Do not use with wet hands or in damp environments.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside. Repairs should only be performed by qualified personnel.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use this appliance outdoors. This appliance is for household use only and not for commercial or industrial use.
- Do not use if there are visible signs of damage to the heater
- Use this heater on a horizontal and stable surface.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater if it has been dropped.

**WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.**

**WARNING: In order to avoid overheating, DO NOT COVER the appliance.**

**WARNING: Do not place the heater on LONG PILE CARPET OR FLOKATI RUGS. Use a heat board if necessary.**

**WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.**

**WARNING: FIRE RISK EXISTS IF THE HEATER IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS.**

## **Always**

1. Always position the heater in accordance with the instructions.
2. Always make sure the electrical socket is accessible and located adjacent to, but not above the heater.
3. Always use a fire guard when children, animals and infirm persons can come into contact with the heater. Pay attention! The air outlet gets hot during operation.
4. Always turn the appliance OFF and unplug it from the mains wall outlet when it is not in use, when moving the appliance from one location to another and before cleaning.

## **Never**

1. Never leave the appliance unattended when it is in use. Never leave children unsupervised in a room where the heater is ON and unguarded.
2. Never obstruct or cover the air outlet or force items into the heater openings, this could cause overheating and consequent risk of fire. Never insert or allow foreign objects to enter the air outlet as this may cause damage to the appliance.
3. Never position or use the heater in the immediate vicinity of water, such as bathtub, shower, washbowls, swimming pool etc.
4. Never use aerosols or steam cleaners on or around the heater.
5. Never use the heater in rooms with explosive gas or while using flammable solvents, varnish or glue.
6. Never route the power supply cord under carpet etc.
7. Never use the heater to dry clothes, etc.
8. Never operate the appliance with a damaged cord or plug, after a malfunction or if it is not working normally, dropped or damaged in any way.
9. Never let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
10. Never move the appliance by pulling the cord.
11. Never immerse the product in water or any other liquid for any reasons.

## Position Instructions

This heater must be placed on a hard, level, heat resistant surface. When positioning, please keep the following points in mind:

- The heater requires no installation. It should be used solely as a portable appliance. The heater must always be used and stored in an upright position.
- This heater must not be located immediately below an electrical outlet.
- The heater **MUST** only directly be plugged in to a fixed Domestic Power outlet, **DO NOT** use in conjunction with Extension cords, Power Boards or Double Adaptors, as these can overheat when overloaded.
- Do not use the appliance in rooms less than 4m<sup>2</sup> areas.
- Keep the air inlet and outlet free from objects at least 100cm in front and 50cm behind the heater. Do not hang anything on or in front of the heater.
- Never position the heater close to curtains or combustible materials such as furniture, cushions, bedding, paper, clothes, curtains etc. Keep the appliance at least 100cm (1m) from walls and any other combustible materials.
- Never position or use the heater in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Keep hearthrugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of hot air and damage both soft furnishings and heater.

## Cautions:

Do not operate the appliance on an inclined place. Do not move the appliance while the appliance is switched on.

In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

This heater is hot when in use or directly after use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains well away from the heater. Do not drape laundry or any other items over the heater.

At the end of the product's serviceable life it should be disposed of carefully and safely in accordance with local authority regulations.



THIS APPLIANCE IS DESIGNED FOR HOUSEHOLD USE ONLY.

## SAVE THESE INSTRUCTIONS

---

# FEATURES OF YOUR CERAMIC HEATER

---

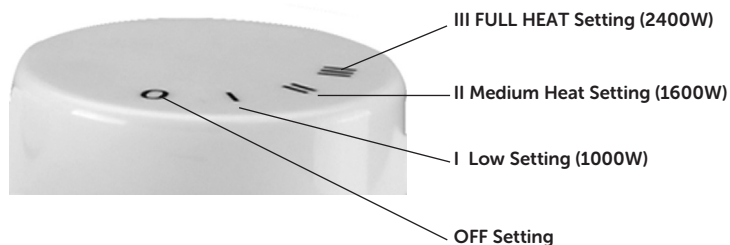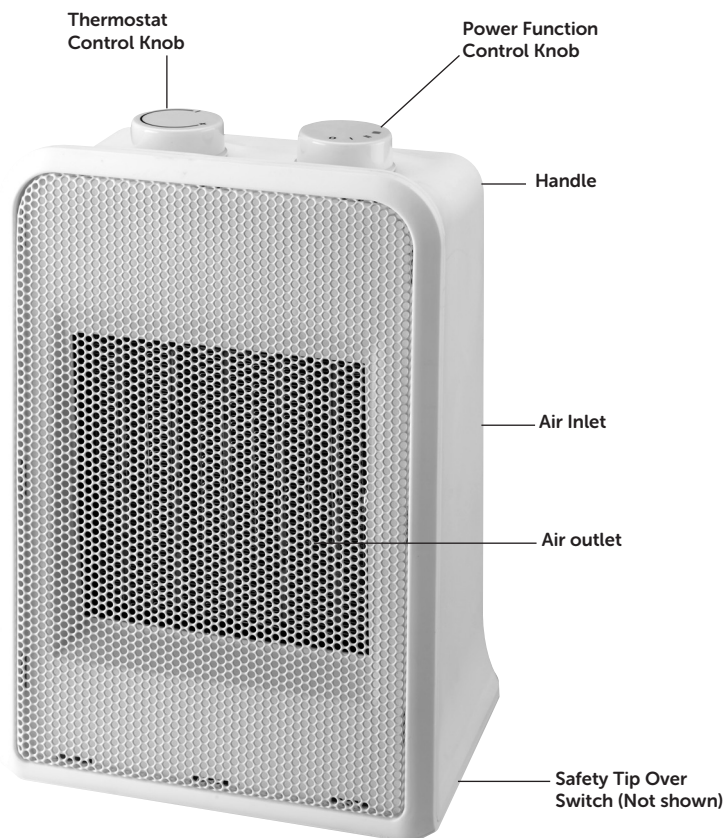

# YOUR CERAMIC HEATER

---

Congratulations on the purchase of your new Heater. Before using your new heater, it is important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are quite familiar with this appliance. Find a place to keep this booklet handy for future reference. Attention is drawn to section dealing with 'IMPORTANT SAFEGUARDS.'

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

## OPERATION

---

When operated for the first time, the unit may emit an unpleasant burning type smell. This is normal, and will disappear after a short period of use.

Place the heater on a level surface in a stable upright position. Make certain the power switch is in the "OFF" position.

Unwind the power cord and plug your Upright Fan Heater into a socket outlet. Ensure that the voltage on the specifications plate is the same as in your home. Switch on the heater to the heating level you prefer. Turn the thermostat dial fully in a clockwise direction to the maximum setting.

**NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time to emit some smell and fumes. This will disappear when the heater has been on for a short while.**

**Never cover the heater or obstruct the air outlet/inlet, failure to do so could cause overheating and the risk of fire.**

### Power Switch Setting



#### I Setting

The I setting, powers 1000W to the heater elements. This setting is best suited to smaller, well insulated areas that require less warming to maintain temperature.

#### II Setting

The II setting, powers 1600W to the heater elements. This setting is best suited to smaller, well insulated areas that require less warming to maintain temperature.

#### III Setting

The III setting, powers full heat (2400W) to the heating elements; delivering rapid warming air to quickly increase the temperature in a given area.

To avoid overload situations, it is recommended that no other appliances are used at the same time on the same power outlet.

### Thermostat Dial



To find the ideal thermostat setting for you, first set the dial to maximum position. As soon as the temperature is comfortable, turn the thermostat to the direction of minimum position slowly, until the heater turns off.

**Note: Heat function will not operate if the thermostat setting is below room temperature.**

### Thermal Cut-Out

This appliance is fitted with a safety cut out, which will operate if the heater overheats (eg, due to blocked air outlet). For safety reasons, the heater will NOT automatically reset. To reset the heater, disconnect the heater from the power outlet. Let the heater cool down before reconnecting the heater to the power outlet and switching it back on.

**WARNING:** In order to avoid a hazard due to inadvertently resetting the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

### Tip-Over Switch

This appliance is fitted with a safety tip-over switch which automatically turns the unit off when it is tilted or tipped over. Always ensure that the unit is placed on flat solid ground before operating.

## TECHNICAL SPECIFICATION

Power Supply:	AC 230-240V ~ 50Hz
Power Consumption:	2400W

**NOTE:** As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

## CARE AND CLEANING

- Before cleaning, ensure that the heater is switched in the off position and is unplugged from the socket.
- Clean the exterior surfaces of the heater with a dry, soft cloth.
- Never use any form of detergents or solvents to clean the heater.
- Never spray with liquids or submerge in liquids or water.
- DO NOT attempt to clean the interior of the heater.
- DO NOT ATTEMPT TO OPEN THE CASE OF THIS HEATER at any time. There are no consumer serviceable parts inside this unit.
- When the heater is stored during the off season, neatly wind the cord around the base of the heater to prevent any damage to the cord.

## DISPOSAL

Do not dispose of packaging or the product through your household waste!

The product and packaging are made from recyclable materials (plastics, metals, paper).

If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local council.

# WARRANTY CONDITIONS FOR PURCHASE IN AUSTRALIA & NEW ZEALAND

---

Thank you for purchasing one of our quality Click products. Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under the warranty, take the product(with proof of purchase) to any Bunnings store(see [www.bunnings.com.au](http://www.bunnings.com.au) for store locations).

Bunnings Group Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or the Consumer Guarantees Act(NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications. neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited.  
ABN 26 008 672 179, Botanicca 3, Level 2 East Tower 570 Swan Street, Burnley, VIC 3121,  
e-mail: [CustomerSupport@bunnings.com.au](mailto:CustomerSupport@bunnings.com.au), PH: 1800 797 586.  
Bunnings NZ Limited: PO Box 14436, Panmure Auckland 1741,  
email: [OnlineEnquiries@bunnings.co.nz](mailto:OnlineEnquiries@bunnings.co.nz) PH: 1800 797 586

## WARRANTY EXCLUSIONS

---

Damage to the base or diffuser or any part through accident, misuse or negligence.

