

Quick Start Guide

FHD Outdoor Cinema Bundle
PJ-OBF144-670

WHAT'S IN THE BOX:

Projector:

- » LED Projector
- » Remote control
- » AC power cable

Screen:

- » Inflatable screen with built-in blower
- » Carry bag
- » 4x tie down ropes
- » 8x tether stakes

Soundbar:

- » Soundbar
- » USB-A to USB-C charging cable

Projector stand

Quick start guide

ADDITIONAL ITEMS YOU MAY NEED FOR SETTING UP:


- » 2x AAA batteries for the projector remote control
- » Power extension cord and a double adapter
- » HDMI cable

FOR BEST USE, PLEASE NOTE THE FOLLOWING:

- » Keep children and pets away from the installation area.
- » Choose a flat, stable surface free of sharp objects to keep the screen upright.
- » Ensure there is enough space for the projector to project onto the screen without obstruction.
- » The projector isn't dustproof or waterproof. Keep it away from water to avoid fire and electric shock. Be mindful of wind conditions. Don't use in bad weather (storms, rain, wind, snow.)
- » The projector works best in dark conditions. Avoid light sources like street lights and backyard lights to keep the image clear.
- » Drive spikes into the ground at a 45-degree angle away from the screen for better wind resistance.
- » Tie the ropes to the spikes using double knots for added security.
- » Adjust the ropes so the screen is taut but not overstretched.
- » Make sure all ropes are evenly tensioned and the screen stands upright without leaning or wobbling.
- » Mark or make all ropes and stakes visible to prevent tripping hazards. When setting up the screen and projector outdoors, ensure the screen is installed on level ground and check for wind or nearby obstructions.

SETTING UP:

1. Select an area large enough to erect the projector screen.
2. Unpack the projector screen and lay it on the ground with the front of the screen facing upwards. Ensure the air pump is not blocked.
3. Locate the 4 anchor points on the sides of the screen. Thread the 4 ropes through the anchor points and attach both ends of each rope to the stakes. Tie the ropes securely with double knots.
4. Connect the air pump to power and inflate the screen.
5. As the screen takes shape during inflation, secure it to the ground by adjusting the ropes and stakes as needed. Make sure the screen stands upright and is stable before use.

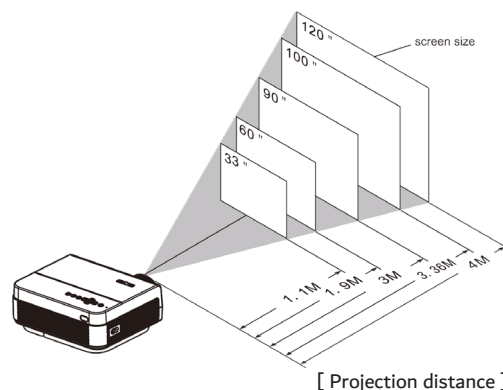


⚠ Securely tie down the inflatable screen using all the supplied ropes and stakes.





If the air pump doesn't start, unzip the zipper and turn on the switch.

6. Unpack the projector stand and set it on a flat, stable surface.
7. Unpack the projector, place it on the stand and connect it to a power source.
8. Connect your external device (e.g., gaming console, DVD player) to the projector using an HDMI cable (not included).
9. Press the **Power** button on the projector or the remote to turn it on.

⚠ WARNING: Never look into the projector lens when it's on. It can harm your eyes, especially for children.
10. Adjust the projector for the best image quality on the screen. Use the **Focus** and **Keystone** wheels to fine-tune the picture.
11. Connect the mini soundbar to power using the supplied USB-A to USB-C power cable. We recommend that you use a 5V, 1A USB adaptor, however you can use the USB port on the projector as well.
12. Turn on the soundbar by switching the **Power** button on the back to the **On** position. Bluetooth mode is enabled by default; if it is not, press the **Mode (M)** button to switch to Bluetooth mode.
13. On the projector Home screen, go to **Setting > Bluetooth > Transmit mode**, select **Search Bluetooth**, and press the **OK** button on the remote to find nearby Bluetooth devices. Select **PJ-OBF144-670** and press **OK** to connect. The projector's audio will now play through the mini soundbar.



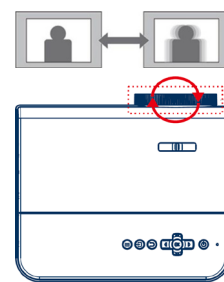


[Adjust focus]

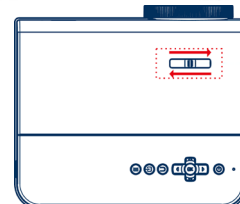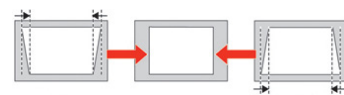


[Adjust keystone]

OVERVIEW:

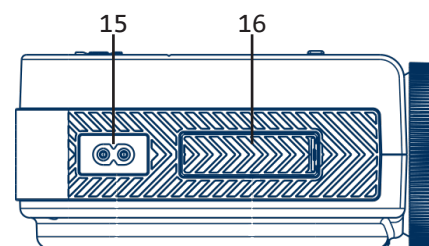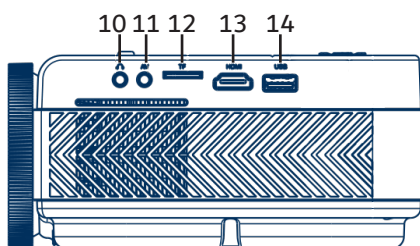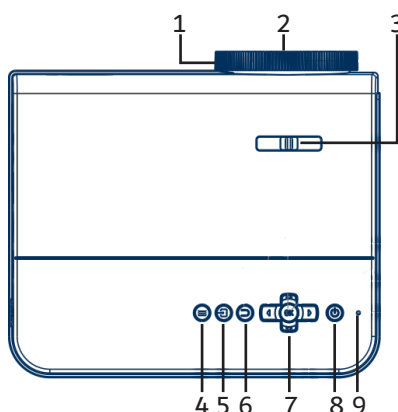

- | | | |
|-----------------------------|----------------------------|------------------|
| 1. Focus ring | 9. Indicator light | 17. Mute |
| 2. Lens | 10. Headphone jack | 18. Rewind |
| 3. Keystone correction dial | 11. AV input | 19. Fast forward |
| 4. Settings | 12. TF (microSD) card slot | 20. Play/Pause |
| 5. Source input | 13. HDMI input | 21. Volume down |
| 6. Back | 14. USB port | 22. Volume up |
| 7. OK & directional buttons | 15. Power socket | 23. Home |
| 8. Power button | 16. Dust filter | |

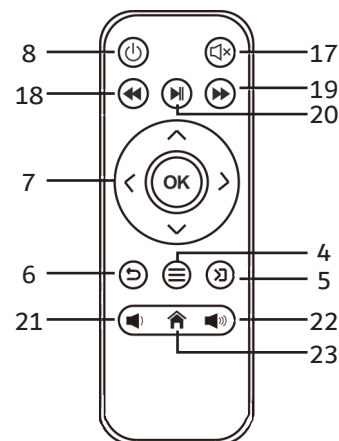

1. **Status:** Check microSD, USB or Bluetooth connections.
2. **Wired Screen:** Mirror your phone using the original USB-C or Lightning cable.
3. **Bluetooth:** Stream from your phone or connect to the soundbar.
4. **Setting:** Adjust projector settings.
5. **USB:** Open files from a USB flash drive.
6. **AV:** Use AV input.
7. **HDMI:** Use HDMI input.



SCAN FOR HELP

