

click[®]

25L AIR EVAPORATIVE COOLER

WITH REMOTE CONTROL



INSTRUCTION MANUAL

Item No : 0612568

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

SAFETY PRECAUTIONS

Read all instructions carefully, even if you are quite familiar with the appliance.

- This product is intended for general domestic use only.
- Do not use the product for any other purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the product unattended while it is in use, especially when children are present.
- Always unplug the product from the electrical outlet when it is not in use.
- Always operate the product on a flat, level, steady, and stable surface to avoid it overturning.
- Do not hang or wall-mount the product.
- Do not place the product in or near an open window. Rain, snow, and other weather elements may create an electrical hazard.
- Keep the power cord and product away from heated surfaces.
- Always unplug the product from the electrical outlet when cleaning it.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Never insert fingers or any other object through the fan grille.
- Never drop or insert objects into any opening of the product.
- Do not attempt to open any part of the motor housing, as a risk of electrical shock may exist.
- Do not allow the power cord to hang (i.e., over the edge of a table or counter) where it may be tripped over or pulled.
- Do not operate product if the power cord is cut, damaged, or if the wires are exposed.
- Do not immerse or expose the motor housing, power cord, or plug to water or other liquids.
- Do not pull on the power cord when disconnecting the plug from the electrical outlet.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- Do not operate the product if it has a damaged power cord or plug, malfunctions, is dropped, or damaged. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Qualified service personnel should perform any servicing.
- This product is intended for indoor, non-commercial, non-industrial, household use only.
- Do not use outdoors.
- To disconnect the product, set main switch to OFF then remove the plug from the outlet.
- Ensure that the product is switched off and unplug from the supply mains before cleaning and maintenance.
- Do not move the product when it is in use.
- Do not run the power cord under carpeting or cover the power cord with throw rugs, runners or the like. Arrange the power cord away from traffic areas and where it will not be tripped over.

- Do not use this product with a programmer, timer or any other device that switches the product on automatically, since a fire risk exists if the product is covered or positioned incorrectly.
- Always ensure that there is water in the tank when use the cooling function.
- Do not block air circulation.
- Do not add hot water into the tank.
- Unplug the appliance during filling and cleaning.

WARNING:


Do not place the appliance near any power board or socket outlet.

If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

SAVE THESE INSTRUCTIONS

FEATURES OF YOUR EVAPORATIVE COOLER

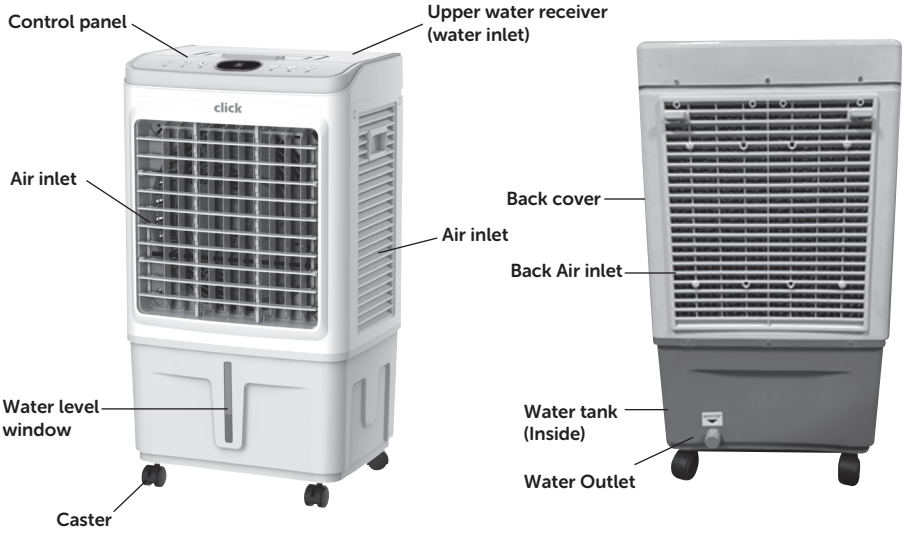

Remote



Ice packs



Control Panel and LED display

GETTING TO KNOW YOUR EVAPORATIVE COOLER

Congratulations on the purchase of your new Evaporative Cooler.

Before first using your Evaporative Cooler it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are quite familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with **IMPORTANT SAFEGUARDS**. Find a place and keep this booklet handy for future reference.

Your Evaporative Cooler is safe and easy to use. It has been designed to function quietly and safely under normal circumstances.

HINTS FOR BETTER COOLING

1. Your cooler requires a supply of fresh air. Place the cooler near an open window or leave the door to the room open. Then open another outside window or door on the opposite side of the room so that you create "flow through" ventilation. The cooler will not work properly in a closed room.
2. As an addition, place the cooler near the entrance to the room. The cooler will draw cool air from other parts of the house and further bring down the temperature.
3. Start your cooler when the room is still cool. You may leave it running all day. You will find that this system works well and make the room cooler.
4. Turn on the cooling function to dampen the water absorbing filter. The air is drawn in through the rear cover and across the filter to release cool clean air. It may take a few minutes for the filter to become saturated with water.
5. For further cooling, you may add cold water and Ice brick to the water tank. Please refer to the instructions for Ice brick.
6. When relative humidity is higher than 60%, the cooling function cannot produce the optimum result. When the weather is too humid, you may use the cooler as a fan. Just turn **ON** the cooler without turning **ON** the cooling function.


ASSEMBLY

Before using the Evaporative Cooler, the castor wheels (supplied separately in the carton) must be installed on the cooler.

Place the cooler upside down on a soft cloth or carpet (To avoid causing any damage during assembly of the castor), Please take care not to let the cooler fall over when it is upside-down.

Position the 4 castores to align with the corresponding holes location on the base of the cooler, secure with screws supplied and tighten them with screw driver.

Note: The universal wheel with brake is installed in the back two hole positions of the bottom of the air cooler, and the wheel without brake installed in the front two hole positions of the air cooler bottom.

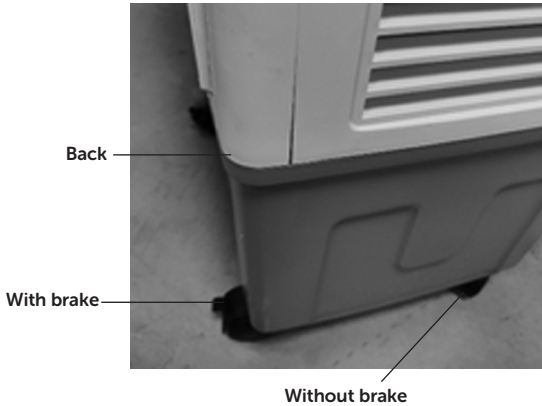

Water tank

1. Make sure the evaporative cooler is disconnected from the power outlet and the water tank stopper is tight before adding water.
2. To fill the water tank, open the top cover and remove the drain plug inside the top water tank.
3. Add water into the water tank through the plug hole in the top water tank.
4. While filling water, keep an eye on the water level indicator to ensure that the water level doesn't go above the MAX line.
5. When using the cooling function, make sure that you add enough water such that the water drawn from below can fill the top water tank.
6. When finish adding water, put back the drain plug in the top water tank and close the top cover.

CAUTION: Do not spill or allow water to come in contact with the control panel.

CAUTION: Do not overfill past the MAX water indicator mark.

Caution: Only filling with clean water, Slowly pour water into the water-filling compartment to avoid water splash or spill over.

Ice brick



The Ice brick can absorb the heat in the water, which in turn can lower the temperature of the water tank. This will help to provide further cooling.

To use the Ice brick, fill it with water and put it in a freezer until it is completely frozen.

Then put the frozen ice box into either the top water tank or the water tank.

Make sure the evaporative cooler is disconnected from the power outlet when adding and removing Ice brick.

The product is provided with two Ice brick so you may use them in turns to provide continued cooling.

HOW TO USE

The Evaporative Cooler can be operated by using either the manual controls (control buttons on the control panel), or by using the remote control.

Control Panel



Operation

1. When using the cooler, make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline or decline.
Note: When moving this product, please untie the brake on the back casters and re-lock it after placing it
2. If needed, fill the water tank and add the Ice brick before plugging in the cooler.
3. Unwind the power cord and plug the plug into a mains power outlet. Ensure that the voltage on the specifications plate is the same as in your home. The air cooler will beep and display the current room temperature to indicate the appliance is operational.
4. Switch ON/OFF
When the cooler is in the standby mode, press the ON/OFF button to turn it ON in normal mode at medium fan speed, and then turns to a low speed. Press this button again to turn off the air cooler.
5. **Speed button**

Press this button to select low ,medium, high fan speed. Default low speed start.

The Speed indicator light on the display will illuminate low() ,medium () ,high () On position



6. **Swing button**

press this button, the fan head will swing left and right, directing the airflow over a wider area. The swing indicator light on the display will illuminate () in On position. Press again to cancel the function.

7. **Timer button**

Press this button to set the time you want the fan to operate for, each press of the button increases the set time by 1 Hour, ranging from 0 to 12 Hours.

8. **Cooling / Ionizer**

Press this button for the first time to start the cold air function, and the cold air indicator () is on at the same time. At this time, if you place the frozen Ice brick or ice cube in the water box, the outlet temperature can be reduced by about three degrees after a few minutes; Press this button for the second time, the negative ion generator will start to work, release negative ions, and the negative ion indicator light () will be on at the same time; Press this button the third time, simultaneously starts the cold air and the negative ion function; Press the fourth button to turn off the cold air and anion function.

Warning: If the cold air () light keeps flashing, it means the water tank that there is no water and that water needs to be added.

CAUTION: Only use this function when the water tank is provided with fresh cold water.



CAUTION: Do not spill or allow water to come in contact with the control panel.

CAUTION: Do not overfill past the MAX water indicator mark.

NOTE: Before starting the cooling function, make sure the water stopper for the water tank is properly fitted. Then proceed to add clean water into the water tank. While adding the water, make sure that you keep an eye on the water level indicator to make sure that you do not OVER or UNDER FILL the tank.

NOTE: Don't use the cooling function with no water in the tank. This may cause damage to the product.

9. **Mode**

Press this button to cycle through the normal, wind-natural, wind-sleep wind, and there is a corresponding indicator light as wind-natural () wind-sleep wind () . There is no corresponding indicator light in the normal wind state of this product. Sleep wind mode: 1h at high speed, 1h at medium speed, and finally keep at low speed.

10. After use, turn the appliance Off, by pressing the ON/OFF Button. Disconnect appliance from the power supply.

REMOTE CONTROL OPERATION



Battery installations:

Open the battery cover on the back of the remote control.

Insert two new AAA 1.5V alkaline batteries align with polarity indicator markings (+/-) inside the battery compartment.

Reattach the battery cover, making sure the locking tabs click into place.

Note: Make sure the batteries are installed correctly in the remote control by aligning the +/- polarity marking in the battery compartment with the batteries.

WARNINGS:

- Keep batteries out of children's reach.
- Use only alkaline batteries. Do not use rechargeable batteries.
- Do not use old and new or different types of batteries in combination. Do not use the remote if the batteries have leaked.
- Remove the batteries if they are discharged or if the remote control is not being used for a long period of time. Dispose of used batteries immediately.
- Battery must be recycled or disposed of properly. Do not dispose of battery in a fire, oven or near any flammable object as this may cause an explosion. Do not dispose of battery in regular trash, municipal waste stream or by fire as battery may leak or explode.

Using the remote control to operate the Air cooler

1. For the best results, aim the remote control directly at the Remote Sensor which located on the top of display.
2. Do not put any objects between the remote control and the appliance while operating the appliance.
3. Operate the remote control within 5 meters from the unit and within a range of 45 degree towards the remote sensor on the top of display.

TECHNICAL SPECIFICATION

Voltage:220-240V~

Frequency:50Hz

Wattage:150W

Water Tank Capacity:25L (Max position)

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

MAINTENANCE AND CLEANING

Before cleaning the Evaporative Cooler, you must switch it OFF by the ON/OFF button and disconnect it from the power outlet.

To ensure effective humidifying and filtering, it is recommended that the filter be cleaned once every two weeks.

Cleaning the air filter & ventilation grilles

In order to allow the cooler to function as well as possible, we recommend cleaning the rear cover regularly. The rear cover could get clogged with dust and dirt.

- Unscrew the back cover, lift up the back cover, and remove the cover from the product
- Unscrew the air filter, and remove the air filter from the back cover.
- Clean the air filter & ventilation grilles with a mild detergent in lukewarm water (approx. 40°C). Then properly rinse clean the cover with clean water and allow it to dry in the air. Do not place the air filter & back cover in the sun or on the heating to dry it.
- Place and re-attach the air filter & the rear cover back in the product. Check that it is fully dry, before using the cooler again.

Cleaning Water Tank

Unplug the cooler from the power supply.

If there is any water remaining in the tank, move cooler to an area where water can be drained from it, remove the stopper and drain the water.

Water tank cannot be removed. Open the rear cover and take out the water absorbing filter. Throw away any remaining water and clean the tank through the opening of the rear cover with a soft detergent and warm water. Properly rinse with clean water and dry.

DISPOSAL

Do not dispose of packaging or the product through your household waste!

The product and packaging are made from recyclable materials (plastics, metals, paper).

If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local council.

WARRANTY CONDITIONS FOR PURCHASE IN AUSTRALIA & NEW ZEALAND

Thank you for purchasing one of our quality Click products. Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations).

Bunnings Group Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or the Consumer Guarantees Act (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications. neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited.
ABN 26 008 672 179, Botanicca 3, Level 2 East Tower 570 Swan Street, Burnley, VIC 3121,
e-mail: CustomerSupport@bunnings.com.au, PH: 1800 797 586.
Bunnings NZ Limited: PO Box 14436, Panmure Auckland 1741,
email: OnlineEnquiries@bunnings.co.nz PH: 1800 797 586

WARRANTY EXCLUSIONS

Damage to the base or diffuser or any part through accident, misuse or negligence.

