



Basic settings of programs for MultiControl Duo G1874

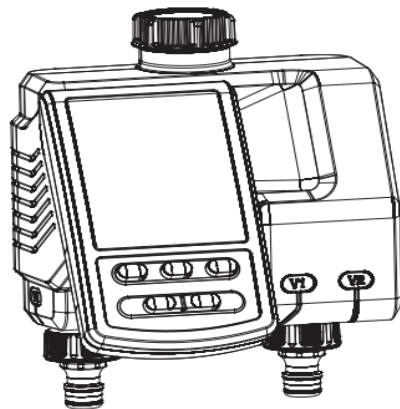

MultiControl duo
Art. 1874

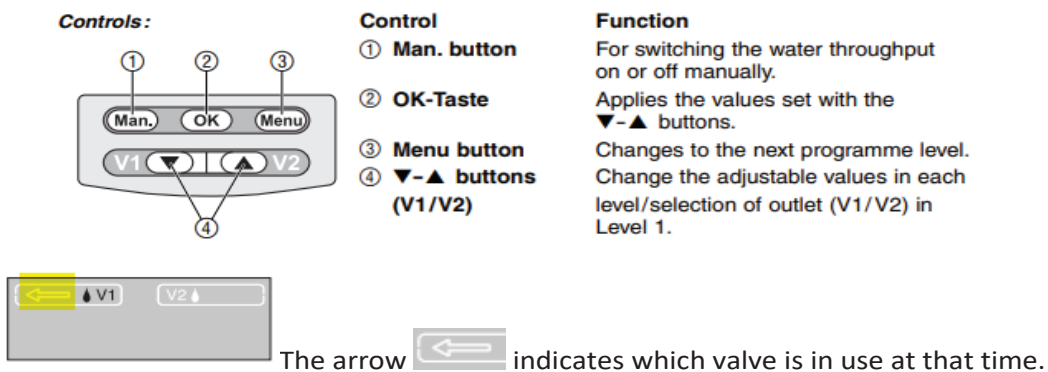

After inserting the battery, you will need to set the time as it will be flashing 00:00,

Use the up/down arrow keys to change the hours, press OK to accept.

Use the up/down arrow keys to change the minutes, press OK to accept.

Use the up/down arrow keys to choose the current day, press OK to accept.

Start Prog. Will be flashing, use the up/down arrow keys to change the hour, press OK to accept.

Use the up/down arrow keys to change the minutes, press OK to accept.

Run Time. Will be flashing, use the up/down arrow keys to change the hours, press OK to accept.


Use the up/down arrow keys to change the minutes, press OK to accept.

Set the Fequency. A square will be flashing around 8h, use the up/down arrow keys to select the hours or days you want to water, press OK to accept.

Press the Menu button once.

Prog. ON will be flashing, press OK to accept.

Prog.OK will display for a brief period, showing the valve/program is now set.

Use the up/down arrow keys to move the arrow  to valve 2 , press the menu button twice.

Start Prog. Will be flashing, use the up/down arrow keys to change the hour, press OK to accept.

Use the up/down arrow keys to change the minutes, press OK to accept.

Run Time. Will be flashing, use the up/down arrow keys to change the hours, press OK to accept.

Use the up/down arrow keys to change the minutes, press OK to accept.

Set the Fequency. A square will be flashing around 8h, use the up/down arrow keys to select the hours or days you want to water, press OK to accept.

Prog. ON will be flashing, press OK to accept.

Prog.OK will display for a brief period, showing the valve/program is now set.