

EUROMATIC



2-in-1
40 cm DC Pedestal Fan
with Remote Control

INSTRUCTION MANUAL

Model Number EUR-PF40DCR

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761



Contents

Important Safety Instructions	3
Product Overview	5
Getting Started	6
Instructions	8
Other Useful Information	10

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging. **Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**


- **Voltage:** Ensure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If this is not the case, do not use.
- **Water:** To protect against fire and electric shock, do not immerse the adaptor, plug or fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the fan. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the adaptor regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.
WARNING! Do not pick up or operate the fan if the adaptor, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. If damaged, contact our after sales support centre for advice.
- **Protect the adaptor:**
 - Do not operate the fan with the cord coiled up; always fully unwind.
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Never carry the fan by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
 - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- **Connection:** To insert the plug, grip it firmly and guide it into the outlet. Do not use more than one electrical appliance at the same time on the same outlet.
- **Disconnection:** Do not use the power button as the sole means for disconnecting power. Always unplug the fan from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.
- **Guard removal:** Ensure the fan is disconnected from the power supply before removing a front or rear guard (grille).
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.

Important Safety Instructions (Cont.)

- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30 mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.
- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, such as for drying clothes. Only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended and before cleaning and storing.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Do not operate the fan until fully assembled on the base; the fan must stand upright for operation. Do not use the appliance without the protective grilles (rear and front guards). Do not attempt to force the grille in order to stop or start the fan.
- **WARNING! DO NOT use the fan in the following areas:**
 - * near an open flame, a hot burner, oven or other source of high heat
 - * on a soft surface (such as carpet) or where it may tip over during use
 - * outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water
 - * near curtains, plants, window furnishings or where objects can become caught in the blades
 - * near a window, where rain may create an electrical hazard
 - * in areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles/housing when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Free airflow:** Ensure nothing is blocking the air outlet and intake. Do not insert objects into any opening as this may cause electric shock and/or a fire hazard.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

Product Overview

- 1 Safety guards (front and rear)
- 2 Fan blades
- 3 Control panel and display
- 4 Adaptor inlet
- 5 Neck of fan head
- 6 Tube 1 (upper tube)
- 7 Tube 2 (lower tube)
- 8 Base
- 9 Remote control (not shown).
- 10 Adaptor (not shown)
- 11 Instruction manual (not shown)

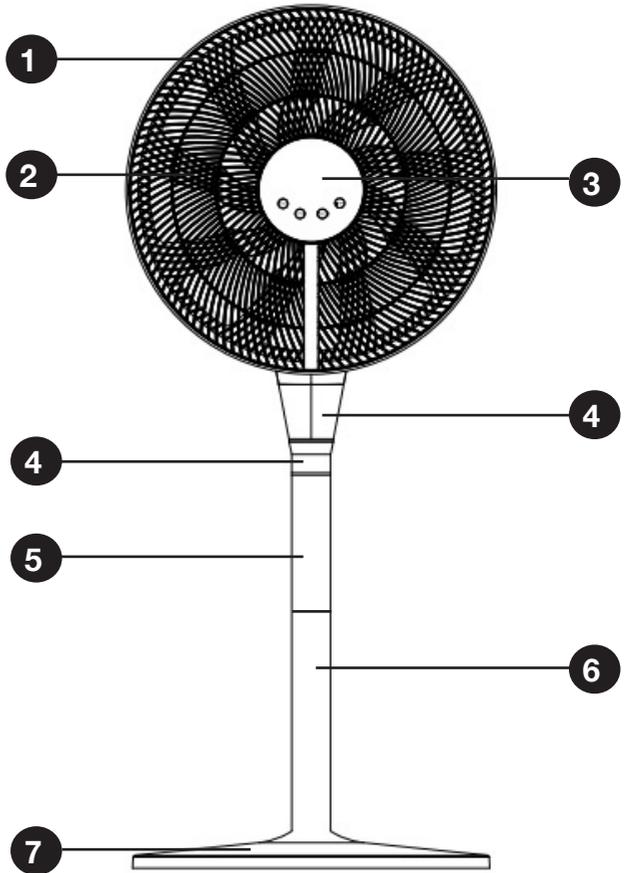

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Getting Started

Before First Use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible. **Do not discard the packaging material straight away.** Make sure you have unpacked the necessary assembly hardware for the fan head and base assembly. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the cord and inspect it for damage. Do not use the appliance if the appliance or cord has been damaged or is not working properly.
- **Documentation:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the illustrations to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Assembly:** Your new fan has been shipped partially assembled to reduce wastage of packaging material, paper cartons and weight. Assembly instructions are provided on the following pages.




WARNING: Electric shock hazard!

Do not plug the power supply cord into an electrical outlet until the fan is fully assembled.

Getting Started (Cont.)

Assembling the fan

1. Slide the lower tube into the upper tube, ensuring the small rib on the lower tube aligns to the slot on the inside of the upper tube (Fig. 1). Check that the triangle symbol is aligned to the  symbol, before turning it anticlockwise to the  position, locking it in place (Fig. 2).
2. Insert the lower tube into the hole on the fan's base, and then tighten it by screwing it into the base from below (Fig. 3).
3. Insert the neck of the fan head into the upper tube, ensuring the small rib on the neck aligns to the slot on the inside of the upper tube. Check that the triangle symbol is aligned to the  symbol, before turning it anticlockwise to the  position, locking it in place.

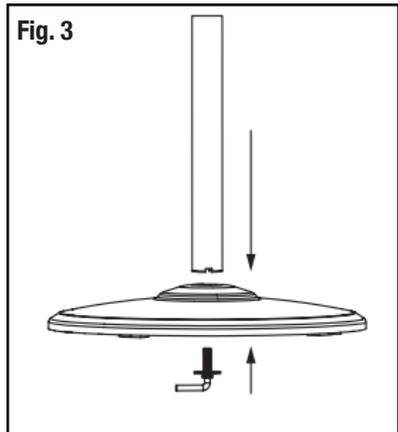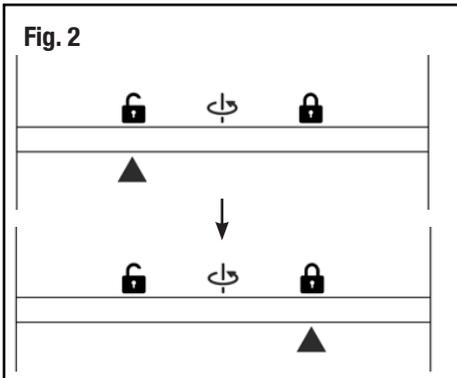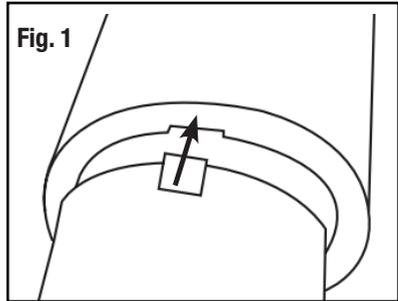

Fan height adjustment

You can adjust the fan's height if you prefer to have it lower.

1. To make the fan shorter, remove the upper tube by undoing step 1 (in "Assembling the fan"). Then, insert the neck of the fan head directly into the lower tube (without the upper tube), ensuring that the triangle symbol is aligned to the  symbol, before turning it anticlockwise to the  position, locking it in place.

Instructions

The pedestal fan features eight speeds and a swivel action head for a smooth oscillation. To use the fan, follow the simple instructions below.

Place the fan on a dry, level surface where it will not overturn during use.


Insert the adaptor into the fan, and the power plug into an appropriate electrical outlet, and then switch on the outlet.

The fan can be operated by either the control panel on the top of the fan or using the remote controller.

Control panel

The fan can be operated by the control panel (Fig. 4) located on the top of the fan.

1. The fan will sound emit a beeping sound, and the current ambient room temperature will illuminate on the display.
2. Press the POWER button to turn the fan on. The fan will automatically start operating on speed 5. Press the POWER button again to turn the fan off.
3. Press the SPEED button repeatedly to cycle between the speed levels (from one to eight). The speed level will displayed on the LED screen as follows:

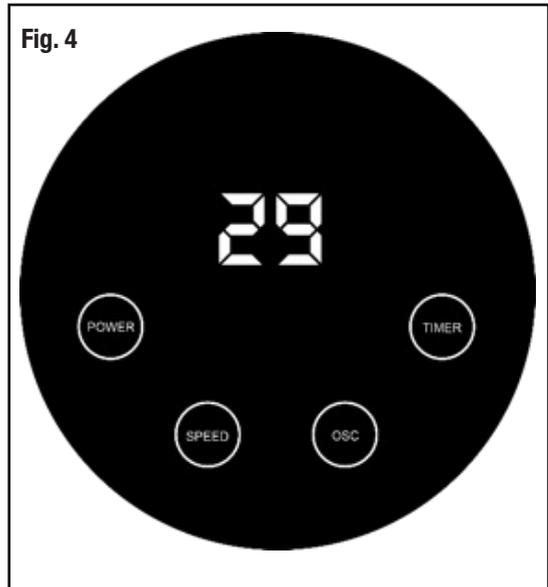

P1 / P2 / P3 / P4 / P5 / P6 / P7 / P8

4. Press the OSC button to start the oscillating function. To stop the oscillation at any point, press this button again.
5. Press the TIMER button repeatedly to set your desired automatic power-off time. You can choose any interval from 1 to 12 hours, in 1-hour increments.
NOTE: After you set the timer, it will display for a few seconds, then revert back to displaying the current speed then room temperature. To view the set timer, press the timer button once.

Please note, with each button press, the fan will emit a beeping noise.

Instructions (Cont.)

Remote control

Before using the remote control, you will need to install the batteries (see page 10). The remote controller uses two AAA batteries.

1. Point the remote control (Fig. 5) at the control panel and press the POWER button to turn the fan on. The fan will automatically start operating on speed 5. Press the POWER button again to turn the fan off.
2. Press the SPEED button repeatedly to cycle between the speed levels (from one to eight). The speed level will displayed on the LED screen as follows:
P1 / P2 / P3 / P4 / P5 / P6 / P7 / P8
3. Press the OSC button to start the oscillating function. To stop the oscillation at any point, press this button again.
4. Press the TIMER button repeatedly to set your desired automatic power-off time. You can choose any interval from 1 to 12 hours, in 1-hour increments.

Remote control operation tips:

- Ensure that the emitter at the front of the remote control is aligned with the receiving window.
- Avoid direct sunlight on the control panel, as this may affect the remote control's functionality.
- The remote control works at distances of up to approximately five metres and within a 30-degree angle to the left and right of the receptor.

Fig. 5



Other Useful Information

WARNING!

- Before cleaning, maintenance or moving the fan, and before removing a front or rear guard, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Battery replacement

When the batteries in the remote control are flat, or before longer-term storage, insert two AAA (1.5 V) batteries following the instructions below.

- Slide open the battery cover.
- Remove the old batteries (if applicable) and replace them with two fresh AAA batteries, observing the polarity markings (+ / -) in the compartment.
- Close the compartment.

Battery precautions

- Only use fresh batteries of the required size and type. Do not mix old and new, or different types of battery. Insert the batteries correctly according to the polarity markings. **Keep batteries away from children.**
- To prevent a risk of explosion, normal batteries must not be charged, heated or disposed of by burning. Do not open batteries or short-circuit them. Never subject batteries to high temperatures.
- Dispose of batteries promptly and properly, observing any local hazardous waste regulations. Do not burn or bury them.
- If battery acid has leaked, avoid contact with skin, eyes and mucous membranes to prevent injury. In the event of contact with the acid, rinse the affected areas immediately with plenty of clean water and contact a doctor at once.

Cleaning and maintenance

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear guards to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.

Other Useful Information (Cont.)

- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. Use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.
- **End of season cleaning:** When you have finished using the fan at the end of the season, wipe off any dust to maintain it in good working order for the next season. Disassemble the front grille to get access to the fan blade (remove the screw and nut and open the clips). Carefully clean the blade and guards using a mild detergent and a damp cloth. Dry thoroughly.
- **Storage:** When storing your fan in the off season, make sure to disassemble and clean the fan before storing. Follow the assembly instructions in reverse order. It is important to keep the fan in a safe, dry location, protected from dust. We recommend using the original carton for storage. If you are storing the appliance fully assembled, place a large plastic bag or piece of material over the top of the cleaned appliance for dust protection.
- **Service/repair:** The appliance requires no maintenance and contains no user-serviceable parts. Do not attempt to take the motor housing apart. Do not try to repair or modify the appliance. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact the after sales support line for advice on repair or replacement. Before phoning for a service, please ensure that your fan is properly assembled and connected to your power supply.

Other Useful Information (Cont.)

Technical specifications

Rating	24 V  1 A
Adaptor Model Number	HX25-2401000-AA
Adaptor Input	100-240 V~ 50/60 Hz 0.8 A Max
Adaptor Output	24 V  1 A
Fan Speeds	8
Dimensions (approx.)	400 x 380 x 1300 mm
Weight (approx.)	3.5 kg

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.



This marking indicates that the appliance is suitable for use in tropical climates under ambient temperatures of 18 °C to 43 °C.



This marking indicates only to use this fan with the supplied adaptor HX25-2401000-AA.

Responsible disposal



Packaging materials are recyclable. Please dispose of them responsibly for recycling.

At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.

Do not throw this appliance out with your household waste. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.



Contact your local authorities for advice on recycling facilities in your area. Or find recycling scheme services listed on Planet Ark's website at www.recyclingnearyou.com.au, or call Planet Ark on 1300 733 712.

This page has been left blank intentionally.

This page has been left blank intentionally.

This page has been left blank intentionally.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6097, North Sydney 2059, NSW Australia

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Web support: tempo.org/support

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.1

Issue Date: June 2024

After Sales Support

 (AU) 1300 886 649 (NZ) 0800 836 761 |  tempo.org/support