





# WOOSHKA

---

## USER GUIDE

**OUTDOOR USE ONLY**









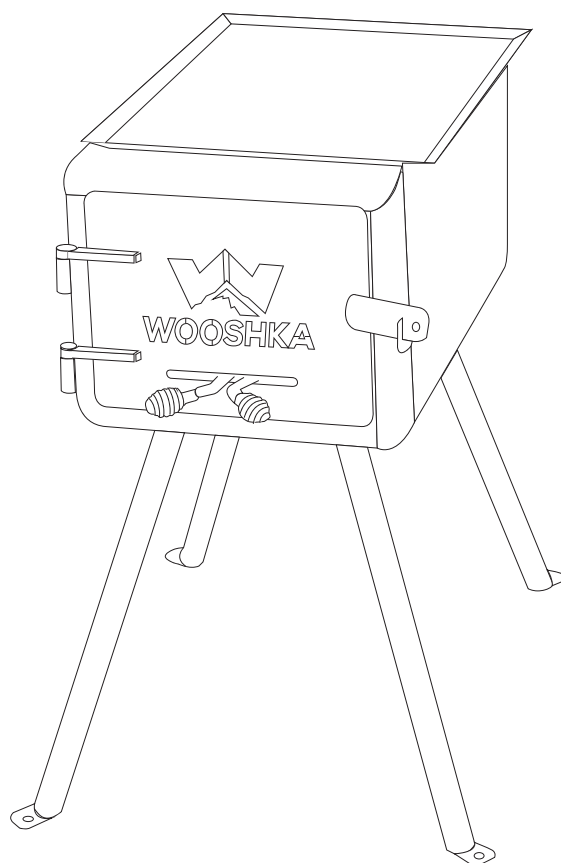
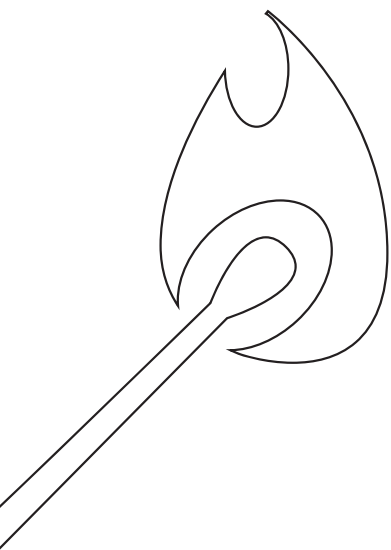


Version 1.1

**Wooshka Pty Ltd**

      **Head Office**  
58-62 Access Way,  
Carrum Downs, VIC 3201  
Australia

**+61 3 5792 2388**  
**[www.wooshka.co](http://www.wooshka.co)**

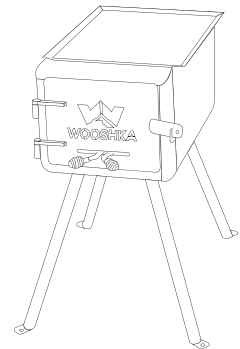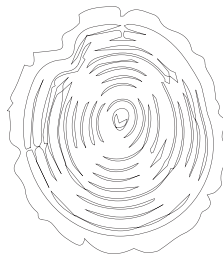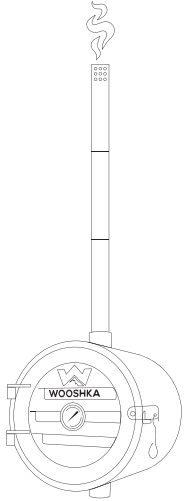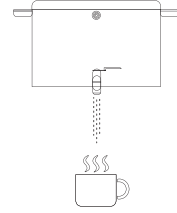

#wooshkawanderer

# CONTENTS

<b>What's in the bag</b>	<b>1</b>
Optional Accessories	
<b>Wooshka assembly instructions</b>	<b>2</b>
Leg assembly instructions	
Door assembly instructions	<b>3</b>
Fire grate assembly instructions	
Flue assembly instructions	<b>4</b>
Flat/grill assembly instructions	<b>5</b>
Motorised Rotisserie Set assembly instructions	
Utensil / Accessory Holder assembly instructions	
Hot Water Boiler assembly instructions	<b>6</b>
<b>Fuel</b>	
<b>Lighting your Wooshka</b>	<b>7</b>
<b>Storage</b>	
<b>Care and Maintenance</b>	
<b>Warranty</b>	<b>8</b>



# WHAT'S IN THE BAG?

Default unit inclusions:




**WOOD FIRED OUTDOOR STOVE WITH FIRE GRATE**


SCCS001



**TRAVEL BAG**

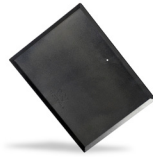

**FLAT PLATE**

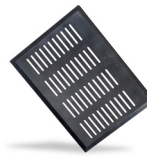

**GRILL PLATE**



**FLUE WITH SPARK ARRESTOR**



**KEYS**

# OPTIONAL ACCESSORIES

These accessories are not included with the default unit but can be purchased separately from your local Wooshka retailer.



**CHARCOAL & BEAD BASKET**

SCCS106



**DUTCH OVEN / WOK ADAPTER**

SCCS107



**HOT WATER BOILER**

SCCS102



**UTENSIL /ACCESSORY HOLDER**

SCCS109

Tongs and billy can for illustrative purposes only. Not included in the Wooshka range



**FLUE OVEN WITH 3 x ROASTING TRAYS**

SCCS104



**DUTCH OVEN**

SCDO001



**MOTORISED ROTISSERIE SET**

SCCS105

# WOOSKA WOOD FIRED OUTDOOR STOVE

## Leg assembly instructions



To assemble the legs, place camp stove on its side



Locate the legs and turn anti-clockwise to lock into place



To ensure the legs are stable, insert key



Turn the key to lock into place, continue these steps for all four legs.



It is very important to ensure the keys are used to lock the legs into place. Failure to do so could put the unit at risk of falling

## Door assembly instructions



To install the door, simply locate door pins



## Fire grate instructions



To install the fire grate, insert diagonally into the firebox.



Ensure both sides are resting on the lip in order to have a gap below the fire



## Flue assembly instructions



Insert elbow bend into flue opening located behind the outdoor stove



Rotate elbow bend clockwise to lock into place



To ensure the flue doesn't fall insert key



Rotate key clockwise to lock into place



If installing the flue oven, it must be installed above the elbow bend.



Connect all of the provided flue pieces. It is important that all extensions are used.



Connect the spark arrester. This reduces the risk of hot embers leaving the flue.



Lastly, connect complete flue assembly to the elbow bend or top of flue oven depending on configuration.

## Flat/grill plate



Insert locating tab onto side of the firebox



Flat / grill plates can also be used over the firebox

## Motorised rotisserie set



Fit rotisserie support bracket to the front left hand side of the firebox. Wooshka rotisserie bracket height can be adjusted relative to the heat required.



Fit rotisserie control box onto the Wooshka rotisserie bracket and position on the right rear side of firebox. Insert rotisserie pole into the rotisserie control box. Ensure both brackets are even in height.



To operate the rotisserie control box, remove cover and insert 2 x D size batteries. Turn on by flicking the on/off switch.

## Utensil / Accessory Holder



Attach Wooshka utensil bracket



Insert inter-connecting poles into bracket to desired height




Slide hooks over pole



Hooks can be adjusted to the desired height by gently releasing the pressure from the pole



## Hot water boiler

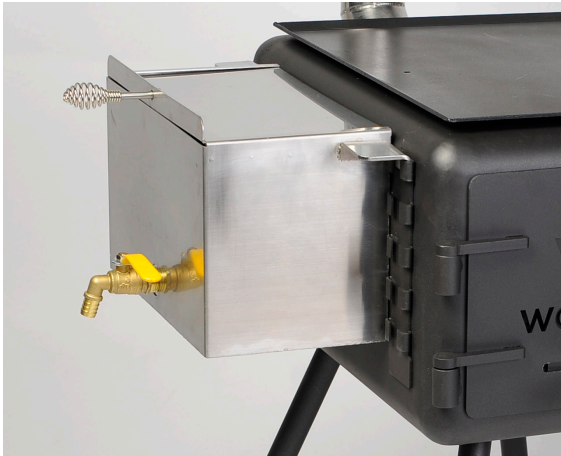

Before use, remove protective plastic lining from inside the hot water boiler. Attach hot water boiler to the side of the firebox at the desired height. Using the wire handle on the lid, gently slide open and fill with clean, fresh water. We recommend leaving a 50mm gap from the top of the water level to the lid. When water reaches desired temperature, it can be decanted using the tap.



The hot water boiler can be stored inside the firebox. Simply unscrew the handle from the lid and place it inside the hot water boiler for storage.

### **SAFETY PRECAUTIONS WHEN USING THE HOT WATER BOILER:**

- Always operate hot water boiler on a flat, level surface.
- Before use, remove protective plastic lining from inside the hot water boiler.
- Boiling water will scald. Do not leave hot water boiler unattended around children or pets.
- Boiling water may be ejected, if overfilled.
- Do not open lid while water is boiling.
- During use, the hot water boiler will be very hot to touch. Ensure children and pets are kept at a safe distance.
- Do not let the water boiler "run dry".

### **FUEL**

Your Wooshka is designed to burn dry wood only. It is NOT designed to burn the following:

- Treated or painted wood
- Paper or cardboard, other than small amounts used to light stove.
- Plastics
- Synthetic fuel or logs that are not approved for solid fuel stoves
- Household rubbish
- Liquid fuels

Burning these or other products for which Wooshka was not designed may damage the unit and cause a fire hazard or release toxic fumes. Fuel should be stored in a dry place. Wet wood may cause serious creosote, which may damage your flue and even your Wooshka. Therefore the use of wet wood is strongly discouraged.

## LIGHTING WOOSHKA

You will require:

Kindling, dry firewood cut to small pieces no thicker than 60mm diameter & 300mm long, newspaper/fire starters (if required), matches/lighter.

1. Set up Wooshka on a level surface before starting the fire (Tent pegs can be inserted into feet for additional support.)
2. Place newspaper/fire starters in the firebox
3. Sit kindling over the newspaper/firestarters
4. To help the fire ignite, leave the door and top open to allow air circulation
5. Once the kindling starts to burn, slowly start feeding firewood until you have created a coal base
6. Once the fire is well established you can begin add the desired accessories

## STORAGE

Ensure that all hot ash/coals are removed from the firebox safely.

Ensure your Wooshka is cooled before packing away for transport or storage.

## CARE AND MAINTENANCE

Enjoy many years with your Wooshka by following some simple care and maintenance steps: To prevent light surface rust, ensure that you regularly coat the outside of the firebox, flue pieces, and cooking plates with food-grade oil. While the unit is still warm, use a soft cloth or paper towel to rub the oil into the stove and accessories. Before storing your unit for any length of time, make sure the unit is completely cooled and dry. If left outdoors, ensure that the unit is covered and protected from the weather. We recommend placing a silica based moisture absorbency product in with your appliance to minimise the risk of rust.

Before re-lighting your Wooshka, leave a small amount of ash under the internal fire grate, ensuring there is adequate air flow providing plenty of oxygen to the fire.

### IMPORTANT:

- Ensure you can light a fire in the area you are camping.
- Wooshka is strictly for outdoor use only.
- To extend the life of your Wooshka grill/flat plates, we recommend covering the surface with aluminium foil before cooking on them.
- For cooking, stick with wooden spoons or silicone spatulas. Using sharp objects like, knives or metal spatulas can scratch and damage the coating on the cooking plates.
- Do not use your Wooshka unless fully assembled.
- Never leave Wooshka unattended and in case of an emergency, keep a bucket of water in close proximity to the unit.
- It is also recommended to use heat proof gloves when operating the unit
- It is recommended that you keep young children and pets away from Wooshka.  
You may choose to use a fire guard or a barrier to keep small children and pets at a safe distance.

# WARRANTY

## SCANDIA LIMITED WARRANTY

This limited warranty is given by Scandia Heating (Aust) Pty Ltd (ACN 005 868 093) (Scandia or we) to the original retail purchaser (you) of the product to which this Warranty applies.

**Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

The benefits that this Warranty provides are in addition to other rights and remedies available to you under the Australian Consumer Law. This Warranty does not limit those rights and remedies.

## SCOPE OF WARRANTY

If a defect in material or workmanship appears in the following parts within the corresponding warranty period after the date of the original purchase, such as to make the product unfit for normal home use; and you comply with the requirements below regarding making a claim, then, subject to the exclusions below, we will replace or repair the relevant part or (at our option) replace the entire product with the same model.

PART	WARRANTY PERIOD
Wooshka wood fired outdoor stove & accessories	12 Months

**To the extent permitted by law, our liability under this Warranty is limited to this replacement or repair obligation.**

## EXCLUSIONS

This Warranty does not apply:

1. Where the defect is not due to the original design or manufacture of the part (including where the product, part or accessory has been subject to accident, abuse, alteration, misuse or neglect or has been installed, inspected, operated or maintained negligently or not in accordance with applicable local laws and regulations and the manufacturer's printed instructions, if any)
2. To any accessories or optional parts
3. To any surface rust which may occur in transit, storage or use

## HOW TO MAKE A CLAIM

Any claim under this Warranty must be in writing to our mail address below. It must be sent within the applicable warranty period and must state:

1. The model of the product, part or accessory
2. The place, price and date of purchase
3. Reasonable details of the defect

To obtain replacement or repair under this Warranty, the product must be returned to the original place of purchase (and collected from there once the replacement or repair is complete) at your cost. Wooshka will not be responsible for any associated freight, disconnection or re-installation costs (including labour costs). Wooshka will only be responsible for transport of the product from the original place of purchase to Wooshka's premises (and back), and replacement or repair in accordance with this Warranty.



## IMPORTANT

For this Warranty to apply, you must fully complete the Warranty Registration Form via [scandiaheating.com.au/warranty](https://scandiaheating.com.au/warranty). Alternatively you can complete the Warranty Registration Card and mail it to our mail address (below) within 30 days after the original purchase. By completing this form, you also agree that, to the extent permitted by law, our liability to you on any basis in relation to the wood heater (other than under the Australian Consumer Law) is limited to our obligations under this Warranty.