

ozito

80 SERIES AIR STAPLER


12.8mm

INSTRUCTION MANUAL


SPECIFICATIONS

Min. Pressure:	60PSI
Max Pressure:	120PSI
Magazine Capacity:	140 Staples
Staple Type:	12.8mm
Staple Length:	6-16mm
Air Inlet:	1/4" BSP


ozito.com.au

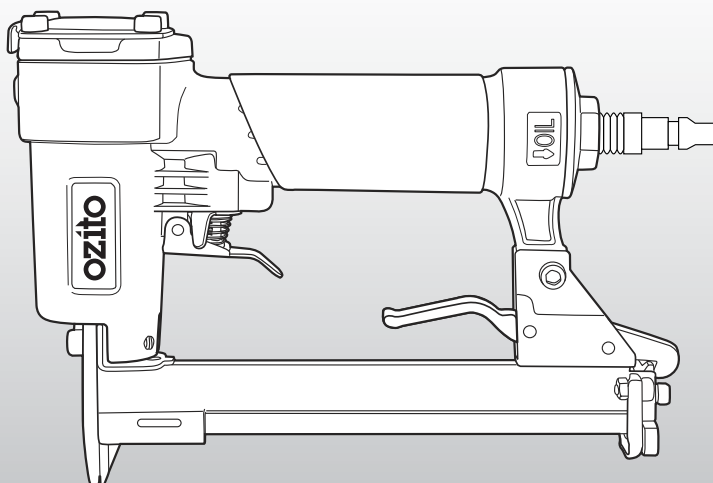


STANDARD EQUIPMENT

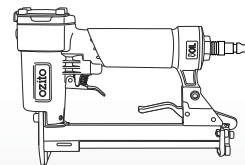

Air Stapler

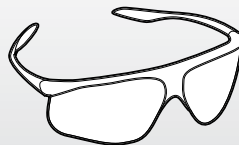

Safety Goggles

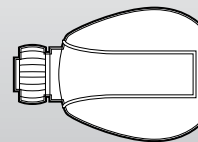

Oil Pot



Hex Keys

3

YEAR REPLACEMENT WARRANTY

RSG-PRO

WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

Australia 1800 069 486

New Zealand 0508 069 486

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

3 YEAR REPLACEMENT WARRANTY

Your product is guaranteed for a period of **36 months from the original date of purchase** and is intended for DIY (Do It Yourself) use only. If a product is defective it will be replaced in accordance with the terms of this warranty. Warranty excludes consumable parts.

WARNING


The following actions will result in the warranty being void.

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.
- Professional, industrial or high frequency use.

KNOW YOUR PRODUCT


AIR STAPLER

- | | |
|--------------------|-----------------------|
| 1 Striker Pin | 5 Magazine |
| 2 Trigger Lock-off | 6 Magazine Release |
| 3 Trigger | 7 Air Inlet Connector |
| 4 Handle | |

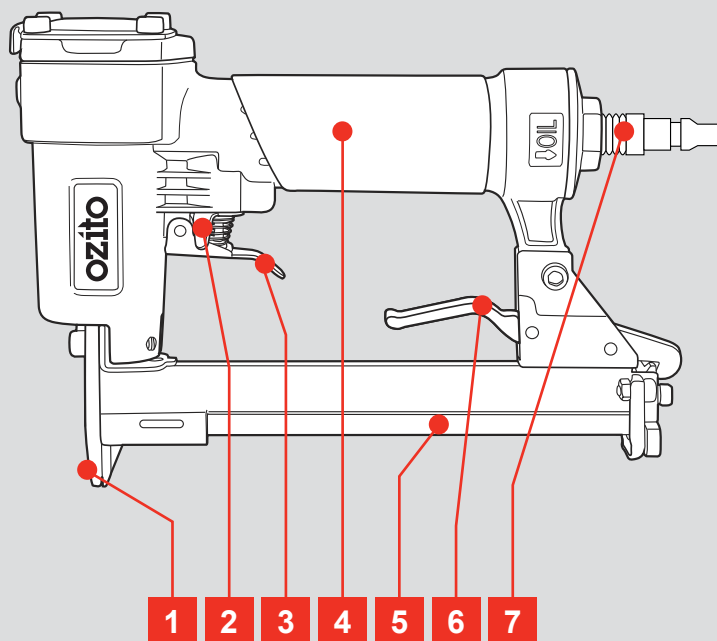

ACCESSORIES

- | | |
|------------------|-------------------------|
| 8 Safety Goggles | 10 Hex Keys (3 and 4mm) |
| 9 Oil Pot | |

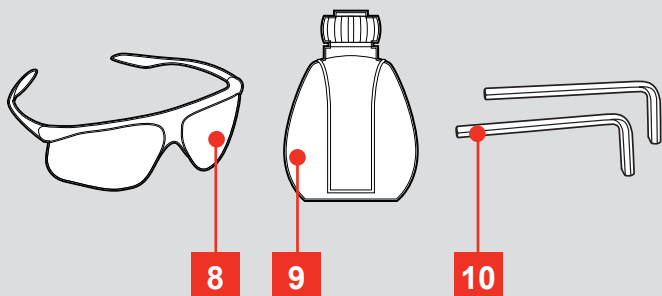

ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.





SETUP & PREPARATION

1. CONNECTING AIR SUPPLY



WARNING! ENSURE THE TOOL IS DISCONNECTED FROM THE AIR SUPPLY BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.

- | | |
|--|---|
| 1 Remove the black plastic cap from air inlet. | 2 Pull back the sleeve on hose fitting, insert male end and release sleeve on hose fitting. |
|--|---|

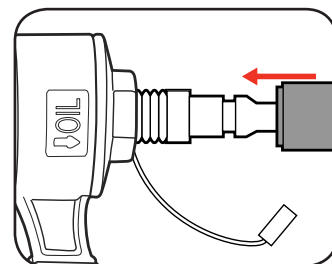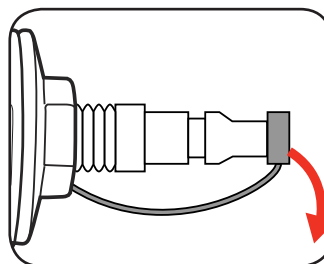

WARNING! ENSURE THAT THE COMPRESSOR PRESSURE DOES NOT EXCEED 120PSI.


3

YEAR REPLACEMENT WARRANTY


OPERATION

2. LOADING STAPLES


1. Squeeze the magazine release and pull the magazine away from the tool.

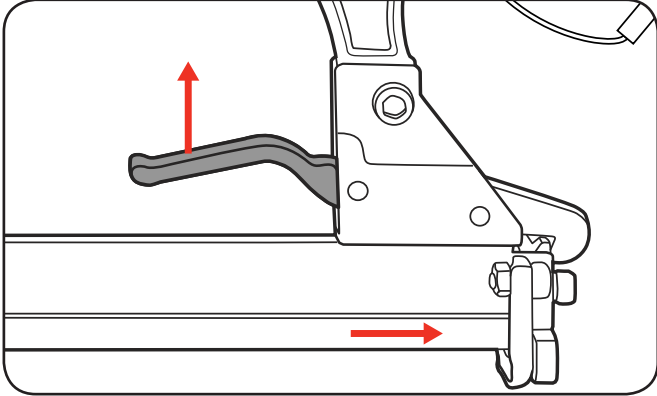

2. Place a row of staples into the middle of the magazine so that the staples fit comfortably in the inner chamber.

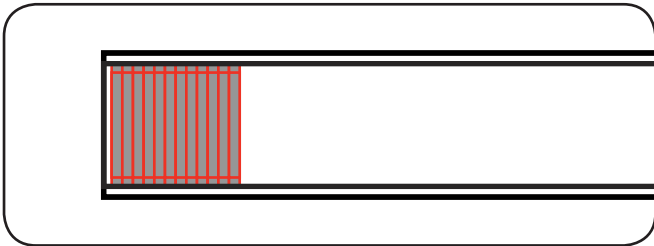

3. Close the magazine, ensuring it clicks into place.

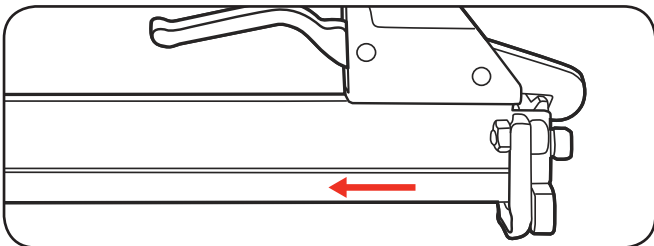


NOTE: IF THE MAGAZINE WILL NOT CLOSE, THE MAGAZINE MAY BE OVER CAPACITY. REMOVE SOME STAPLES THEN TRY TO CLOSE AGAIN.

3. CONTROLS


Trigger Lock-off

1. To prevent the stapler from firing, rotate the trigger lock-off so that it stops the trigger from being pressed.

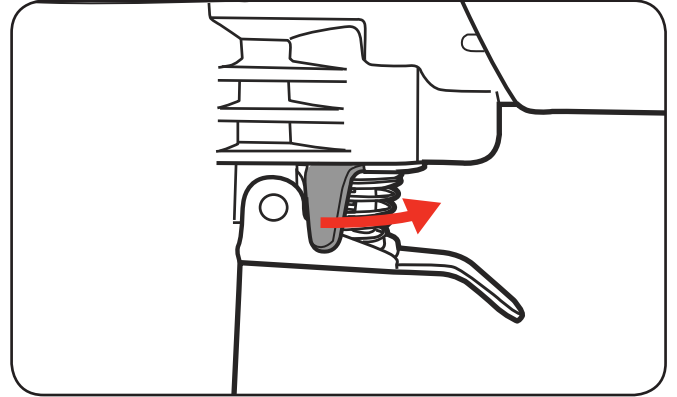

Trigger


1. To fire the stapler simply squeeze the trigger.

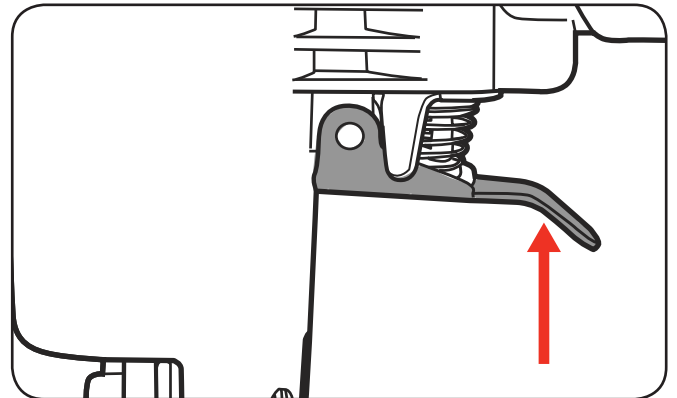


Note: The stapler will only fire once if the trigger is held up. The trigger must be released to fire a second staple.

4. OPERATING THE STAPLE GUN


1. Place the staple gun against the work surface so that the nosepiece of the tool is where you want the staple to be located.

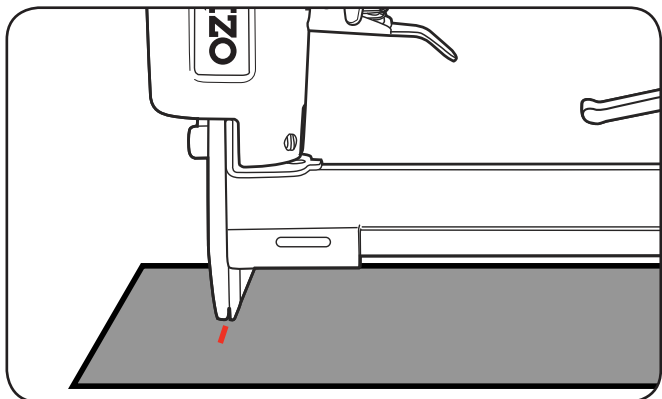

2. Push the tool firmly down on the work surface.

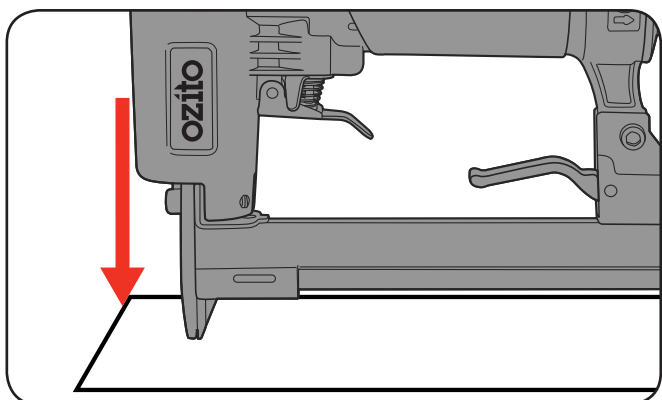

3. Squeeze the trigger to fire a staple.

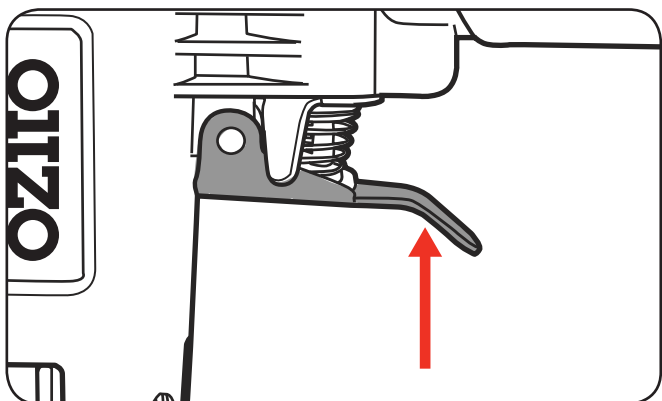


5. TROUBLESHOOTING


WARNING! ENSURE THE TOOL IS DISCONNECTED FROM THE AIR SUPPLY BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.

Clearing Jammed Staples

1. Remove the two Hex screws from the front of the staple gun using the supplied 4mm Hex key.

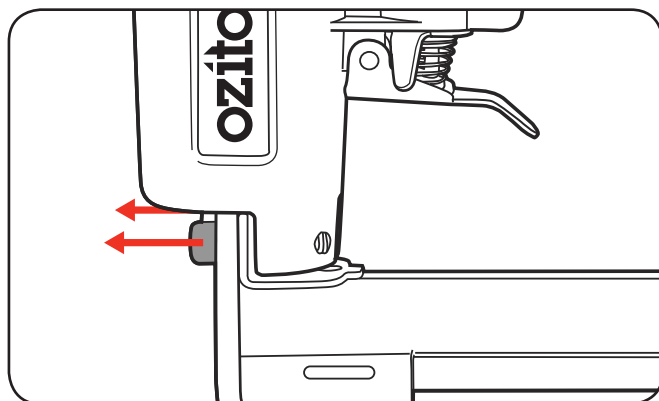


2. Remove the front plate that was held in by the two screws.

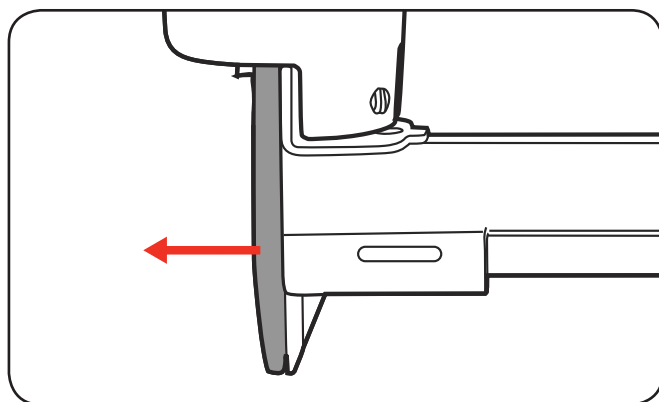

3. The jammed staple should fall out. If not, use a pair of pliers to securely grip and remove.



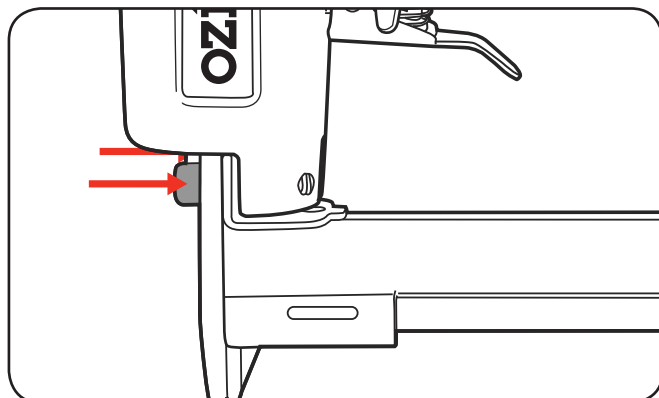


4. Reassemble by placing the plate back on and tightening the two Hex screws.



MAINTENANCE

- Keep the ventilation vents of the staple gun clean at all times, if possible, prevent foreign matter from entering the vents.
- If the enclosure of the staple gun requires cleaning, do not use solvents but a moist soft cloth only. Never let any liquid get inside the staple gun; never immerse any part of the staple gun into a liquid.
- **Oil after each use.** This will reduce corrosion of the staple gun and ensure tool longevity.

DESCRIPTION OF SYMBOLS

	Warning		Read instruction manual
	Wear ear protection		Wear eye protection
/min	Revolutions or reciprocation per minute		No load speed

CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

TROUBLESHOOTING

Staple gun does not fire

Check that the trigger lock-off is not preventing the trigger from being pressed. If the trigger lock-off is out of the way and the gun still does not fire, you may have a jammed staple. Follow the instruction in this manual to remove the jam.

Ensure sufficient air pressure (within 70-120PSI)

The magazine will not close

The magazine catch may not be sliding out of the way, simply hold down the magazine release lever and slide the magazine in. Ensure that the magazine is secure.

The magazine chamber may be over capacity. Remove some nails/ staples then try to close the magazine again.

SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.

For further information, or any parts not listed here, visit www.ozito.com.au or contact Ozito Customer Service:

Australia 1800 069 486

New Zealand 0508 069 486

E-mail: enquires@ozito.com.au



GENERAL AIR TOOL SAFETY WARNINGS



WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety

- Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- Check the maximum pressure rating of any tools or accessories that you intend using with the compressor. The output pressure of the air from the compressor must be regulated so that it never exceeds the rated pressure of the tool or accessory.
- Always wear safety goggles or glasses when using the air tools. Never point the nozzle of an accessory towards any part of your body or towards another person.
- Drain the moisture from the tank daily.** It will help prevent corrosion.
- The tool must be used only for its prescribed purpose. Any use other than those mentioned in this Manual will be considered a case of misuse. The user and not the manufacturer shall be liable for any damage or injury resulting from such cases of misuse.



WARNING! In the event that an air line is cut or broken, the air supply must be turned off at the compressor. A broken air line which is not supported is extremely dangerous and can whip around very quickly, both with the capability of striking people, and blowing foreign particles into the air.

- Do not attempt to catch the air line but immediately keep bystanders well clear and turn off the air supply to the hose, turn off the compressor at the On / Off button, and then remove the hose from the compressor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given the supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



NAILER SAFETY WARNINGS

- Always assume that the tool contains fasteners.** Careless handling of the stapler can result in unexpected firing of fasteners and personal injury.
- Do not point the tool towards yourself or anyone nearby.** Unexpected triggering will discharge the fastener causing an injury.
- Do not actuate the tool unless the tool is placed firmly against the workpiece.** If the tool is not in contact with the workpiece, the fastener may be deflected away from your target.
- Disconnect the tool from the air supply when the fastener jams in the tool.** While removing a jammed fastener, the nailer or stapler may be accidentally activated if it is connected to the air supply.
- Do not use this stapler for fastening electrical cables.** It is not designed for electric cable installation and may damage the insulation of electric cables thereby causing electric shock or fire hazards.



TOOL OIL SAFETY WARNINGS

DIRECTIONS:

- Unscrew cap, pull out & invert nozzle.
- Replace cap & cut tip off nozzle.
- Apply small amount of oil in air intake.
- Run air tool to spread oil in tool.

SAFETY DIRECTIONS:


Do not swallow

FIRST AID:

For advice, contact a Poisons Information Centre (Australia 13 11 26; New Zealand 0800 764 766) or a doctor (at once). If swallowed, do NOT induce vomiting.

STAPLE/NAIL COMPATIBILITY

The RSG-PRO accepts staples with the below measurements

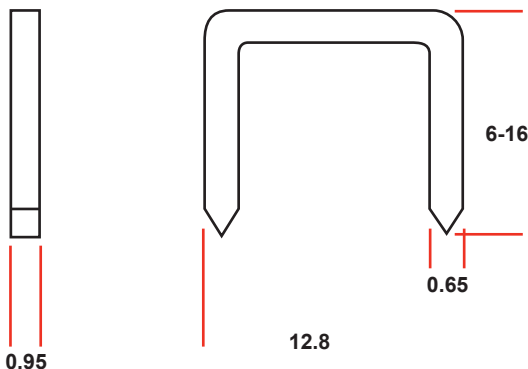

Note: All measurements are in mm.

PLEASE NOTE: The RSG-PRO does not accept cable or round “U” shaped nails. Only attempt to use staples with the measurements outlined in this manual.