


EUROMATIC

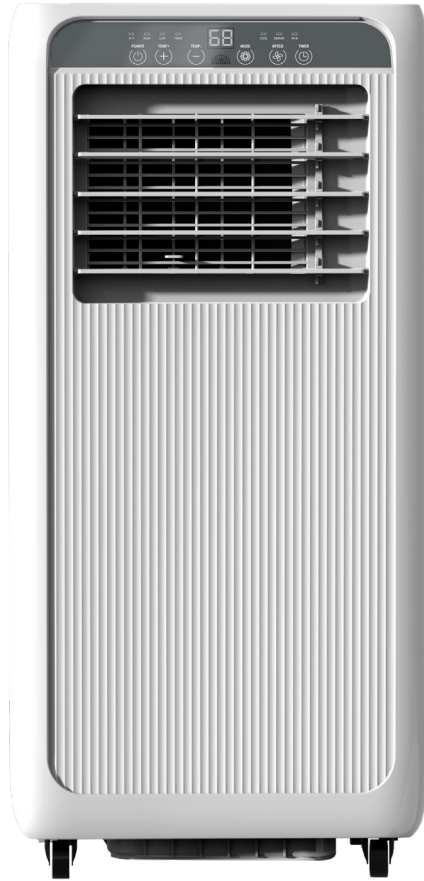

2.63 kW Portable Air Conditioner With Dehumidifier

USER MANUAL

Model Number PAC26KW

After Sales Support

(AU) 1300 886 649 (NZ) 0800 836 761 | tempo.org/support



Contents

Important Safety Instructions	3
Product Overview	8
Getting Started	9
Installation	10
Instructions	13
FAQs and Troubleshooting Guide	17
Other Useful Information	18

Important Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the warranty card and purchase receipt. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical Safety and Cord Handling

- **Electrical connection:** The unit comes with a plug ready for connection to your mains power outlet.
- **Voltage:** Before turning on the air conditioner, ensure the electrical voltage and circuit frequency correspond to those indicated on the appliance.
- **Socket:** Ensure your electrical outlet is properly installed and earthed and complies with your local electrical safety requirements.
- **Moisture:** To reduce the risk of electrocution, never operate the appliance with wet hands; never submerge it in water or spill liquids into it. Do not use it in a bathroom or laundry, or where it can be splashed with water.
- **Power supply cord:** Do not kink or damage the cord. Do not pull the cord or place it near a heat source. Always unwind the cord completely to avoid overheating. Run the cord in such a way so that no one will trip over it.
- **Extension cord/adaptor:** Do not use this appliance with an extension cord or power adaptor.
- **Damage:** If the supply cord (or any other part of the appliance) is damaged, do not use the appliance. A damaged power supply cord must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Contact our after sales support centre.
- **WARNING: Do not use when damaged!** In case of damage, switch off the appliance, unplug it and contact our after sales support centre. Do not pick up or operate a damaged appliance, or after it malfunctions or has been dropped or damaged in any manner.
- **Switching on/off:** Do not use the mains plug to start and stop the unit; always use the POWER button to start and stop the unit.
- **Disconnect:** Turn off the unit first and then unplug it when it is not in use and before maintenance or cleaning, but do not unplug it when it is in operation, as this could create a spark and cause a fire. Grip by the plug, do not pull by the cord when disconnecting.
- **RCD:** The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30 mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Important Safety Instructions (Cont.)

Usage Conditions and Restrictions

- **Intended use:** This appliance is intended for air conditioning domestic environments. It is not suitable for commercial, industrial or trade use. Do not use it for any other purpose (such as drying clothes, cooling food, etc.), and only use it as described in this manual.
- **Common sense:** These instructions are not intended to cover every possible condition and situation. As with any electrical appliance, common sense and caution are therefore always recommended when installing, operating and maintaining the unit.
- **No outdoor use:** Do not use the unit outdoors. It is for indoor use only.
- **Usage restriction:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **No external timer:** This appliance is not intended to be used with an external timer or a separate remote control system.
- **WARNING: Do not cover!** Do not cover the air conditioner or obstruct any air inlet or outlet grilles. Obstructing these openings causes a fire hazard, reduces the operating efficiency and may lead to malfunction or damage.
- **Air outlets:** Do not insert any objects, or your fingers, into the air outlet, and make sure to warn children of the dangers.
- **Children:** Supervise children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children. Cleaning and user maintenance shall not be made by children without supervision.
- **Unattended:** Do not leave the appliance unattended when in use.
- **Attachments:** The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- **Start-up settings:** Set the unit to maximum cooling and high speed ventilation for the initial startup, then adjust the unit down to a more comfortable setting as required.
- **Airflow:** Do not direct the airflow onto plants or animals, as long and direct exposure to cold air from the air conditioner could adversely affect them.
- **Cold air exposure:** Never remain directly exposed to the flow of cold air for a long time, as direct and prolonged exposure to cold air from the air conditioner could be dangerous for your health. Take particular care in rooms where there are children, old, or sick people.
- **Moving the appliance:** When moving the air conditioner, always turn it off first and disconnect the power supply, and move it slowly. Keep the unit upward during transport and storage.

Cleaning and Maintenance

- **Disconnect:** Make sure the appliance is disconnected from the power supply when it will not be used for a long time and before carrying out any cleaning or maintenance.
- **Air filter:** Keep the air filter clean. Do not use the unit without the air filter fitted. Using it without air filter could cause an excessive accumulation of dust or waste on the inner parts of the device with possible subsequent failures.
- **Unplug the appliance immediately** if you notice any smoke, odour or strange sounds coming from the unit. Call for a service.

Important Safety Instructions (Cont.)

- **Service and repair:** The air conditioner has no user-serviceable parts contained inside. Do not attempt to disassemble, modify or conduct repairs on this unit. It has been built in accordance with relevant safety and performance standards. An electrical specialist must carry out all repairs. Contact our after sales support centre for advice on service.
- **Risk of fire:** This appliance contains a flammable refrigerant. Do not open the appliance. In case of damage or malfunction, turn off the appliance, disconnect the power supply and call our after sales support centre for a service.

Installation

- **Proper installation:** Install the appliance according to the instructions in this manual and national wiring regulations. Improper installation may result in the risk of fire, electric shock and/or injury.
- The air extraction opening from the room shall be as low as practicable. The air extraction openings shall be located in a sufficient distance from the air intake openings to prevent re-circulation to the space.
- **WARNING: Electric shock hazard!** Before installation or servicing, ensure the unit is switched off and disconnected from the power outlet to prevent possible injury.
- **The location:** When deciding on an installation place, keep in mind that the area must be flat, the air outlets must not be covered up, and there must be a properly earthed 220–240 V~ 50 Hz power outlet nearby.
- **Do NOT install/use the appliance in the following areas:**
 - Outdoors or where water is likely to splash
 - Near a bath, shower, laundry basin or swimming pool
 - In an area where oil is likely to splash
 - Near a hot gas or electric burner, or sources of fire
 - Near sources of heat, or exposed to direct sunlight
 - In an area where furniture or other objects can obstruct the airflow
 - In the presence of flammable substances or vapour such as alcohol, insecticides, petrol, etc.
 - At a dry cleaner's premises.
- **Clearances:** There must be a clearance of at least 30 cm between the appliance and any walls, furniture, curtains or any other obstacles. Maintaining this minimum 30 cm clearance is essential; failure to keep that distance can result in the unit malfunctioning or causing injury.
- **Window application:** The air exhaust can be installed in a vertical or horizontal sliding window.
- **Air exhaust installation instructions** follow on pages 10-12. Keep the length of the air exhaust hose to the minimum length necessary during operation.
- **Upright position:** Place the unit on a flat surface to reduce the risk of it tipping over. Do not tilt the unit, always keep it upright during installation and use.
- **Misuse:** We accept no responsibility for any eventual injuries or damages caused by improper installation, faulty use or failure to follow the instructions.

Pressure Specifications

Permissible excessive operating pressure: discharge 2.5 MPa, suction 1.2 MPa.

Maximum allowable pressure: 4.2 MPa.

Important Safety Instructions (Cont.)

Important Safety Precautions Concerning Refrigerant R290

WARNING: Combustible & Dangerous



This symbol alerts you to take care as the appliance contains a flammable refrigerant: R290 (propane). Take extra care when installing the unit and when carrying out maintenance. R290 is a colourless and odourless hydrocarbon gas. It is an efficient refrigerant with a low Global Warming Potential (GWP) and no potential for ozone depletion.

While R290 is highly flammable, there will be no risk of burning and explosion if the appliance is properly installed and maintained following all instructions and safety advice in the supplied manuals.



Read technical manual



Read operator's manual



Read operating instructions

WARNING!

- The room in which this air conditioner is installed must have a minimum area of more than 7.7 m². (This unit is designed for use in a room of approximately 10-18 m² size.)
- The appliance shall be stored in a well-ventilated area without continuously operating ignition sources, such as open flames, an operating ignition gas appliance or an operating electric heater. Do not expose the appliance to high heat, sparks and open flames.
- Do not pierce or burn the appliance.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- Be aware that refrigerants may not contain an odour.
- The ratings of the fuse installed in the built-in control unit are T, 2 AL, 250 V~.
- This air conditioner has been fully charged with refrigerant at the factory. Should a recharge become necessary, it may only be recharged by a professional installer.
- Maintenance must only be carried out by properly qualified, authorised personnel. If the appliance requires maintenance or service, contact our after sales support centre.
- **WARNING:** Ducts connected to an appliance shall not contain a potential ignition source.
- **The service technician must strictly comply with:**
 - All safety instructions in the manual provided with the appliance
 - All relevant provisions of gas-related local laws and regulations.
- **After servicing the appliance, the service technician must:**
 - Check that air cannot enter the refrigerant system
 - Check for refrigerant leaks when moving the air conditioner
 - Carry out a test cycle under controlled conditions after installing the unit and record the operating data.

Important Safety Instructions (Cont.)


Disposal

- This air conditioner contains a flammable refrigerant, which must be removed before disposal. Contact your municipal authorities for any codes or regulations concerning the disposal of such materials.
- At the end of its working life, do not throw this appliance out with your household waste. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant.


Product Overview

Scope of Delivery

Front View

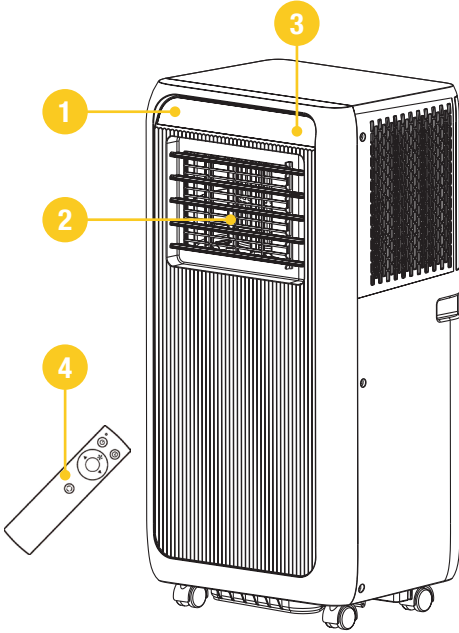

Back View

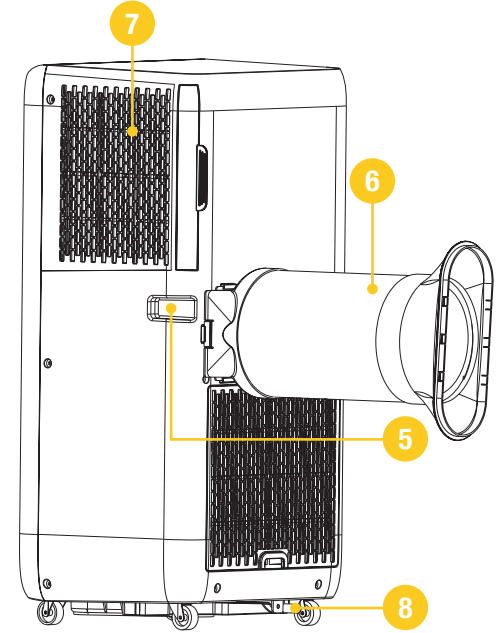


Portable Air Conditioner

1. Control Panel
2. Cold Air Outlet
3. Signal Receptor
4. Remote Control
5. Transport Handle
6. Exhaust Duct
7. Evaporator Inlet
8. Drain

Accessories

9. Air Exhaust Duct
10. Air Exhaust Duct Adaptor
11. Window Exhaust Adaptor
12. Baffle Plate
13. Drain Hose (Not Shown)
14. Screw Set (Not Shown)

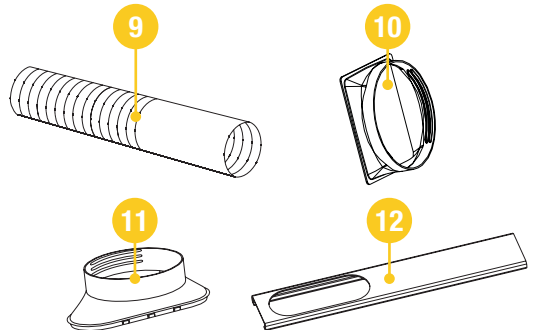

Documentation (Not Shown)

- User Manual
- Service Manual
- Warranty Certificate

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Getting Started

Before You Start

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are kept out of their reach and disposed of safely.
- **Inspection:** Unwind the cord fully and inspect it for damage. Do not use if any part of the appliance is damaged. In case of damage, contact our after sales support centre for advice.
- **Documentation:** Read the manual to familiarise yourself with all parts and operating principles of the portable air conditioner. Pay particular attention to the safety instructions on the previous pages.

Electric Shock Hazard!

Before installation, cleaning or servicing, ensure the unit is switched off and disconnected from the power outlet to prevent possible injury.

Installation

Positioning the Air Conditioner


Keep the unit upright for at least two hours before installation.

- This portable air conditioner is designed for rooms up to 18m² in size.
- Do not install or use the air conditioning in the bathroom or other humid environments.
- In cooling mode, the appliance must be positioned close to a window or opening so that the warm exhaust air can be ducted outside.
- Place the air conditioner on a flat surface.
- Can be easily moved, but while moving it, ensure to keep the appliance in an upright position.
- Make sure there is a minimum of 60 cm clearance around the unit.
- The air outlet or intake cannot be blocked by a protective grid or any obstacle.


Installing the Air Conditioner Hose

The unit must be stood upright at all times. Position it on a flat floor where it is within reach of a switched power outlet.

Extend the air exhaust duct by drawing out both ends (Fig 1).

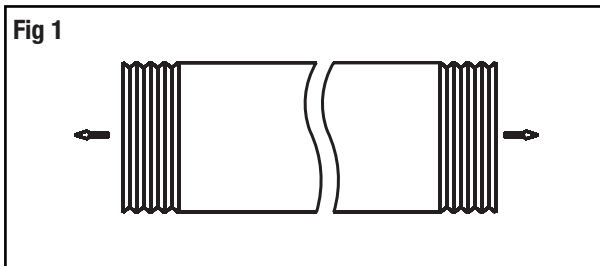


Screw the air exhaust duct into the air exhaust duct adaptor (Fig 2).

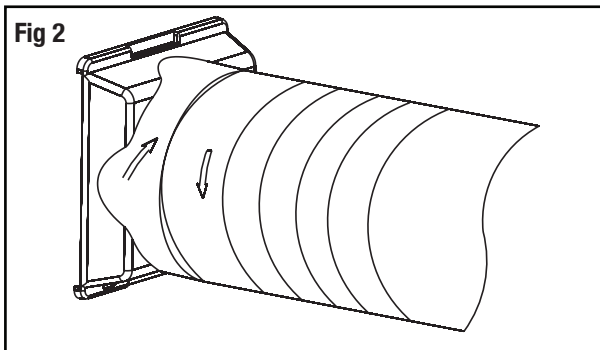


Installation (Cont.)

Screw the other end of the air exhaust duct onto the window exhaust adaptor (Fig 3).

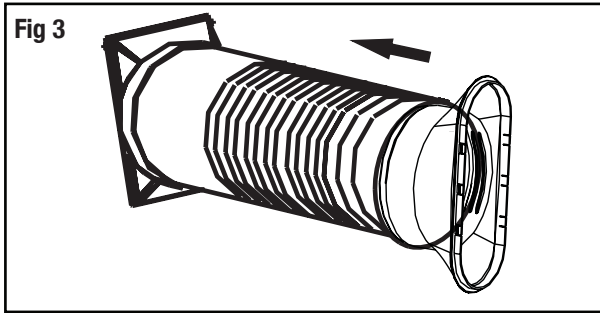

Slide the air exhaust duct adaptor onto the back of the air conditioner (Fig 4).

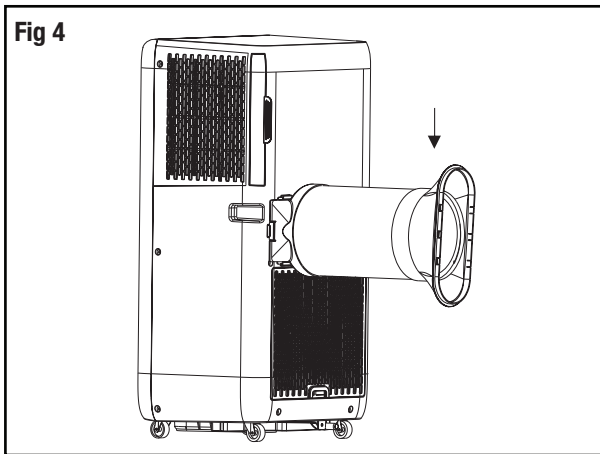


Extend the exhaust hose and insert the window slider adaptor into window slider kit (see page 12 for information on how to install the window kit). Push the connector to the shorter end of the window slider and fix it with the screw provided. Place the window slider kit in the window opening and slide the window to close against the window slider. Alternatively, hang the exhaust hose through window opening if the window slider cannot practically be used. However, ambient air will still be able to enter the room this way. **To cool the room effectively, the window kit must be properly installed.**

Installation (Cont.)

Installing the Window Kit



Your window kit has been designed to fit most standard 'horizontal' and 'vertical' window applications, but for certain types of windows it may be necessary for you to improvise/modify some aspects of the installation procedure.

Adjust the window slider to the length of a horizontally (or height of a vertically) open window (Fig 5).

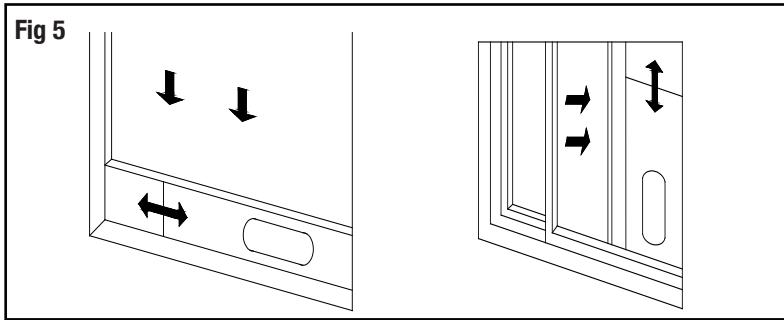

Fit the slider to the bottom of the window sill (or to the side of the window, if it opens vertically), then close the window.

Fit the exhaust hose connector (window end) through the opening to the outside (Fig 6 and Fig 7), making sure to observe the required 60 cm clearances between the body and walls or other objects. Ensure at least 1 m between the unit and any television or radio to avoid electromagnetic interference.

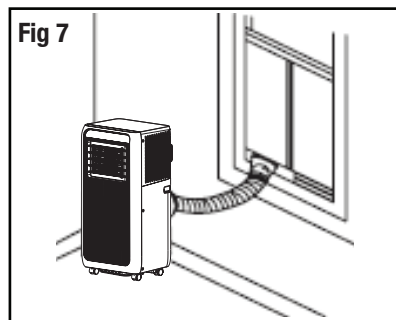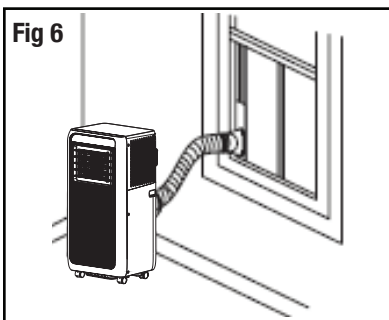

Instructions

Using the Portable Air Conditioner

Before switching the unit on for the first time, make sure you have properly installed the exhaust hose and window kit (see pages 10-12) and inserted two AAA size batteries into the remote control (see page 18).

Find a place for the air conditioner where there is a power outlet nearby.

Install the exhaust hose through the window kit so that the hot air is expelled to the outside.

Ensure the rubber stopper at the back of the appliance is properly in place to block the drainage outlet.

Plug the portable air conditioner into a properly earthed 220–240 V~ 50 Hz mains socket and switch on power to the outlet.

NOTE: Do not connect it to a multiple socket outlet that is also being used for other electrical appliances. Do not connect it to an extension cord.


Press the POWER button and the unit will start operation.

IMPORTANT INFORMATION

- **Room size:** It is important to use the right size air conditioner in the room you want to cool. (This appliance is suitable for cooling rooms of 10-18 m² size.)
- **Exhaust hose:** This **MUST BE CONNECTED** and hot air expelled to the outside for the appliance to work properly. Keep the hose as short as possible.
- **Noise:** As the compressor is inside the room, a portable air conditioner makes more noise than a split system, where the compressor is outside.
- **For best cooling efficiency, keep blinds and curtains closed** during the sunniest part of the day. Close off any fireplace damper, floor and/or wall register so cool air does not escape through the chimney or duct work.
- **Switching on/off:** After switching on, allow 30 seconds for cool air to flow through the louvres. Avoid starting the air conditioner soon after switching off, and avoid switching it off immediately after switching on. Allow at least 3 minutes in between switching the unit on and then off, or vice versa.
- **Moving the appliance:** Take care when moving the appliance as condensation water may spill out. Ensure the drip tray is empty before moving it.

Instructions (Cont.)

Control Panel

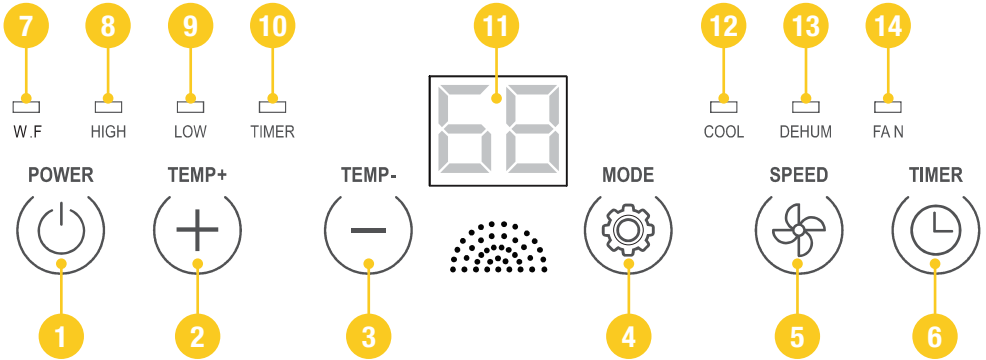

Buttons and Indicators

1. POWER Button
2. TEMP/TIMER + Button
3. TEMP/TIMER - Button
4. MODE Button
5. SPEED Button
6. TIMER Button
7. Water Indicator
8. High Fan Speed Indicator
9. Low Fan Speed Indicator
10. Timer Indicator
11. Display Screen
12. Cool Mode Indicator
13. Dehumidify Mode Indicator
14. Fan Mode Indicator

Note: W.F means the portable air conditioner is full of water and will stop working. When this happens be sure to remove the water to the portable air conditioner can continue working again.

Control Panel – Operation Buttons

On/Off

When you plug in and power the portable air conditioner it will beep once. Press the POWER button [⏻] once to turn on the portable air conditioner. If you press the POWER button [⏻] again the portable air conditioner will make a 'di' sound and turn off.

Operation Mode

Press the MODE button [⚙️] to select either cooling, dehumidifying (dry) or fan mode, Following the sequece below.

The relevant indicator light will illuminate the selected mode.



Fan Speed

Press the SPEED button [🌀] to select your desired fan speed.



Instructions (Cont.)


Temperature Adjustment

The temperature can be set within the range of 16 °C to 31 °C in intervals of 1°C. Press the + button [➕] once to increase the temperature by 1 °C or press the - button [➖] once to decrease the temperature by 1 °C. The display will show the temperature when set.

Timer

Press the TIMER button [⌚] to set a timer for the portable air conditioner to turn off. Use the + button [➕] and - button [➖] to adjust the time. Press the TIMER button [⌚] again to confirm the timer.

Remote Control

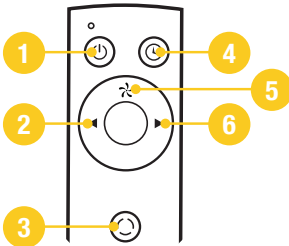

Buttons

1. Power Button
2. Temp/Timer - Button
3. Mode Button
4. Timer Button
5. Speed Button
6. Temp/Timer + Button

NOTE: The remote control has a range of approx. 5 m, provided that there are no obstacles blocking the signal. Do not drop the remote control and do not place the remote control in direct sunlight.

Remote Control – Operation Buttons

On/Off

When you plug in and power the portable air conditioner it will beep once.

Press the Power button [⏻] once to turn on the portable air conditioner.

If you press the Power button [⏻] again the portable air conditioner will make a ‘di’ sound and turn off.

Operation Mode

Press the Mode button [⏻] to select either cooling, dehumidifying (dry) or fan mode, Following the sequece below.

The relevant indicator light will illuminate the selected mode.



Fan Speed

Press the SPEED button [⏻] to select your desired fan speed.



Temperature Adjustment

The temperature can be set within the range of 16 °C to 31 °C in intervals of 1°C. Press the + button [➔] once to increase the temperature by 1 °C or press the - button [➔] once to decrease the temperature by 1 °C. The display will show the temperature when set.

Timer

Press this button to set a timer for the portable air conditioner to turn off. Use the + button [➔] and - button [➔] to adjust the time.

Press the Timer button [⌚] again to confirm the timer.


Instructions (Cont.)

Water Full Alarm

Condensation water that forms during cooling will drop into an in-built drip tray. When the water level in the drip tray is getting too full, the W.F indicator light will illuminate to alert you that the drip tray needs to be emptied.

Should this error code appear during operation, proceed as follows:

- Unplug the unit from the power supply.
- Place a pan under the water drainage outlet at the bottom of the unit.
- Remove the rubber stopper and drain all water out of the tray.
- Alternatively, attach a water drain hose (not supplied) to the drainage outlet (Fig. 8) and lead the hose to the outside or into a tub or drain for water drainage.

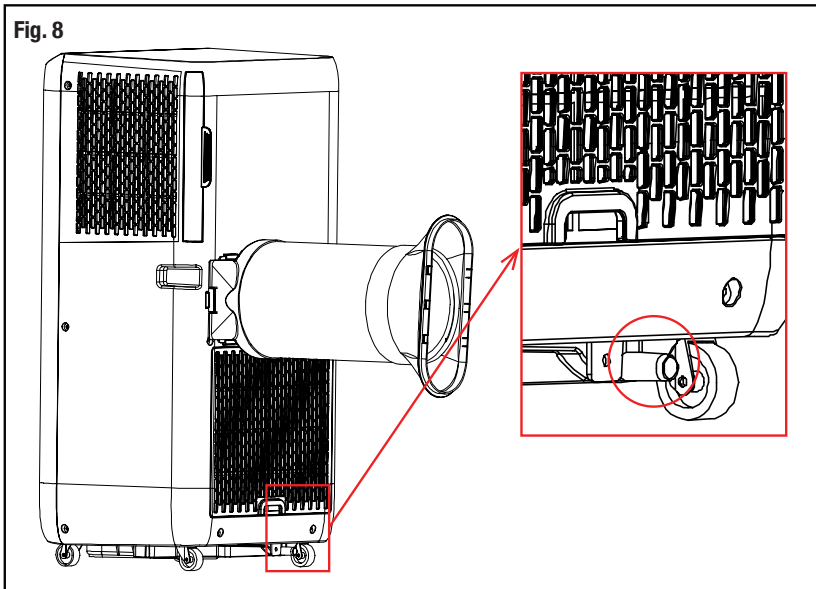

Protection

The protective device may be activated in the below cases. If these circumstances occur, the unit will switch off.

Cooling	Room temperature is above 43°C
	Room temperature is below 15°C
Dehumidifying	Room temperature is below 15°C

NOTE: If the air conditioner is operating in cooling or dry mode with a door or window open when relative humidity is above 80%, dew may drip from the outlet.

FAQs and Troubleshooting Guide

Problem	Possible Causes	Solution
Unit does not start when pressing the POWER button.	The water full W.F indicator has illuminated, indicating that the drip tray is full.	Drain the condensation water manually.
	The room temperature is lower than the set temperature.	Reset the temperature.
	The protective device has been activated, or the fuse has blown.	Wait for three minutes before attempting to restart the unit.
	The battery in the remote control has been depleted.	Replace the battery (see page 18).
	The plug is not properly connected.	Correctly connect the plug to an appropriate power point.
	The wall socket is defective.	Use another socket.
The unit only runs for a short while	The set temperature is too close to the room temperature	Lower the set temperature
	The air outlet is blocked.	Clear the air outlet.
The unit stops automatically.	Set temperature reached.	Lower or raise the set temperature.
	Timer shut down.	Set another timer, or switch back on for manual shutdown mode.
Noisy	The ground is not level or not flat enough.	Make sure to place the unit on a flat, level ground.
	The sound comes from the refrigerant flowing inside the air conditioner.	This is normal and no cause for concern.
No cold air when in cooling mode	The room temperature is lower than the set temperature.	The appliance will automatically start when the room temperature is higher than the set temperature.
	The machine has entered anti-frost protection mode.	The appliance will automatically start when the protection mode ends.
Low cooling performance.	A door or window is open.	Close any doors and windows.
	The room size is too large.	Ensure this appliance is used to cool a room with an area of 10-18 m ² .
	There are heat sources inside the room	Turn off any nearby heating appliances.
	The air filter is dirty.	Clean the air filter.
	The air outlet or inlet is blocked.	Remove any blockages.
	The set temperature is too high.	Lower the set temperature.
E0 Code	The room temperature sensor has failed or is damaged.	Call for service.
E4 Code	Water drip tray is full.	Drain the water manually out of the drip tray.

Other Useful Information

Care and Cleaning

Electric shock hazard!

Before cleaning and servicing, ensure the unit is switched off and disconnected from the power outlet to prevent possible injury.

Cleaning the Air Conditioner

Wipe the housing with a damp cloth, moistened with water and a little mild detergent. Dry with a soft, dry cloth.


CAUTION: Do not wash the unit directly. Do not use any solvent or alcohol-based cleaning agent on any surface. Using such harsh cleansers will scratch or damage the surface, or can even lead to deformation of the housing.

Cleaning the Air Filter

This unit has an air intake filter at the side of the unit. If the air filter clogs up with dust, the airflow volume will be reduced. We recommend cleaning the filter once every two weeks.

To clean the filter, proceed as follows (Fig. 9):


- Remove the air filter by sliding it out of the unit.
- Clean the air filter with a mild detergent in lukewarm water (max. 40°C). Rinse thoroughly.
- Let all parts dry completely in the shade before reinstallation.

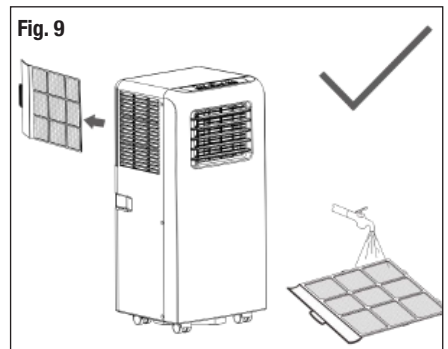

Battery Insertion/Replacement

The remote control is powered by two 1.5 V AAA batteries. To install them, or to replace them when required, proceed as follows:

- Slide down the battery cover on the back of the remote (Fig. 10).
- Remove the batteries and insert two new ones, ensuring the positive (+) side is aligned with the positive (+) marking in the battery compartment, and the negative (-) marking in the battery compartment (Fig. 10). Then reattach the battery compartment cover to the remote.

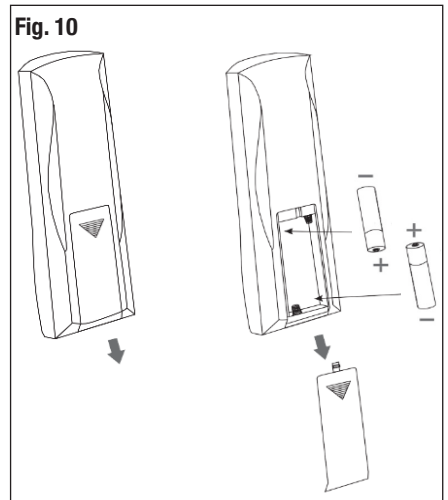

Other Useful Information (Cont.)

Battery Precautions

- Do not open the batteries or short-circuit them.
- Do not mix different types of batteries. Due to increased risk of leakage, empty batteries should be removed. The batteries should also be removed from the remote control if it is not being used for long periods.
- Only dispose of batteries when they are fully discharged.
- **WARNING: Danger of explosion!** To prevent a risk of explosion, batteries must not be charged, heated or disposed of by burning. Never throw batteries into a fire or subject batteries to high temperatures.
- Used batteries should not be disposed of in household waste. Dispose of them in accordance with statutory regulations.

Before Storage

At the end of the summer season, follow the simple steps below before disconnecting and storing the appliance.

- Unplug the unit from the power supply.
- Place a pan under a water drainage outlet and remove the rubber stopper.
- Alternatively, connect a drain hose (not supplied) to the outlet and lead the hose to the outside.
- Any condensation water that has accumulated will drain out.
- Operate the unit in fan mode for a few hours to let the drainage pipe dry.
- Switch off the unit and disconnect the plug from the power supply.
- Disconnect the drain hose (if installed) and keep the hose and stopper with the portable air conditioner during storage.
- Store the appliance in the original packaging, or wrap it with a plastic bag or piece of material and keep it in a dry, cool place, out of children's reach.

Service, Repair and Spare Parts

If you look after your portable air conditioner it should give you years of good service. Should you experience problems with the appliance that you cannot solve yourself using the advice given in this manual, then please contact our after sales support centre for advice. **Do not attempt to open the appliance!**

Our after sales support centre stocks the spare parts listed below for the portable air conditioner. To purchase a part, contact us at tempo.org/support or on 1300 886 649.

Adjustable window slider

Air filter

Flexible air exhaust hose

Remote control

Window connector

Other Useful Information (Cont.)

Technical Specifications

Model	PAC26KW
Cooling capacity	2630 W
Dehumidifying capacity	1.0 L/h
Cooling input power	950 W
Cooling input current	4.3 A
Air flow volume	270 m ³ /h
Rated voltage	220-240 V~
Rated frequency	50 Hz
Sound pressure level	L _{PA} : 53 dB(A)
	L _{WA} : 64 dB(A)
Rated Energy Efficiency Ratio (EER _{rated})	2.6
Global Warming Potential (kg CO ₂)	3
EER _{rated} Class	A
Room Size	10-18 m ²
Miniature Fuse	3.15 A, 250 V~
Refrigerant, quantity	R290, 0.160 kg
Max. allowable pressure	4.2 MPa
Permissible excessive operating pressure	Discharge 2.5 MPa
	Suction 1.2 MPa
Weight (approx.)	21 kg
Dimensions (approx.)	330(W) x 685(H) x 280(D) mm

Other Useful Information (Cont.)

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.40.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Responsible Disposal



Packaging materials are recyclable. Please dispose of them responsibly for recycling.



At the end of its working life, do not throw this appliance out with your household waste. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

Contact your local authorities for advice on recycling facilities in your area. Or find recycling scheme services listed on Planet Ark's website at www.recyclingnearyou.com.au, or call Planet Ark on 1300 733 712.

This page has been left blank intentionally.

This page has been left blank intentionally.



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6097, North Sydney 2059, NSW Australia

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Web Support: tempo.org/support

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.0

Issue: May 2024