



URBAN

XL WARDROBE SYSTEM

HEIGHT | WIDTH | DEPTH
2020mm | **1830mm** | **460mm**

**MATTE
BLACK
METAL**

Very Important: Unpack the unit and confirm that you have all the parts listed. Assemble the unit on a solid, level surface. You will need the assistance of a second person during assembly.
Safety tip: For added safety and support we recommend you fix unit to a wall.
You will need the following: Phillips head screwdriver.

WARNING

SERIOUS INJURY OR DEATH CAN BE CAUSED BY TOPPLING FURNITURE

TO HELP PREVENT A TIP-OVER:


- Anchor this product to a wall or other suitable surface with the provided bracket.
- Check anchors regularly.

FOR MORE INFORMATION SEARCH: www.productsafety.gov.au

SAFETY TIP:


When assembling or installing this product wear protective gloves and eyewear.

Parts List:

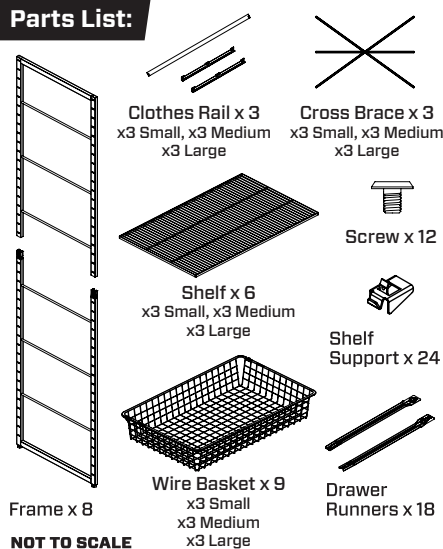

PLEASE NOTE: Tip-over prevention bracket x8 included (refer to last step for installation).


Step 1

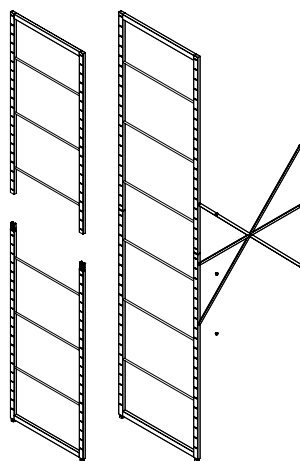

Attach the top frame to the bottom frame by sliding the connector into each other. Align the cross-bracing to the 3 holes on the back of the frame and fix with the provided screws.

Please note: Adjustable feet on the frame should be positioned at the bottom.


Step 2

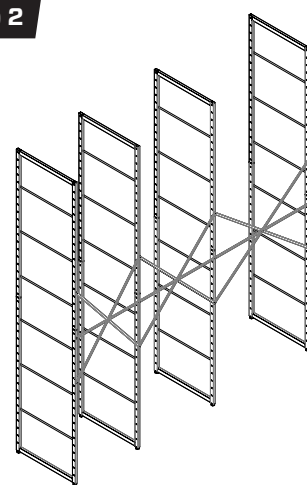

Repeat step 1 for the remaining top and bottom frames.

Please note: Adjustable feet on the frame should be positioned at the bottom.


Step 3

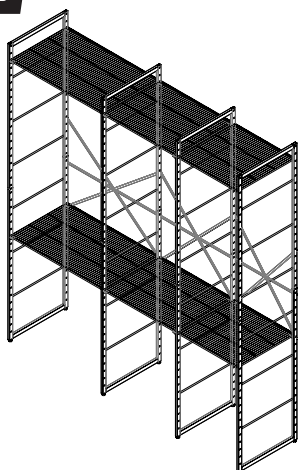

Attach 4x shelf supports to your desired height and place the first shelf in position, then repeat for all remaining shelves.

Please note: Ensure each shelf sits firmly on the shelf supports.


Step 4

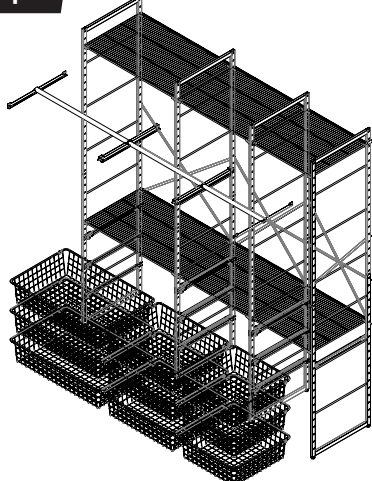

Attach the 3x clothes rails and 18x drawer runners to your desired height by pressing into the slots on the frame and slide the baskets onto the runners.

Please note: Wheels on the runners should be facing the front of the wardrobe.

Step 5

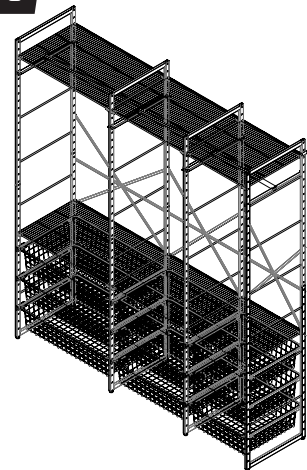

Please note: For stability and safety, fix the unit to a wall with the provided brackets. Place the brackets over the rear frame legs at the top and bottom, then attach to your wall. Necessary fixings for these brackets can be found at your local hardware store.

WARRANTY CONDITIONS: Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under this warranty, take the product (with proof of purchase) to any Bunnings store (for AUS customers see www.bunnings.com.au and for NZ customers see www.bunnings.co.nz for store locations). Pinnacle Hardware bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof of purchase to our support centre for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: Our goods come with guarantees that cannot be excluded under the Australian consumer law or Consumer Guarantees Act 1993 (NZ). You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty excludes damage resulting from product misuse or product neglect, any modifications, additions or alterations to the product including the addition of extra shelves. Additions or modifications can compromise the structure and safety of the product. The warranty covers domestic use only and does not apply to commercial applications. This warranty is given by Pinnacle Hardware, ABN 87 614 496 196, 28 Hudson Court, Keysborough Vic 3173, 1800 349 776, Email: support@pinnacle.net.au. Products sold in New Zealand are imported by Bunnings New Zealand. 'Pinnacle' is a trademark. © Pinnacle Hardware. Suitable for model number W0S009.