 


TIPS ON SETTING OUT YOUR FENCE PANELS

The examples below use the same amount of panels and posts over the same length.




Least amount cuts: standard panel lengths with 1 panel cut as filler for end of run. This is the easiest method, but may not be acceptable visually.

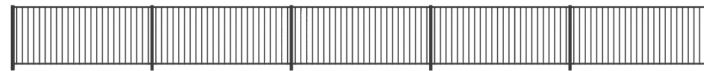

Evenly cut panels: standard panels all cut to even sizes so there is no short panel showing at the end of run.

IMPORTANT TIPS FOR POOL FENCING SAFETY COMPLIANCE (AS 1926.1 / NZS 8500)

- A** Minimum fence height of 1200mm to ground level
- B** Distance from underside of fence to ground must be less than 100 mm
- C** 900mm minimum between top of hinges
- D** Minimum 1500 mm H from ground to top of pool latch

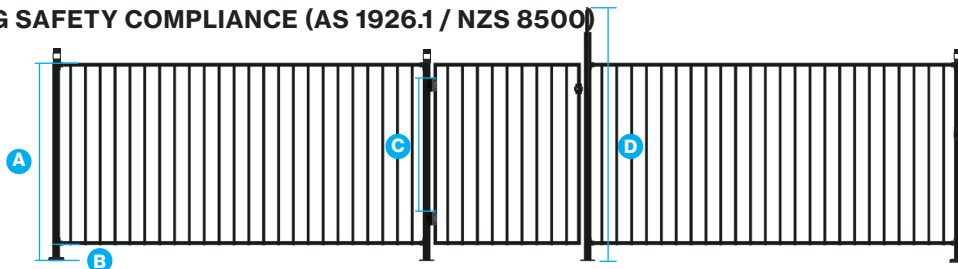


TOOLS REQUIRED



SET OUT: Set up your string line for your intended fence line, keeping the string line as low as practical and an even distance from the ground. Use a tape measure to mark your Post locations.

POST SPACING (CENTRE TO CENTRE)

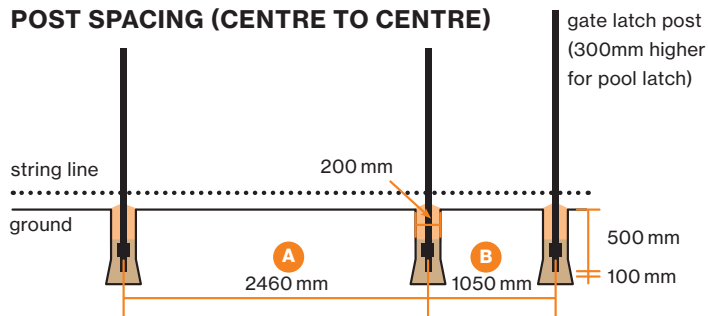

- A** **2400mm wide Panels** = Post centres every 2460 mm
Cut down Panels = Post centres panel width +60mm
- B** **975mm wide Gate** = Post centres 1050 mm (to allow for hardware)
Custom Gate Width = Post Centres Allow +75mm for gate hardware



Always check for underground services and **Dial Before You Dig on 1100**

INSTALLING IN-GROUND POSTS


1. Dig your holes 200 mm diameter x 600 mm depth as shown.
2. Half fill the post hole with concrete, then insert the post ensuring correct positioning, the post is level and spacings and dimensions are maintained. Fill the balance of the fence post

hole with concrete to just above ground level and taper the concrete from the post down to the ground. Clean any concrete spills or splatters immediately off the post with a damp sponge before it sets. Leave posts overnight for concrete to fully cure.

DO NOT USE FAST SET CONCRETE FOR ALUMINIUM POSTS.

INSTALLING FLANGED POSTS

1. Position your posts and mark your base plate 4 x hole locations to suit your desired fixings as shown.
2. Follow the instructions provided with your fixings, based on your fixing surface.
3. Install your Aluminium Post Domical Covers to conceal your fixings.

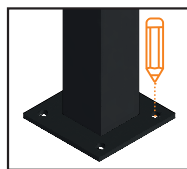

INSTALLING POOL OR GARDEN GATE

1. Follow the instructions included with your G8Safe[®] or ProtectorAI[™] Hardware product pack.


INSTALLING POST DOMICAL COVERS

1. Separate the domical cover into two pieces being careful not to lose the small hex screws.
2. Position the 2 part domical cover around the post, concealing your base plate and fixings, lining up the hex screw locations.
3. Insert and tighten the hex screws so the domical cover is now secured in position around the post.



INSTALLING YOUR POOL OR GARDEN FENCE PANELS

1. Slide your ProtectorAI[™] Panel Brackets onto the 4 corners of your aluminium fence panel with the fixing lugs facing towards the centre of the fence panel.
2. Position the fence panel between the posts ensuring correct location and the aluminium fence panel is level.
3. Use the self-drilling screws provided to fix through the 2 x holes in each panel bracket into the post. The last 2 screws are to fix your panel to your panel bracket from the underside, locking your posts, panel and brackets all together.

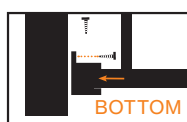

INSTALLING POST SOLAR LIGHTS

1. Remove the existing black plastic post cap.
2. Activate Post Solar Light by separating the top lantern from base and removing the battery strap. Reassemble top lantern and base.
3. Insert Post Solar Light into top of Post.

