

**size: A5**

**CRAFTRIGHT®**

**Thank you for purchasing one of our quality Crafright products. Please keep your receipt as proof of purchase, as this will authenticate your warranty.**

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see [www.bunnings.com.au](http://www.bunnings.com.au) for store locations) or contact Mayo Hardware Pty Ltd. Mayo Hardware Pty Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof to Mayo Hardware Pty Ltd for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications. This warranty is given by Mayo Hardware Pty Ltd, ABN 73 000 032 806, 4 Secombe PI Moorebank NSW, Phone Number Customer Service: 1300 360 211, Email: [customerservice@mayohardware.com.au](mailto:customerservice@mayohardware.com.au).

**CRAFTRIGHT®**

**INSTRUCTIONS:**

1. Hold the knife grinder in the left hand, the scissors in the right hand, put the scissors to the place of the function of grinding scissors, pull back three times, and then turn to the other side to cut the same operation.
- 2 & 3. Function 2 and 3 is sharpening, operation method: First left hand grip knife, right hand grip knife, the position of rough sharpening knife put there, right hand back three or four times, and then to fine grinding position the same operation.
4. Aim Your lips at the whistle's mouth and blow hard with the air, providing up to 110 DB.
5. With the sharpener in your left hand and the flint in your right hand, you place the flint in the tungsten channel, and then you pull, and there's a spark.
6. Put the blunt gut knife and Fishhook into the long slit of the steel bar. Grinding it back and forth can make it sharp.
7. A tooth knife (bread knife or steak knife, etc.) in the left hand, the right hand with a knife sharpener, against the mouth of the damaged grinding, can make it sharp.

