QUICK START GUIDE

Freecall


(Aus) 1800 069 486 (NZ) 0508 069 486

OUICK SET-UP

WHEELS & AXLE

Parts required: Wheel x 2, Axle.


- 1. Slide a R-Clip through the hole in one end off the
- 2. Slide the axle onto the Wheel and place a Washer on end of the axle before sliding the axle through the hole in the base frame.
- 3. Place a washer on the protruding end of the axle followed by the second wheel.
- 4. Secure the wheel on the axle with a R-clip.

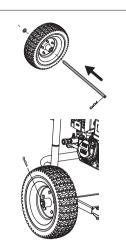

TOP HANDLE

Parts required: Top handle

- 1. Line up Top Handle open tubing with Base Frame open tubina.
- 2. Slide top handle over frame tubing making sure bolt holes align
- 3. Make sure handle is firmly secured with the 2 bolts, nuts and washers.

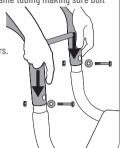

ENGINE GUARD FRAME

Parts required: Engine Guard Frame.


- 1. Line up Engine Guard Frame open tubing with Base Frame open tubing.
- 2. Slide Engine Guard Frame over Base Frame tubing making sure clip locks snap through holes on



FRONT SUPPORT FRAME

Parts required: Front Support Frame and Detergent Syphon.


- 1. Place the front support frame under the base frame, aligning the holes in each frame.
- 2. Fit bolts through the holes in the base frame, place a washer and fasten the nuts using a
- 3. Attach one end of the Detergent Syphon to the Detergent Bottle and the other end to the pump detergent inlet.

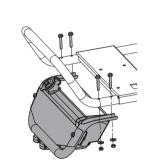

SPRAY GUN HOLDER

Parts required: Spray Gun Holder.


- 1. Attached the spray gun holder to the top handle.
- 2. Secure in place with nut and washer.

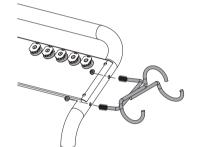

HOSE HOLDER


Parts required: Hose Holder.

- 1. Attached the spray gun holder to the top handle frame.
- 2. Secure in place with washer and nut.

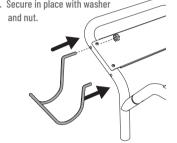

TRANSPORT PLUG


1. Remove the red transport shipping plug on the pump and install the supplied breather/dipstick.

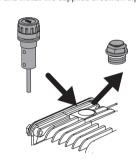

WATER ADAPTOR

Parts required: Water Adaptor.


1. Attached the water adaptor to the pump water inlet.

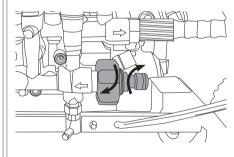

HIGH PRESSURE HOSE

Parts required: High Pressure Hose.

- 1. Thread the end onto the high pressure pump outlet.
- 2. Tighten the collar by hand to secure.

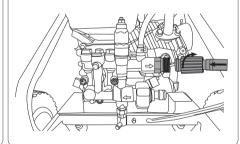

SPRAY GUN

Parts required: Spray Gun and Lance.

- 1. Tighten the collar by hand to secure the lance to the spay gun.
- 2. To attach the end of the high pressure hose, thread end onto the spray gun.
- 3. Tighten the collar by hand to secure the hose to the spray gun.



QUICK START-UP

Before starting the engine ensure you have:

- Added oil 1.2 litre oil sump
- capacity. Added fuel - 6 Litres of Ron 91
- Run water through garden hose to remove any foreign matter before attaching the hose to the pump water inlet.
- Attached your choice of nozzle. Turn water supply ON - press and hold Spray Gun trigger and allow water to flow steady until machine is

fully primed.


1. Engine on/off switch - Move the engine on/off switch to the ON position.



Cold engine - Move the Choke lever to the left, Choke (closed) START position. Warm engine - Leave choke fully right at RUN position.

right, ON (open) position.

3. Fuel - Move the Fuel lever to the

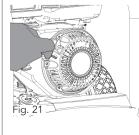

4. Recoil Starter - Grip the recoil starter and slowly pull until resistance fully right RUN position. is felt, then pull the recoil starter

rapidly. Allow the rope to rewind slowly and if necessary, repeat this procedure until engine starts.



5. Once started move the choke lever

Stopping the engine: 1. Move the engine on/off switch to the OFF position.

2. Move the fuel lever left, OFF (closed) position.

