

BLADELESS FAN WITH HEATER

WITH REMOTE CONTROL





INSTRUCTION MANUAL

Item No: 0605594

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

SAFETY PRECAUTIONS

Read all instructions carefully, even if you are quite familiar with the appliance.

- To prevent fire or shock hazard, DO NOT expose the appliance to rain or moisture.
- Dangerous high voltages are present inside the enclosure. To avoid electric shock, DO NOT open the enclosure, refer servicing to qualified personnel only.
- No flames sources, such as candles, should be placed on or near the product.
- Any ventilation holes should not be covered with items, such as newspaper, table paper, tablecloths, curtains, etc. Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. Never obstruct the air inlet and outlet. Do not use any object to cover this appliance.
- Only connect to a suitable AC 230-240V ~50Hz mains wall outlet. Do not overload the wall outlet.
- This appliance is not intended for use by persons(including children) with reduced physical, sensory or
 mental capabilities, or lack of experience and knowledge, unless they have been given supervision or
 instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach of children. Children should be supervised to ensure that they do not play with the
 appliance.
- To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord. Do not use with wet hands or in damp environments.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
 Repairs should only be performed by qualified personnel.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly
 qualified persons in order to avoid a hazard.
- Do not use this appliance for anything other than its intended use. This appliance is intended for household use only.
- Do not use if there are visible signs of damage on the appliance.
- Use the appliance on a horizontal and stable surface.
- Indoor use only, Do not use the appliance with a programmer, timer, separate remote-control system
 or any other device that switches the appliance on automatically, since a fire risk exists if the heater is
 covered or positioned incorrectly.
- Do not use the appliance if it has been dropped.
- · Do not place the appliance in or near a fire, on stoves, or in other high-temperature environments.
- Do not use if the supply cord or plug is damaged.
- Do not look directly into the light source or point it into the eyes of others. This can lead to retinal damage.
- The light source of this luminaire is not replaceable;. Do not attempt to open the casing.

WARNING:

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

In order to avoid overheating, DO NOT COVER the appliance.

Do not place the heater on LONG PILE CARPET OR FLOKATI RUGS. Use a heat board if necessary.

To reduce the risk of fire, keep textiles, curtains, or any other flammable material at least 1 metre away from the air outlet.

To avoid overheating, do not cover the heater.



WARNING: Do not cover!

Always

- 1. Always position the heater in accordance with the instructions.
- 2. Always make sure the electrical socket is accessible and located adjacent to, but not above the heater.
- Always use a fire guard when children, animals and infirm persons can come into contact with the heater. Pay attention! The air outlet gets hot during operation.
- Always turn the appliance OFF and unplug it from the mains wall outlet when it is not in use, when moving the appliance from one location to another and before cleaning.

Never

- Never leave the appliance unattended when it is in use. Never leave children unsupervised in an area where the appliance is ON and unguarded.
- Never obstruct or cover the air outlet or force items into the heater openings. This could cause overheating and consequent risk of fire. Never insert or allow foreign objects to enter the air outlet, as this may cause damage to the appliance.
- 3. Never position or use the appliance in the immediate vicinity of water, such as a bathtub, shower, washbowl, swimming pool, etc.
- 4. Never use aerosols or steam cleaners on or around the heater.
- Never use the appliance in rooms with explosive gases or while using flammable solvents, varnish, or que.
- 6. Never route the power supply cord under a carpet or anything similar.
- 7. Never use the appliance to dry clothes, towels, etc.
- 8. Never operate the appliance with a damaged cord or plug, after a malfunction or if it is not working normally, dropped or damaged in any way.
- 9. Never let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
- 10. Never move the appliance by pulling the cord.
- 11. Never immerse the appliance in water or any other liquid for any reasons.
- 12. Never use accessories that are not recommended or supplied by the manufacturer.

POSITION INSTRUCTIONS

This heater must be placed on a hard, level, heat resistant surface. When positioning, please keep the following points in mind:

- The heater requires no installation. It should be used solely as a portable appliance. The heater must always be used and stored in an upright position.
- The heater must not be located immediately below an electrical outlet.
- The heater MUST only be plugged in to a fixed domestic power outlet. DO NOT use with extension cords, power boards, or double adaptors, as these devices may overheat when overloaded.
- Do not use the appliance in rooms with less than 4m² of area.
- Keep the air inlet and outlet free from objects at least 100cm in front and 50cm behind the heater. Do not hang anything on or in front of the heater.
- Never position the heater close to curtains or combustible materials such as furniture, cushions, bedding, paper, clothes, curtains, etc. Keep the appliance at least 1 metre away from any combustible materials and walls.
- Never position or use the heater in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools, etc., where the likelihood of immersion or splashing could occur.
- Keep hearthrugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of hot air and damage both the soft furnishings and the heater.

Cautions:

Do not operate the appliance on an inclined surface. Do not move the appliance while it is switched ON.


In order to avoid a hazard due to inadvertent resetting of the thermal cut out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched ON and OFF by the utility.

This heater is hot when in use or immediately after use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains well away from the heater. Do not drape laundry or any other items over the heater.

At the end of the product's serviceable life, it should be disposed of carefully and safely in accordance with local authority regulations.

SAVE THESE INSTRUCTIONS

FEATURES OF YOUR BLADELESS FAN AND HEATER

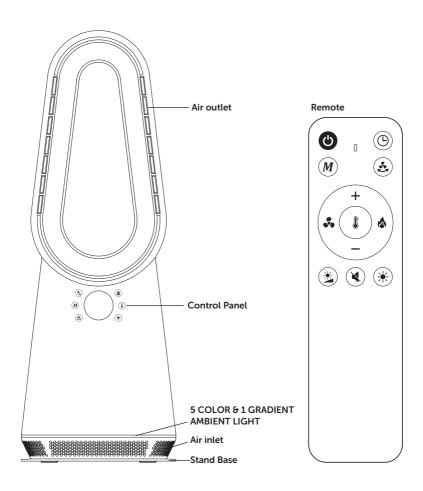

YOUR BLADELESS FAN AND HEATER

Congratulations on the purchase of your new Bladeless Fan and Heater.

Before first using your the appliance, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are quite familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a place and keep this booklet handy for future reference.

Your designed to function quietly and safely under normal circumstances.

This the appliance is fully portable, with sturdy base and a modern design.

OPERATION

For a safe and trouble-free running of the device, choose the installation location which meets the following requirements:


The floor should be firm, flat and horizontal.

Keep the following minimum clearances from the device housing: 30 cm from its lateral side, 30 cm above, 30 cm from its rear side and 1 m from its front side.


Do not place the device in a hot and wet or very humid environment or near combustible material.


The socket should be easily accessible so that the mains connection cable can be easily disconnected, if necessary.

Temperature range: from 0 to +40 °C Humidity (no condensation): 5-75 %

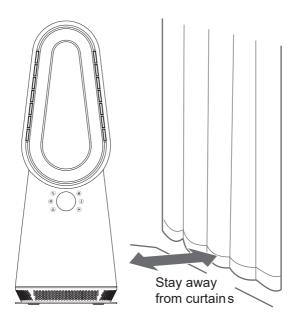

Control panel:

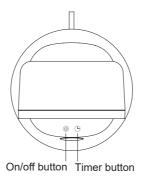

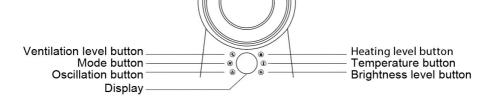

HOW TO USE

When operated for the heater first time, the unit may emit an unpleasant burning type smell. This is normal, and will disappear after a short period of use.

- 1. Carefully remove the heater from the plastic bag and carton. Place the heater on a level surface in a stable upright position.
- Unwind the power cord and plug your Fan and Heater into a socket outlet (230-240V).. Ensure that the voltage on the specifications plate is the same as in your home. The appliance is now supplied with power. A short signal tone sounds.

Note: The buttons have a signal tone feedback.

- 3. On/Off button (b)
 In the standby state, press the power button to start the fan. The default gear is 3.

 Press it again to chut down
- Press it again to shut down.

 4. Timer button (5)
 - Press this key to set 1-8 hours timer-off(stand-by state). When the power supply is turned off, the former timer setting will be canceled.

NOTE: A small dot flashes at the bottom right of the display, simulating the timer.

- 5. Ventilation level button (**)

 Press the button repeatedly to reach the desired ventilation level.

 You can choose between 9 different ventilation levels.

 Hot air State Press this button to switch to cool air state.
- Mode button (M)
 To change an operating mode, press the button repeatedly until the desired mode is shown on the display. You can choose between Strong air speed moder, Sleep Mode, Natural air speed mode and ECO mode.

Display	Operating mode
HH	Strong air speed moder The appliance switches to the highest level of ventilation mode.
LL	Sleep Mode Reduce the current gear by 1 gear every 15 minutes, and the minimum is reduced to the first gear.
ПП	Natural air speed mode Air volume 3-5-7 gear air-speed in turn.
EC	ECO mode Only active in heating mode. - If the room temperature is below 18 °C, the appliance operates at high speed - if the room temperature is between 18-22 °C, the appliance operates at low speed - if the room temperature is above 22 °C, the appliance operates at the lowest fan speed Note: ECO mode can only be selected in heating mode. If you change the speed during an active operating mode, the operating mode is deactivated and must be reactivated.

7. Oscillation button 👶



Press the Shake head button to enable or disable the shake head.

The default shake head Angle is 80±5 degrees.

8. Heating level button ()



Press the button to switch to heating mode.

Press the button repeatedly to increase the desired ventilation level.

You can choose between 4 different ventilation levels.

9. Temperature button

Press the button to set the desired temperature. 25°C is the preset temperature.

You can set the temperature from 5°C - 35°C.

The desired temperature setting is adopted directly.

Note: The heating is only activated if the set temperature is above the current room temperature. As soon as the room temperature falls below the set temperature, the appliance switches on automatically until the set temperature is reached again. In this way, the room temperature remains constant and power consumption is kept as low as possible.

Note: The default setting for the heating is 25 °C.

If the room temperature falls below 0 °C, the LED display only shows - - as these cannot be displayed. The appliance switches off automatically if it has been in continuous operation for 12 hours.

Note: The heater initially emits heat from the lefthand air outlet and after about 20 seconds emits heat from the right-hand side. This is a normal process.

10. Brightness level button (*)

Press the ambience button to start the atmospheric light function.

Press the ambience button repeatedly to obtain the desired colour scheme

(white, blue, green, red, purple, Gradient color).

To end the atmospheric light function, press the ambience button again after the colour changes to Gradient color. The indicator light goes out.

Press and hold the button to adjust the brightness of the light.

Note: Up to 4 brightness levels can be set for each light color.


11. Turn Off (b)

Press Power button to turn the fan and heater off and unplug it from the mains outlet after use.

Note: After the appliance has been switched off from heating mode, it automatically switches to blower mode and blows out a stream of air for approx 30 seconds to allow the heating element to cool down. The 30 second countdown timer is displayed on the LED screen.

WARNING: Allow the fan &heater to cool down for 30-60 seconds before switching on again and before turning off at the power outlet. This will protect the inner parts.

REMOTE CONTROL INTRODUCTION

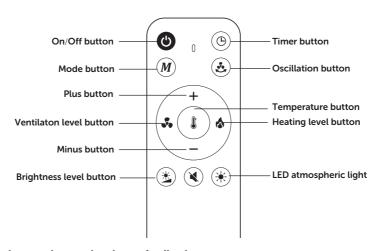

Note: The buttons have a signal tone feedback.

On/off button (b)

In the standby state, press the power button to start the fan. The default gear is 3. Press it again to shut down.

Timer button

Press this key to set 1-8 hours timer-off(stand-by state). When the power supply is turned off, the former timer setting will be canceled.

NOTE: A small dot flashes at the bottom right of the display, simulating the timer.

Mode button M

To change an operating mode, press the button repeatedly until the desired mode is shown on the display. You can choose between Strong air speed moder, Sleep Mode, Natural air speed mode and ECO mode.

Display	Operating mode
HH	Strong air speed moder The appliance switches to the highest level of ventilation mode.
LL	Sleep Mode Reduce the current gear by 1 gear every 15 minutes, and the minimum is reduced to the first gear.
ΠΠ	Natural air speed mode Air volume 3-5-7 gear air-speed in turn.
EE	ECO mode Only active in heating mode If the room temperature is below 18 °C, the appliance operates at high speed - if the room temperature is between 18-22 °C, the appliance operates at low speed - if the room temperature is above 22 °C, the appliance operates at the lowest fan speed Note: ECO mode can only be selected in heating mode. If you change the speed during an active operating mode, the operating mode is deactivated and must be reactivated.

Oscillation button

Press the Shake head button to enable or disable the shake head.

The default shake head Angle is 80±5 degrees.

Ventilation level button



To switch to fan mode, press the button.

Press the + button repeatedly to increase the desired ventilation level.

Press the - button repeatedly to reduce the desired ventilation level.

You can choose between 9 different ventilation levels.

The desired ventilation level is adopted directly.

Heating level button (



Press the button to switch to heating mode.

Press the button + or - repeatedly to set the desired ventilation level.

You can choose between 4 different ventilation levels.

Note: The heating is only activated if the set temperature is above the current room temperature.

Temperature button (&

Press the button to set the desired temperature. 25°C is the preset temperature.

You can set the temperature from 5°C - 35°C.

The desired temperature setting is adopted directly.

Note: The heating is only activated if the set temperature is above the current room temperature. As soon as the room temperature falls below the set temperature, the appliance switches on automatically until the set temperature is reached again. In this way, the room temperature remains constant and power consumption is kept as low as possible.

Note: The default setting for the heating is 25 °C.

If the room temperature falls below 0 °C, the LED display only shows - - as these cannot be displayed. ECO mode.

Only active in heating mode.

- If the room temperature is below 18 °C, the appliance operates at high speed.
- if the room temperature is between 18-22 °C, the appliance operates at low speed.
- if the room temperature is above 22 °C, the appliance operates at the lowest fan speed.

Note: ECO mode can only be selected in heating mode. If you change the speed during an active operating mode, the operating mode is deactivated and must be reactivated.

The appliance switches off automatically if it has been in continuous operation for 12 hours.

Note: The heater initially emits heat from the lefthand air outlet and after about 20 seconds emits heat from the right-hand side. This is a normal process.

After the appliance has been switched off from heating mode, it automatically switches to blower mode and blows out a stream of air for approx 30 seconds to allow the heating element to cool down. The 30 second countdown timer is displayed on the LED screen.

LED atmospheric light (**

Press the ambience button to start the atmospheric light function.

Press the ambience button repeatedly to obtain the desired colour scheme

(white, blue, green, red, purple, Gradient color).

To end the atmospheric light function, press the ambience button again after the colour changes to Gradient color. The indicator light goes out.

Brightness level button



Press the button to adjust the brightness of the light.

Note: Up to 4 brightness levels can be set for each light color.

Voice button



Press button to turn off tone of fan. The fan cancel "didi" sound.

INSERT BATTERIES INTO THE REMOTE CONTROL

- 1. Before using the remote control: Press down battery cover on the back of the remote control and slide to remove the cover.
- 2. Insert two new AAA 1.5V alkaline batteries align with polarity indicator markings (+/-) inside the battery compartment.
- 3. Reattach the battery cover, making sure the locking tabs click into place.

WARNINGS:

- Keep batteries out of children's reach.
- Use only alkaline batteries. Do not use rechargeable batteries.
- Do not use old and new or different types of batteries in combination. Do not use the remote if the batteries have leaked.
- Remove the batteries if they are discharged or if the remote control is not being used for a long period of time. Dispose of used batteries immediately.
- Battery must be recycled or disposed of properly. Do not dispose of battery in a fire, oven or near any flammable object as this may cause an explosion. Do not dispose of battery in regular trash, municipal waste stream or by fire as battery may leak or explode.

Thermal Cut-Out

A Thermal Cut-Out is built into this heater to minimise the risk of overheating and maximise safety to users. A heat sensing device monitors internal temperatures in the appliance. If heat levels rise beyond a preset safety threshold the Cut-Out will switch off power to the heat elements, eliminating further danger. Let the heater cool for approximately 10 minutes, then it will function normally again. In the event of a Thermal Cut-Out check for visible obstructions to air inlets. Try moving the appliance to a new position. Sometimes placement close to walls and furniture can restrict air movement enough to cause the heater to shut down.

Safety Tip-Over Switch

This appliance is fitted with a safety tip-over switch which automatically turns the unit off when it is tilted or tipped over. Always ensure that the unit is placed on flat solid ground before operating.



TECHNICAL SPECIFICATION

Power Supply:AC 220-240V~ 50Hz

Cool Power Consumption:28W

Heating Power Consumption:2000W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

CARE AND CLEANING

- Before cleaning, ensure that the fan & heater is switched in the off position and is unplugged from the socket.
- · Clean the exterior surfaces of the heater with a dry, soft cloth.
- Use a soft brush or a vacuum cleaner to clean the dust at the air inlet and outlet. Too much dust may affect the use of the fan. Please clean it in time when there is less dust.
- Never use any form of detergents or solvents to clean the heater.
- · Never spray with liquids or submerge in liquids or water.
- · DO NOT attempt to clean the interior of the heater.
- DO NOT ATTEMPT TO OPEN THE CASE OF THIS HEATER at any time.
 There are no consumer serviceable parts inside this unit.
- When the heater is stored during the off season, neatly wind the power cord around the base of the heater to prevent any damage to the power cord.



DISPOSAL

Do not dispose of packaging or the product through your household waste!

The product and packaging are made from recyclable materials (plastics, metals, paper). If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local council regulations.



NOTES

NOTES

WARRANTY CONDITIONS FOR PURCHASE IN AUSTRALIA & NEW ZEALAND

Thank you for purchasing one of our quality Click products. Please keep your receipt as proof of purchase, as this will authenticate your warranty. Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under the warranty, take the product(with proof of purchase) to any Bunnings store(see www.bunnings.com.au for store locations).

Bunnings Group Ltd bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or the Consumer Guarantees Act(NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications. neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited.
ABN 26 008 672 179, Botanicca 3, Level 2 East Tower 570 Swan Street, Burnley, VIC 3121, e-mail: CustomerSupport@bunnings.com.au, PH: 1800 797 586.
Bunnings NZ Limited: PO Box 14436, Panmure Auckland 1741, email: OnlineEnquiries@bunnings.co.nz PH: 1800 797 586

WARRANTY EXCLUSIONS

Damage to the base or diffuser or any part through accident, misuse or negligence.



Cat. No.: SKJ-CR063H July 2024