 

FLUSH / OUTLET VALVE INSTALLATION GUIDE

 
1. Flush Valve Installation



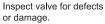


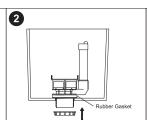


Install valve base into the cistern opening. Firmly tighten the fixing nut to ensure a complete seal is achieved.

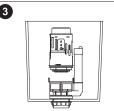

 Insert the valve body into the base, ensuring it is clipped in correctly. The body should be able to rotate.

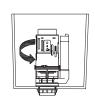

 Rotate the valve body to align the half and full flush buttons.

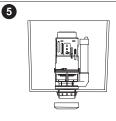


Install the donut seal over the fixing nut before positioning the cistern over the pan.


2. Adjustment of Flush Volume



 Full flush secondary adjustment. Move tab upwards to reduce flush.

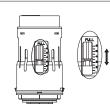


 Full flush primary adjustment. Push tab inwards then move upwards to reduce flush.

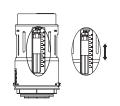

Half flush adjustment. Push tab inwards then move upwards to reduce flush.


3. Push Button Installation and Adjustment

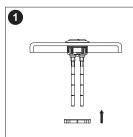


Remove fixing nut from push button assembly and insert into cistern lid.




Tighten nut to secure the push button assembly to the cistern lid.

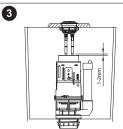

 The push button rods should sit approximately 1-2mm above the flush valve.

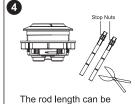

 The rod length can be adjusted by loosening the stop nuts and twisting the rods. Re-tighten the stop nuts when the required length is achieved.

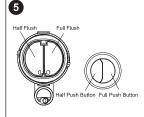

Rotate and align the flush valve to match the orientation of the push buttons.