User Manual

Astronaut Speaker with Glow Light SP-ASTOWH-423

 
WHAT'S IN THE BOX

 
- » Astronaut speaker
- » USB-A to USB-C charging cable
- » User manual

YOU MAY ALSO NEED

 » USB-A power source for charging (laptop/PC, powerbank, car charger, 240V wall

PARTS AND CONTROLS





FUNCTION	OPERATION
Charge	 Connect the USB-C cable to a 5V USB-A power source (wall charger, car charger, laptop/PC, powerbank, etc.). Red light: Charging. No light: Fully charged. Fully charge before first use.
Turn On/Off	» Slide the Power switch.
Change lighting effects	 » Double-press the [M] button to change the brightness. » Press and hold the [M] button to change the effect.

FUNCTION	OPERATION
Play Music via Bluetooth	 Turn on the speaker (red and blue lights flash). Open Bluetooth settings on your device (smartphone, tablet, etc.) Select SP-ASTOWH-423 from the list. Start playback on your device. » To disconnect, turn off your device or the speaker.
Play from a Micro SD Card or USB Flash Drive	 Turn off the speaker. Insert a Micro SD card with metal contacts facing back or a USB flash drive (both not included). Turn the speaker back on. It will automatically switch to the correct mode. Supports MP3 files.
Switch Between Input Modes	» Press the [M] button.
Control playback*	» Press the [${\mathbb D}{\mathbb N}$] button to play or pause.
Adjust volume*	» Press and hold the [₥] button to increase the volume. » Press and hold the [₥] button to decrease the volume.
Skip tracks*	 » Press the [₥] button to skip to the next track. » Press the [₥] button to go to the previous track.

*In Bluetooth mode, you can control playback, adjust the volume and skip tracks on your device.

SAFETY PRECAUTIONS

- » Always supervise children while using the speaker.
- » If the speaker become hot during use or charging, unplug and stop using them immediately.
- » An adult should assist with Bluetooth pairing to avoid unknown connections.
- » An adult should handle the charging process. Do not let children charge the speaker.
- » Charge on a flat, dry surface, away from flammable materials.
- » Unplug the speaker once fully charged to prevent overheating.
- » Keep away from moisture, dust and extreme heat.
- » Clean with a soft, dry cloth. Avoid harsh chemicals.

- » Avoid dropping or subjecting to impact to prevent damage.
- » Never insert the USB plug if the speaker or cable is wet to prevent short circuits, overheating or damage.
- » To prolong battery lifespan, fully charge at least once every 3 months. Battery life varies by use and settings.
- » Do not alter the charging mechanism, battery or other internal components.

TROUBLESHOOTING

Speaker will not turn on:

» Charge the battery.

No sound:

- » Check volume level on the speaker and connecting device.
- » Check Bluetooth connection.

Cannot pair Bluetooth device with speaker:

- » Keep speaker next to your device during pairing.
- » Ensure speaker are in pairing mode. Disconnect AUX cable, and remove the Micro SD card. Turn off and on again to switch to pairing mode.
- » If speaker are paired to another device, disconnect before connecting to your device.
- » If speaker's Bluetooth name is not found, refresh or search again. Wait up to 1 minute for device to appear.

SPECIFICATIONS

- » Model: SP-ASTOWH-423
- » Audio inputs: Bluetooth, Micro SD, USB
- » Bluetooth pairing name: SP-ASTOWH-423
- » Bluetooth version: 5.4
- » Bluetooth range: 10m (unobstructed)
- » Micro SD card / USB flash drive: Up to 32GB in FAT32 format
- » Battery capacity: 1000mAh
- » Charging time: Approx. 3 hours
- » Charging input: DC 5V, 1A

SUPPORT

Scan the QR code or go to: https://help.laserco.com.au/support/home.

Enter your model number to find troubleshooting steps, FAQs and other helpful information.





Do not dispose of batteries or electronic devices with household waste. Follow local recycling regulations. Visit **https://recyclingnearyou.com.au** for more information.



Product Support: P: (02) 9870 3388 E: support@laserco.com.au W: www.laserco.com.au/warranty