

SAFETY INSTRUCTIONS

Read all instructions carefully before installing and operating this appliance. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAVE THESE INSTRUCTIONS.

- Do not attempt to use the unit if it is damaged – return the unit(s) to retailer for repair or replacement.
- IMMEDIATELY turn off the light if the product appears to be smoking or begins to emit a burning odour.
- Do not modify or alter this product.
- Do not expose this product to fire or high temperatures.
- Close supervision is necessary when this product is used near children or pets.
- Unit should be stored indoors in a dry environment and out of reach of children and pets when not in use.
- Do not open the casing of the item.
- The LED light is NOT user replaceable.

Important note:
Return the unit to retailer for repair or replacement if the unit is damaged.

INSTALLATION & OPERATING INSTRUCTIONS

THE PRODUCT IS FOR INDOOR AND OUTDOOR USE

1. Unpack unit onto a flat, dry, level, and sturdy surface and remove all packaging and plastic film. Please check that all components correspond to the product diagram.
2. Open the Battery Case by releasing the locks on the side of the Battery Case.
3. Install 2 AA 1.5V Batteries supplied into each Battery Case in the correct positive and negative polarity orientation.
4. The lights can be controlled for the following function by pressing the functions switch located on the Battery Case.
 - Timer: the lights will be on for 6 hours and then stay off automatically for approximately 18 hours to save battery power. This pattern will cycle continuously in this Timer mode
 - On: the lights will be on constantly until the battery power is exhausted.
 - Off

MOUNT ON SOIL GROUND

1. Each Jumbo Bauble is provided with one Metal Stake.
2. Screw the Metal Stake into the Jumbo Bauble tightly.

12 MONTH WARRANTY

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au or bunnings.co.nz for store locations)

Bunnings Group Ltd bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to our store for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law:
Our goods come with guarantees which cannot be excluded under the Australian Consumer Law or Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty excludes damage resulting from product misuse or product neglect.

The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited ABN 26 008 672 179, Botanicca 3, Level 2 East Tower, 570 Swan Street, Burnley 3121 VIC,
e-mail: CustomerSupport@bunnings.com.au
Or call our Customer Support Team – Ph.1800 797 586

This warranty is given by Bunnings NZ Limited: Postal address: PO Box 14436, Panmure, Auckland 1741,
e-mail: marketing@bunnings.co.nz
Or call our Customer Support Team – Ph.1800 797 586"

Festive

3 PACK JUMBO SHATTERPROOF BAUBLE LED STAKE LIGHT SET

48 WARM WHITE LED LIGHTS

 
 
BATTERY POWER



INSTRUCTIONS MANUAL

Item No. 0433406


PRODUCT FEATURES

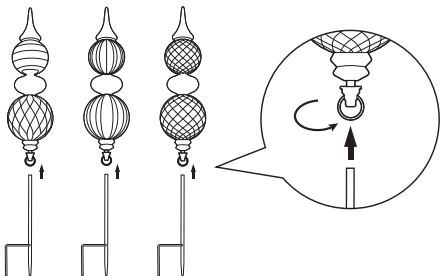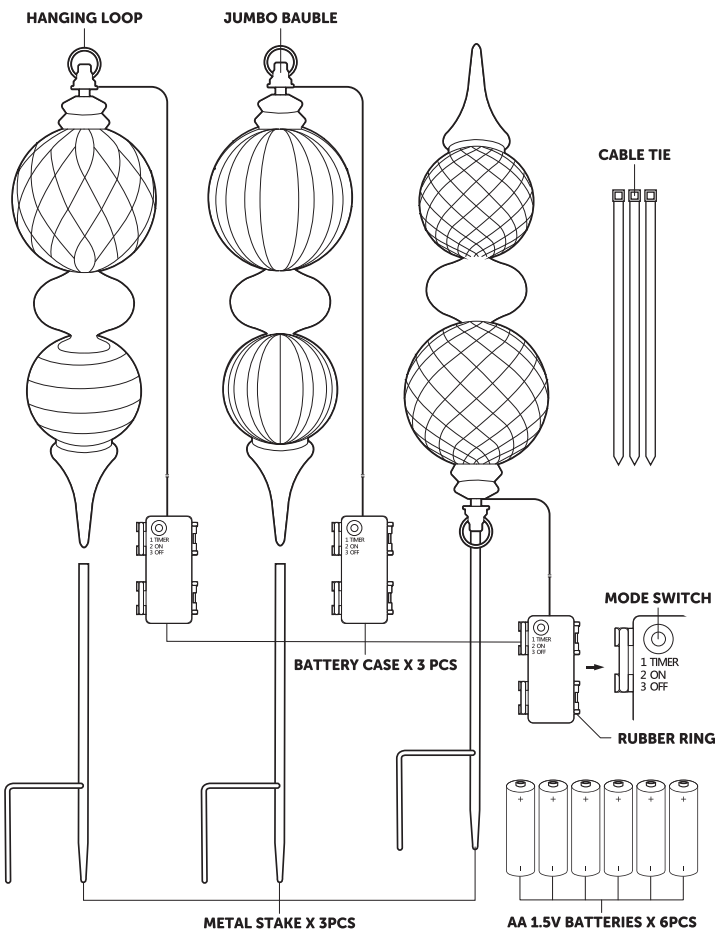

3. Hold the Metal Stake and push it into the soil ground.
4. Use the Cable Tie provided to fix the Battery Case to the Hanging Loop of the product.

MOUNT WITH HANGING HOOK

 1. If the product will be used as a hanging decoration, unscrew the Metal Stake and install a hanging hook (not included) into the Hanging Loop.

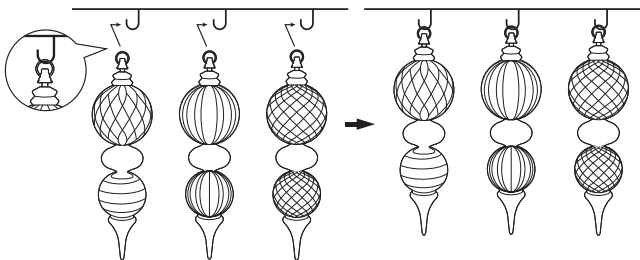

2. Use the Cable Tie provided to fix the Battery Case to the Hanging Loop of the product.

BATTERY REPLACEMENT

1. Open the Battery Case by releasing the locks on the side of the Battery Case.
2. Replace the old batteries with new 2 x 1.5V AA Batteries. Ensure the new batteries are installed into battery holder following the correct positive/negative orientations as shown in the battery holder.
3. Replace battery cover. Make sure the Rubber Ring is situated in the right place around the Battery Case.

FEATURES AND SPECIFICATIONS

Battery	2 x 1.5V AA Batteries for each battery case
Bulb type	16 Warm White LED Lights for each Jumbo Bauble
Function	Timer/On/Off
Material	Plastic and Metal
Product Dimension	H83x W15 x D15 cm each Metal Stake : 32cm Tall

TROUBLESHOOTING

- If the light does not turn on,
1. Check the batteries are correctly installed into the battery case following the correct positive/negative orientations as shown in the battery holder.
 2. The battery power might be exhausted. New batteries need to be replaced.
 3. Check the switch is in TIMER or ON position.

CARE AND MAINTENANCE

- Unit can be cleaned using a soft cloth- DO NOT submerge unit in water
- When the product is not in use, it should be stored indoors in a dry and high place that is out of children's or pets' reach.
- Please remove batteries if consumed or if product is to be left unused for a long time.

DISPOSAL

- Festive Click encourages its consumers to properly dispose/recycle unwanted or end-of-life products and batteries in accordance with your local regulations and environmental recommendations.