

## INSTALLATION GUIDE BASIN TOP ASSEMBLY

### IMPORTANT

- Prior to installation, thoroughly inspect all parts for damage or defects. Warranty will be void if product is installed with pre-existing defects.
- Local or state regulations require some products to be installed by a licensed tradesperson. Check these regulations before attempting any DIY work.
- This product must be installed in accordance with AS/NZS 3500 and local authority regulations.

### INSTALLATION

1. Turn off water supply at isolation valves.
2. Remove old handles, flanges and spindles from the basin bodies.  
Note—Do not remove the basin bodies, T-piece or locking nuts from the existing basin set.
3. Install the new spindles into the basin bodies and tighten with a spanner. Ensure the red fibre washers are correctly positioned, between the spindles and the basin bodies.
4. Screw the flanges onto the spindles.
5. Place the spindle adapters onto the spindles.
6. Position the handles onto the spindles, ensuring they fit correctly onto the spindle adapters.
7. Screw the locking nuts onto the spindle threads and tighten with the included key.
8. Position the indicator discs into the top of the handles, and push in the handle caps.
9. Turn on water supply and check for leaks.

### OPERATING SPECIFICATIONS

Pressure:

min 150kPa – max 500kPa

Temperature:

min 2°C – max 50°C

