

PRO
Operation Manual

PRO
Operation Manual



T601-2

Pro1 Technologies

1111 S. Glenstone Ave., Suite 3 -100
Springfield, MO 65804

Toll Free : 888-776-1427

Web: www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern


Table of Contents	Page
Table of Contents	1
Thermostat Operation	2-3
Thermostat Quick Reference	4-6
Thermostat Warranty Information	7

Una version en español de este manual se puede descargar en la pagina web de la compañía.



Caution

Equipment damage hazard. Do not operate the cooling system if the outdoor temperature is below 50 °F (10 °C) to prevent possible compressor damage.

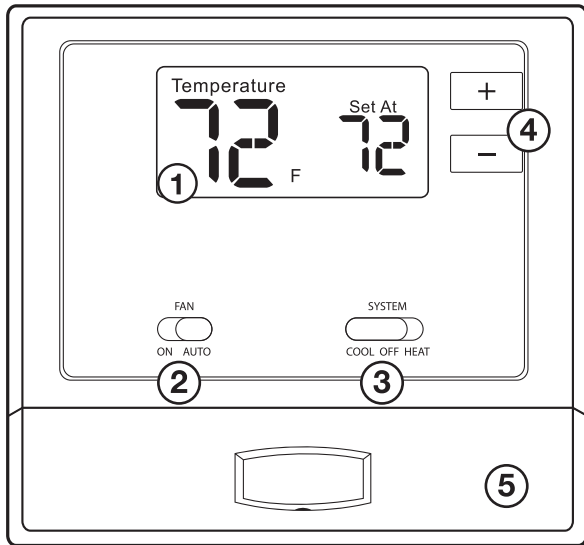

- ① LCD
- ② Fan Switch
- ③ System Switch

- ④ Temperature Setpoint Buttons
- ⑤ Easy change battery door


- ① **LCD Display**
See page 6 for details about this display read out.
- ② **Fan Switch**
Select ON or AUTO. ON will run the fan continuously. AUTO will cycle the fan on only when the heating or cooling system is on.

- ④ **Temperature Setpoint Buttons**
Press the + or - buttons to select the desired room temperature.
- ⑤ **Easy Change Battery Door**
See page 4 for details.


- ③ **System Switch**
Selects the operation mode on your HVAC system. Selecting HEAT turns on the heat mode. Selecting COOL turns on the cool mode. Selecting OFF turns both heating and cooling off.

Battery Door Information

Replace with 2 AA Alkaline Batteries. High quality Alkaline batteries are recommended.

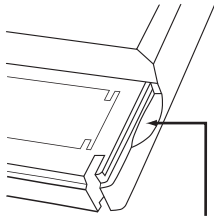

Use the finger bevel on the lower portion of the thermostat to open the easy access battery door.

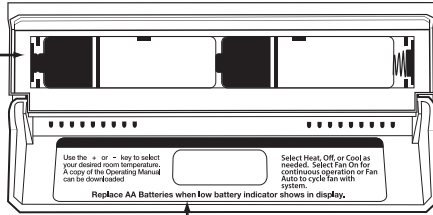

Simple operating instructions are found on the back of the battery door.



Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the setpoints will change to 55°F (Heating) and 85°F (Cooling). If the user adjusts the setpoint away from either of these, it will hold for 4 hours then return to either 55°F or 85°F. After day 63 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the batteries are changed.




Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable. Freezing or overheating can occur.

Low Battery Indicator:
Replace batteries when indicator is shown.

System Operation Indicators:
ON will display when the COOL or HEAT is on.

Compressor delay feature is active when flashing.

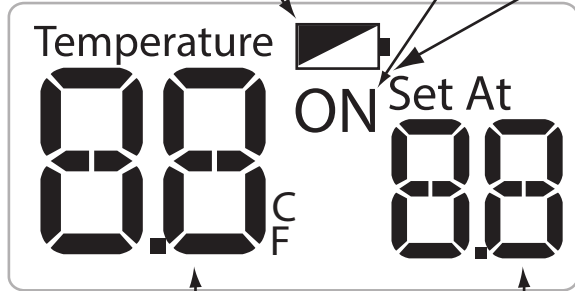

Indicates the current room temperature.

Displays the selected setpoint temperature.

Warranty Registration

Your new thermostat has a 5 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. You can register your new thermostat in 2 ways:

Online

Go to the company website, select warranty registration and fill out a short registration form.

Mail

Complete the form below and mail it to the address shown.

Warranty Registration

Name: _____ Thermostat Model: _____

Address: _____ Date Installed: _____

City: _____ Complete form and mail to:

State: _____ **Thermostat Warranty Registration**

Zip: _____ 1111 S. Glenstone

Suite 3 -100

Springfield, MO 65804

**Cut Out For
Warranty Registration**



www.pro1iaq.com