

PORTA WAINSCOTING KIT

INSTALLATION GUIDE

KIT CONTAINS

- 6 x 720mm vertical panel mould pieces (primed and mitre cut)
- 6 x 820mm vertical panel mould pieces (primed and mitre cut)
- Installation instructions

PANEL MOULD: PM3012PIFF

This kit is designed to create three frames (720 x 820mm each), covering a lower wall section of 2.9 - 3.0 meters wide. Each piece is precision-cut with mitred edges for easy installation.

ADDITIONAL COMPONENTS

Chair Rails (above the frames) and Skirting Boards (at floor level) can be purchased separately to complete the wainscoting design.

Discover Porta's range of Chair Rail and Skirting Board designs at www.porta.com.au

TOOLS REQUIRED


- Tape measure
- Adhesive or caulking gun suitable for timber
- Pencil
- Spirit level
- Sandpaper
- Drop sheet (to protect flooring)

STEP-BY-STEP INSTALLATION INSTRUCTIONS




1. Prepare Your Workspace

- Lay a drop sheet to protect the floor.
- Ensure the wall surface is clean, smooth, and free of debris or defects. Sand lightly if needed to create a flat surface.

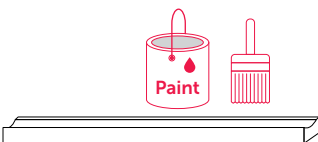


2. Paint the Mould Pieces

- Lay the mould pieces flat on a protected surface.
- Sand lightly to ensure smooth edges.
- Apply your desired paint colour to all mould pieces and allow them to dry completely before installation.

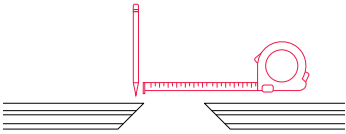


3. Measure and Mark

- Determine how many frames fit by dividing the wall width by the frame width (820mm).
- For a cohesive and professional finish, maintain equal gaps of 90–115mm between frames, and the Chair Rail or Skirting Board.
- Use a pencil to mark the top and bottom edges of each frame.
- Mark gaps between frames to guide placement.

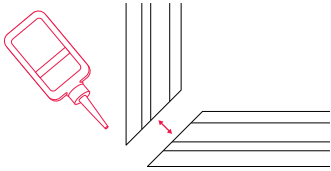

4. Assemble and Install Frames

- Start with the Bottom Horizontal Mould (820mm):
 - Apply a continuous bead of adhesive to the back.
 - Position it at your marked location and press firmly.
- Attach the Left Vertical Mould (720mm):
 - Apply adhesive to the back and align it to form an "L" shape with the bottom mould.
- Add the Top Horizontal Mould (820mm):
 - Apply adhesive and position it at the top of the frame, pressing it firmly in place.
- Complete the Frame with the Right Vertical Mould (720mm):
 - Apply adhesive and align it to close the frame.
- Repeat for Additional Frames
 - Use measuring blocks to ensure consistent gaps between frames.
 - Work from left to right across the wall, repeating the process for each frame.

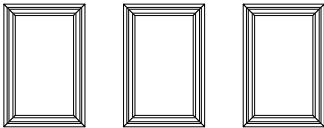

5. Finishing Touches

- Fill any gaps, joints, or uneven edges with caulk or wood filler for a seamless appearance.
- Sand all filled areas until smooth and flush with the surface.
- Apply your final coat of paint to the installed mould pieces for a uniform and polished look.
- Allow the paint to dry completely before enjoying your newly finished wall.

Your wainscoting is now complete.

CARE AND MAINTENANCE

- Clean the wainscoting with a soft, damp cloth.
- Avoid abrasive cleaners to maintain the finish.

