

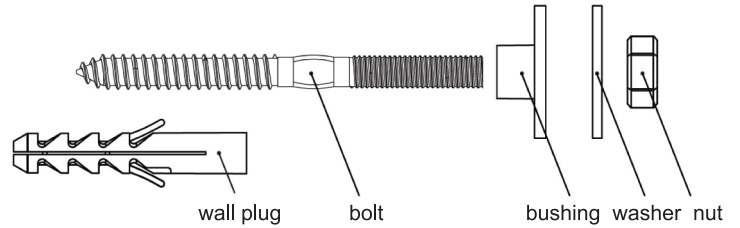
INSTALLATION GUIDE WALL HUNG BASIN

PRE-INSTALLATION INSPECTION

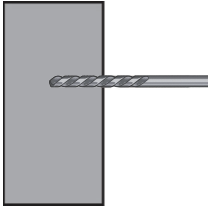
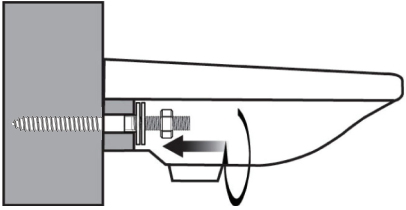
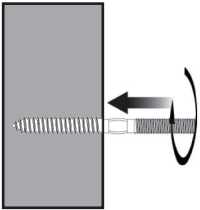
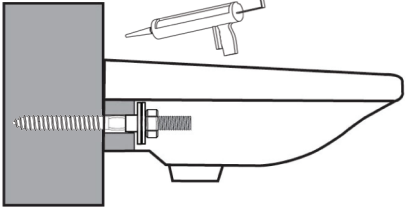
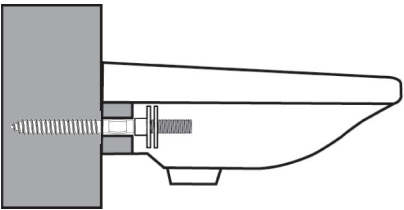
Thoroughly inspect all parts and components prior to installation. Products will not be warranted for defects after they have been installed.

NOTE

The included fixings are suitable for timber framed walls only. The wall must be reinforced with noggins to provide adequate support at the desired basin height. Specialised fixing bolts (not included) are required when fixing to a metal frame or masonry walls.



Note: Wall plug should only be used when installing on a masonry wall.

 <p>1. Measure the basin and mark the drilling locations to suit your required height. Drill two holes in the wall using a 4mm drill bit to a depth of 50mm.</p>	 <p>4. Tighten the nuts onto the protruding threads to secure the basin to the wall. Do not over-tighten as this may damage the basin.</p>
 <p>2. Screw a bolt into each hole using a spanner up until the flat part of the bolt is against the wall.</p>	 <p>5. Use a wet area silicone to seal the top and sides of the basin. Do not use epoxy type glues.</p>
 <p>3. Line up the holes on the rear of the basin with the protruding threads and position the basin against the wall. Slide the bushings and washers onto each bolt.</p>	<p>CARE AND MAINTENANCE Be mindful of sharp objects that may scratch or damage the surface. Do not tap objects, such as shaving razors or toothbrushes etc., against any surface.</p>

Clean with a soft cloth and warm soapy water or a mild detergent. Do not use abrasive cleaners or harsh chemicals. Avoid leaving toothpaste or residues from other bathroom products on any surface for extended periods.