

2 Door Sliding Robe

ASSEMBLY GUIDE

Important Instructions

Before commencing assembly:

Follow all instructions
COMPLETELY.

Hardware kit contains small
parts; keep out of reach
of children.


Ensure all listed parts are present.

Required assembly work surface
should be solid, level, clean
and flat.

Ensure all melamine edges are
facing to the front of the unit.

Two person assembly required.


**DO NOT stand the unit up until the
Back panels have been nailed on
otherwise the unit may collapse.**

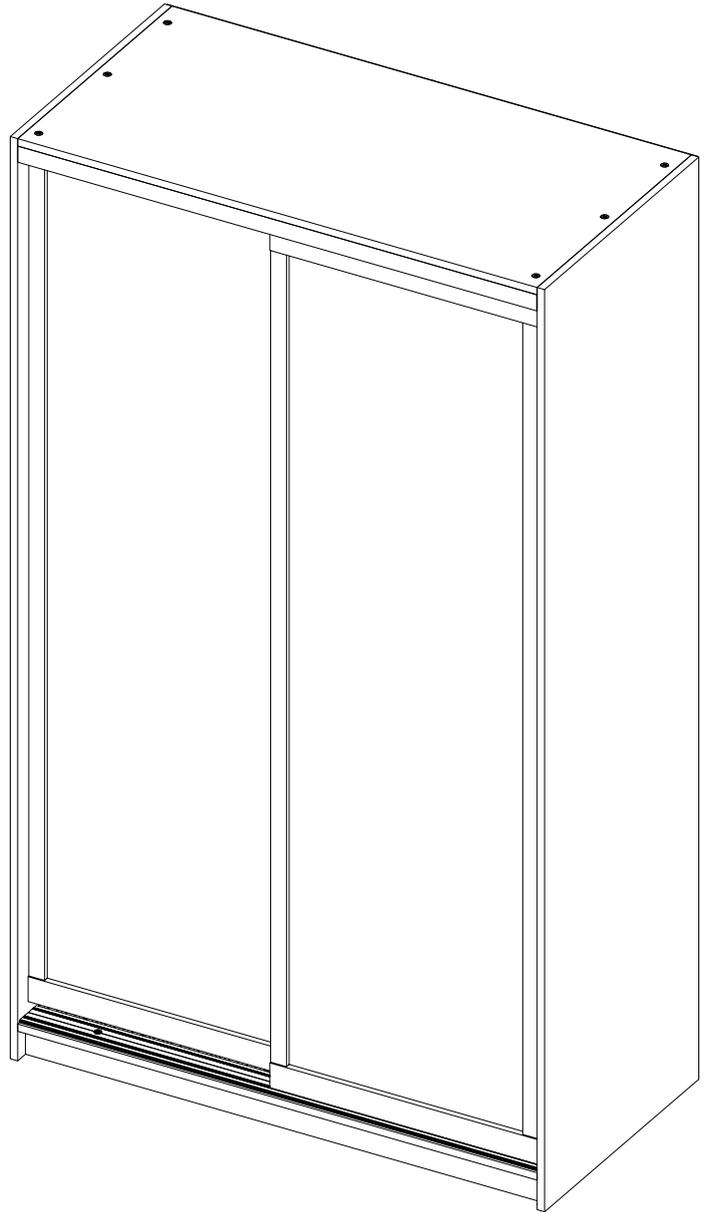











- ✓ Australian Made
- ✓ Quality Fixture & Fittings
- ✓ Practical, Adaptable & Affordable
- ✓ Easy to Assemble




BUILD OVERVIEW

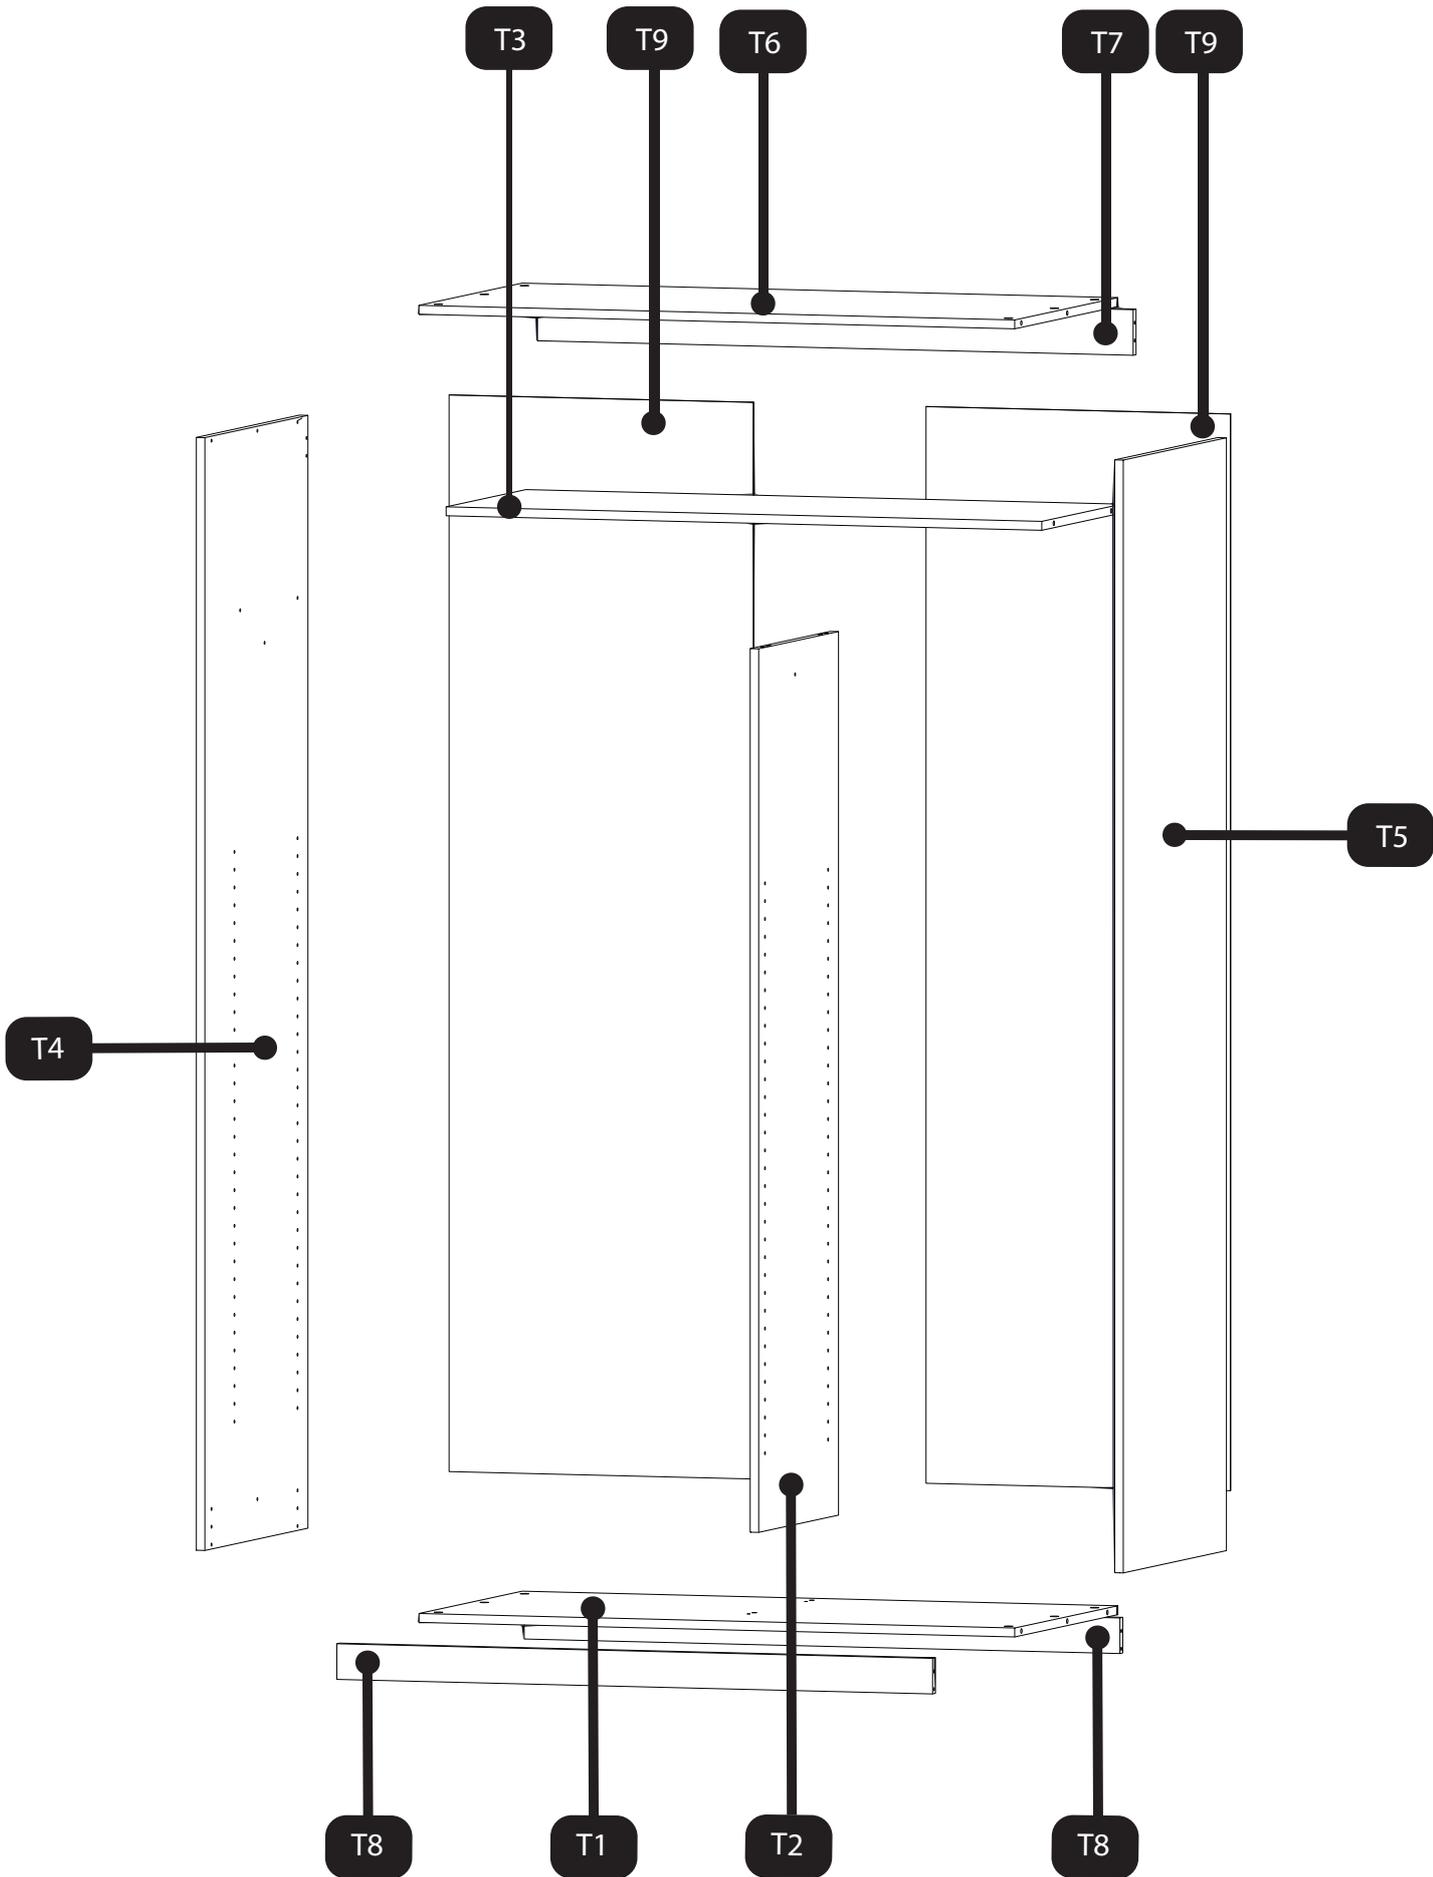

HARDWARE KIT

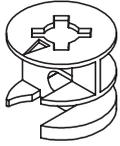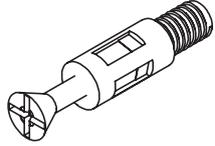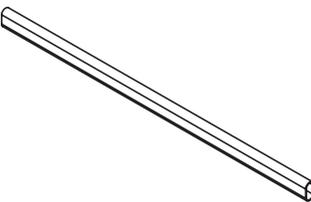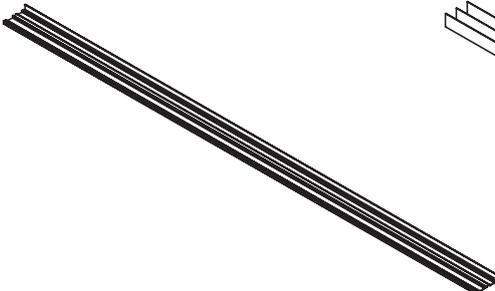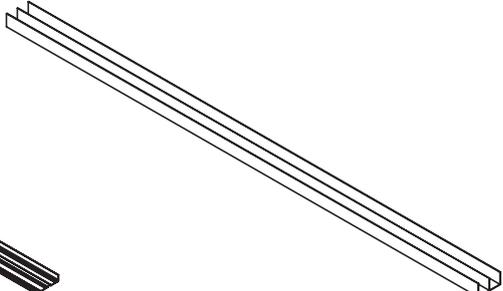A x21	B x21	C x21	D x14	E x5
				
F x75	G x13 (Ø5mm)	H x4	I x4	J x1
				
K x5 (Ø8mm)	L x6 (16mm)	M x3 (20mm)	Q	R
				
N x2 (566mm)	O x1	P x1		
				


TOOLS REQUIRED TO ASSEMBLE

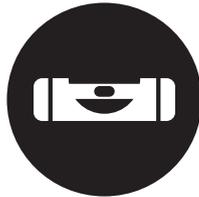

Phillips Head Screwdriver, Drill, Hammer & Spirit Level.


STEP 1

- A** x6
- B** x2

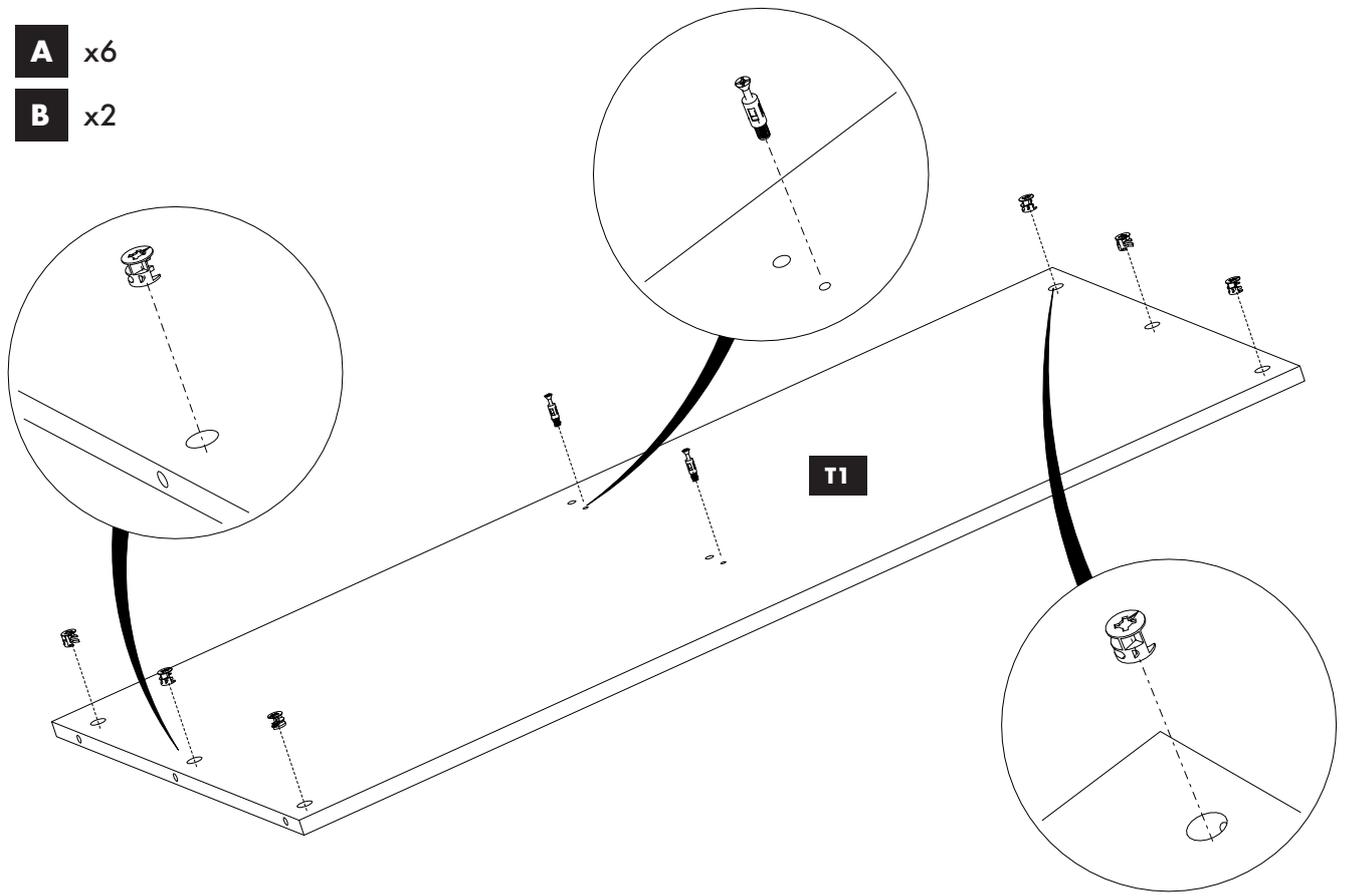


STEP 2

- A** x4
- D** x2
- E** x2
- K** x4
- H** x2

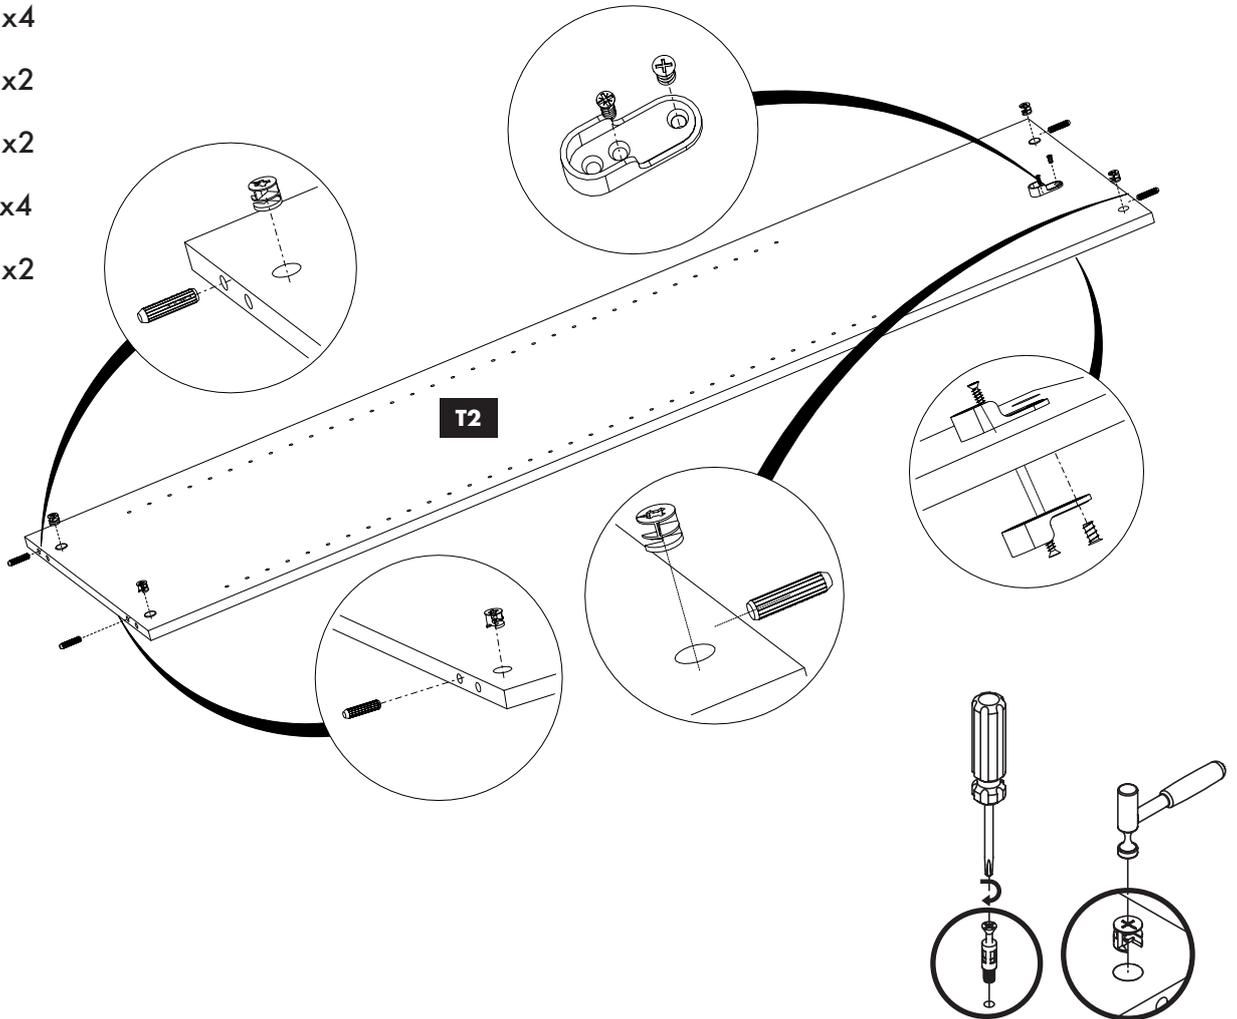

STEP 3



A x6

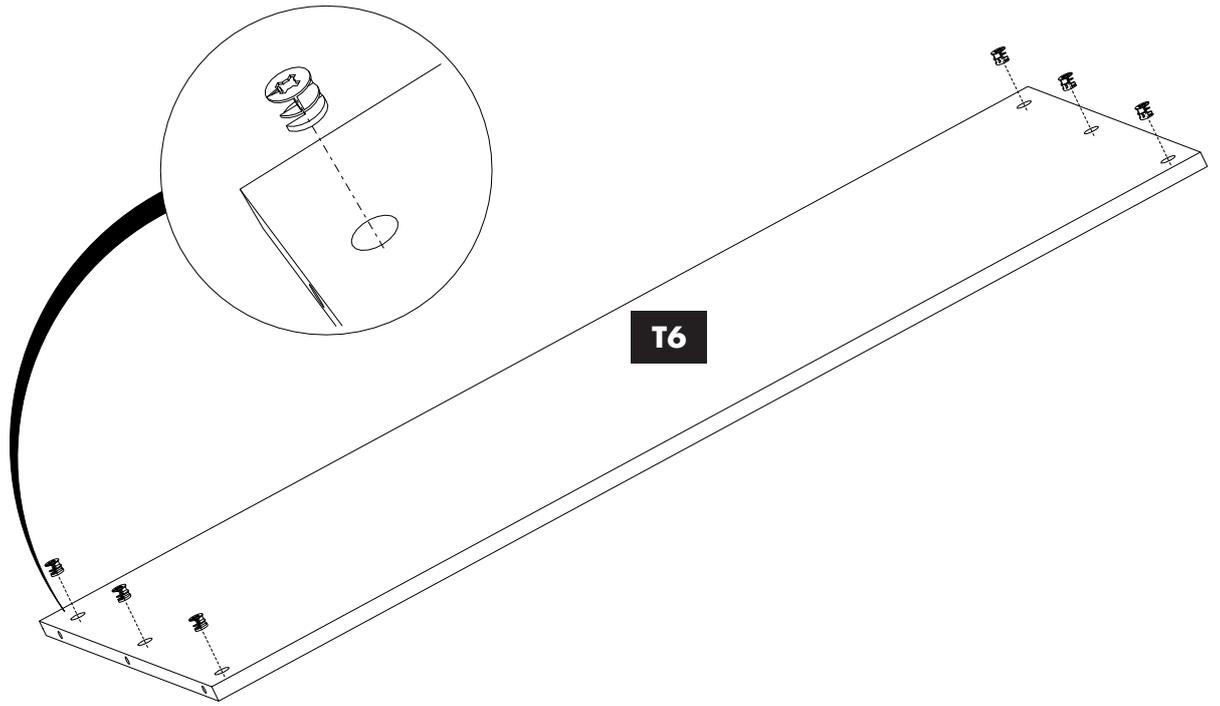

STEP 4


A x4

B x2

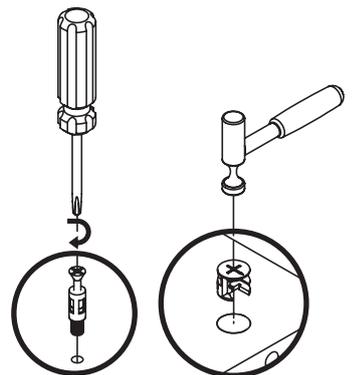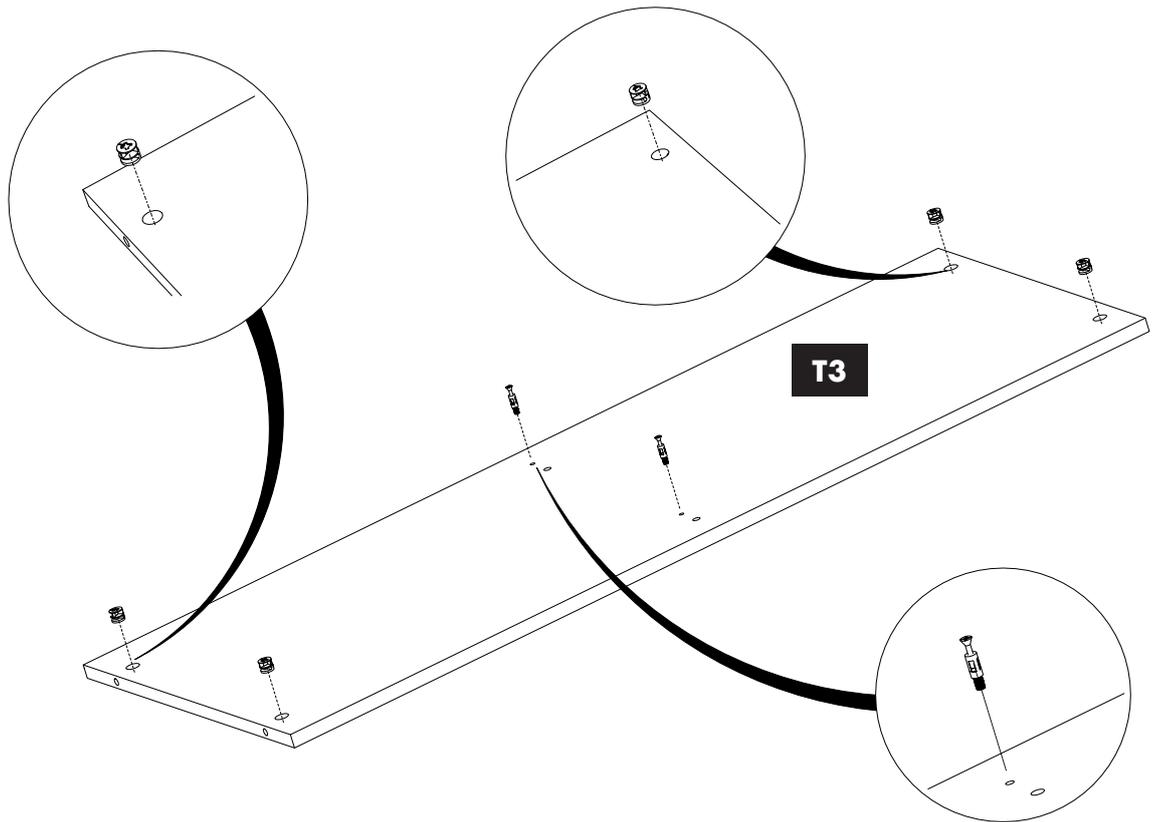



STEP 5

- B** x8
- E** x1
- H** x1
- D** x1

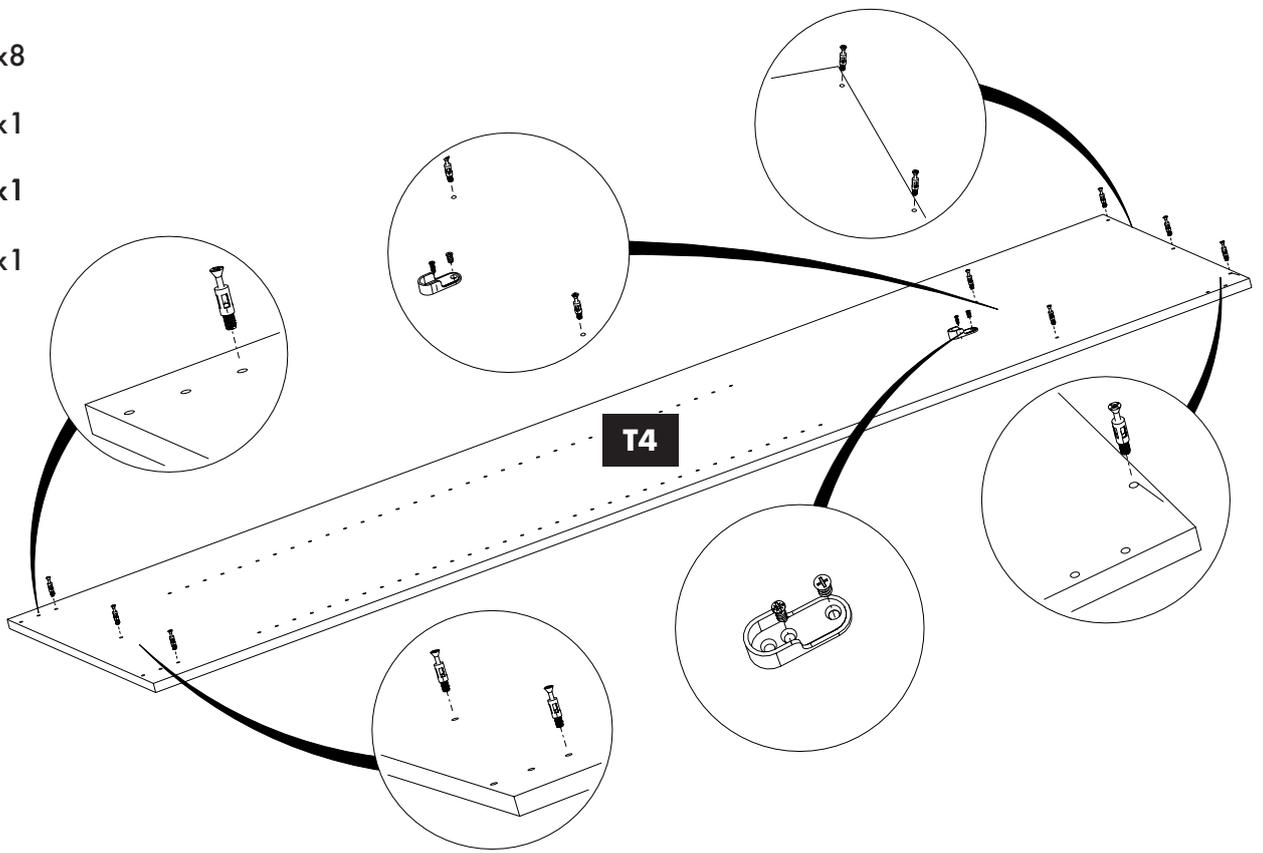


STEP 6

- B** x8
- E** x1
- H** x1
- D** x1

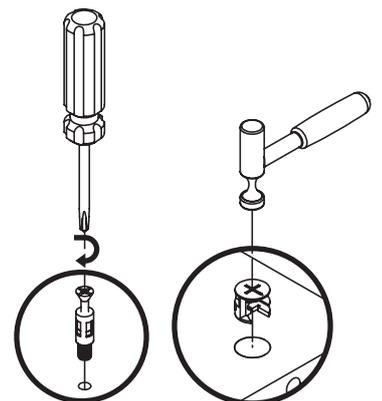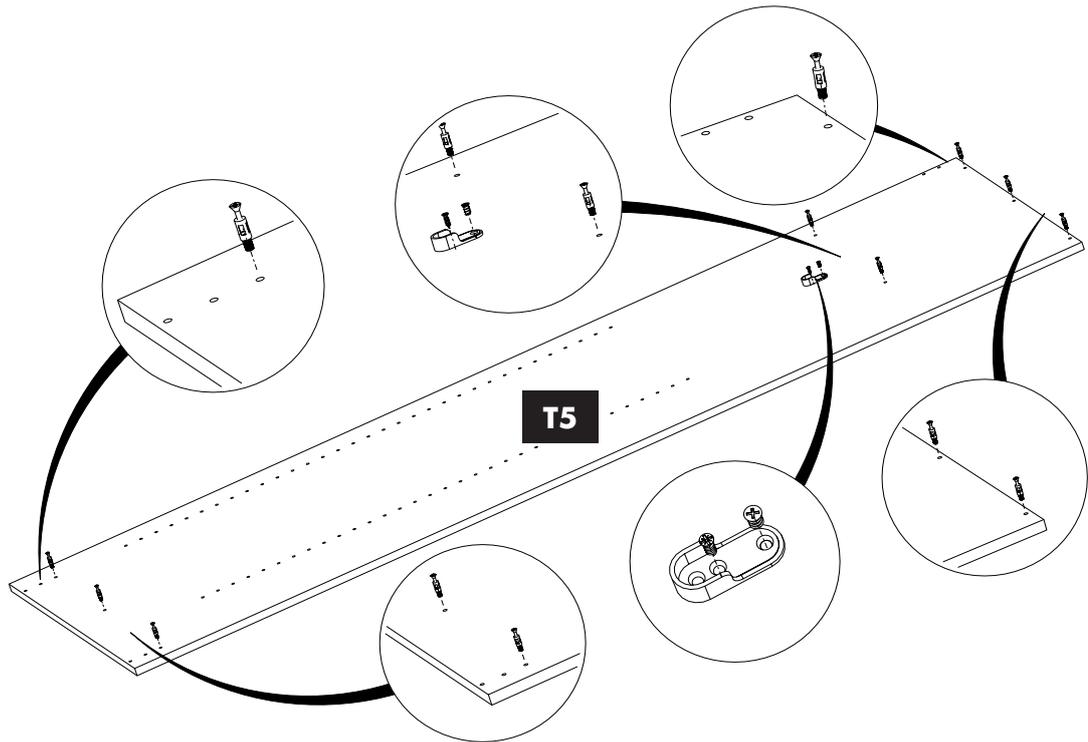

STEP 7

G x12

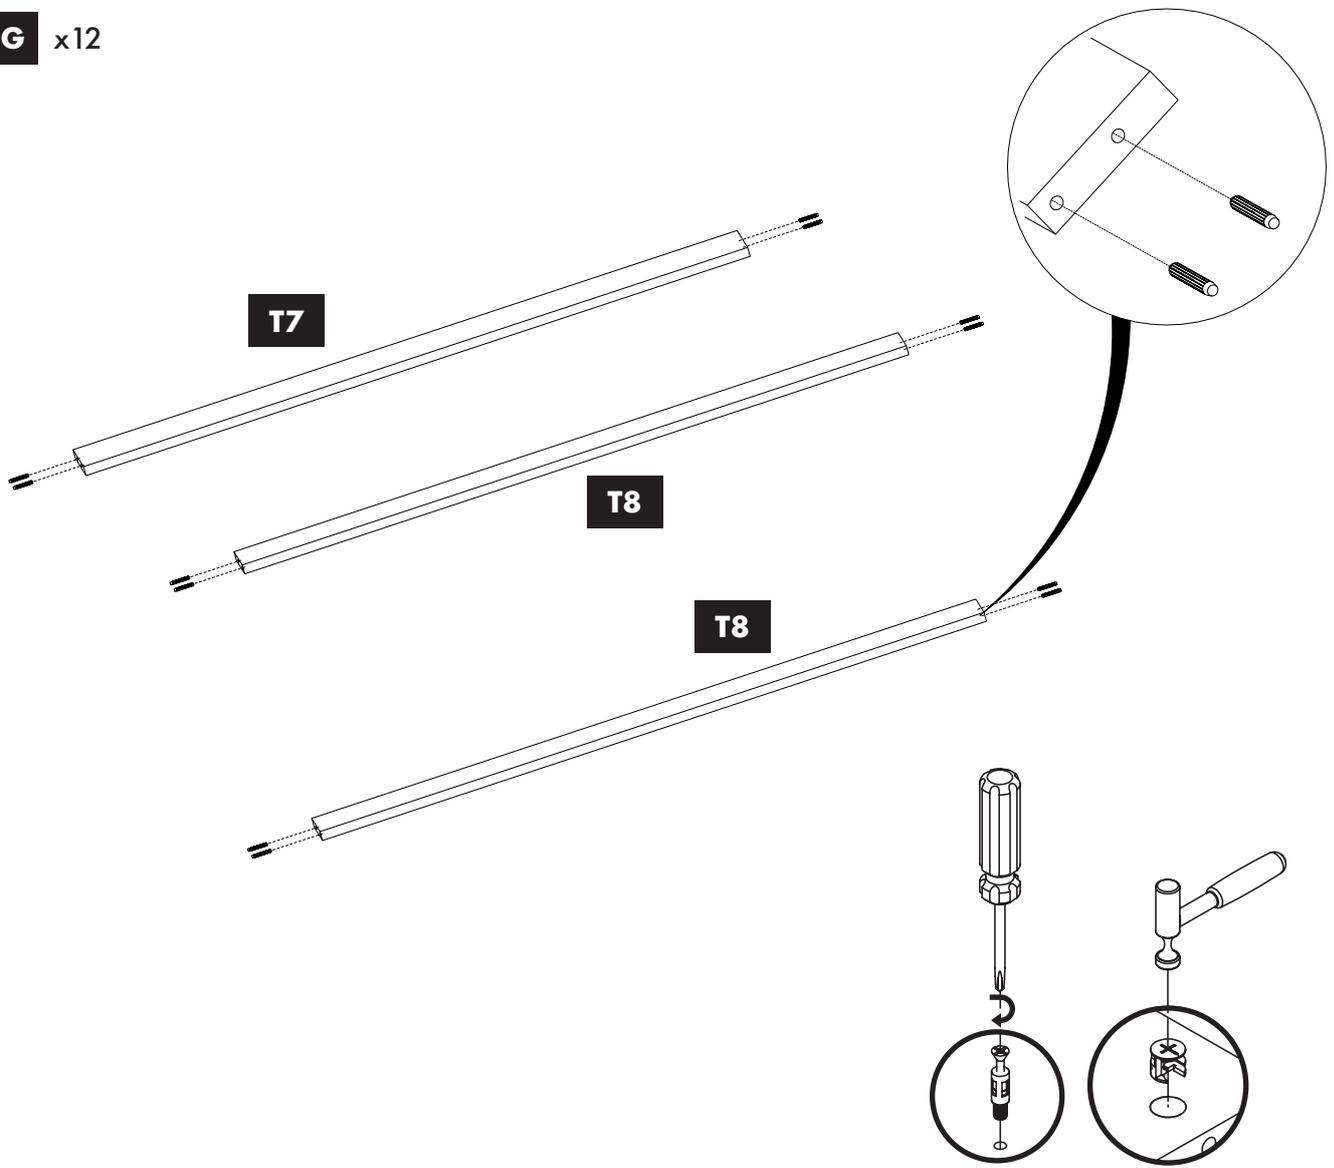


ASSEMBLY NOTE

Ensure Triangle on the CAM (A) is facing towards the incoming Pin or Hole when assembling as pictured below


To tighten turn CAM clockwise 180°

DO NOT Stand the unit upright unless the back has been nailed on, otherwise the unit may collapse.


Ensure all melamine edges are facing to the front of the unit.

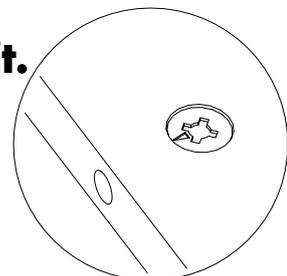


STEP 8

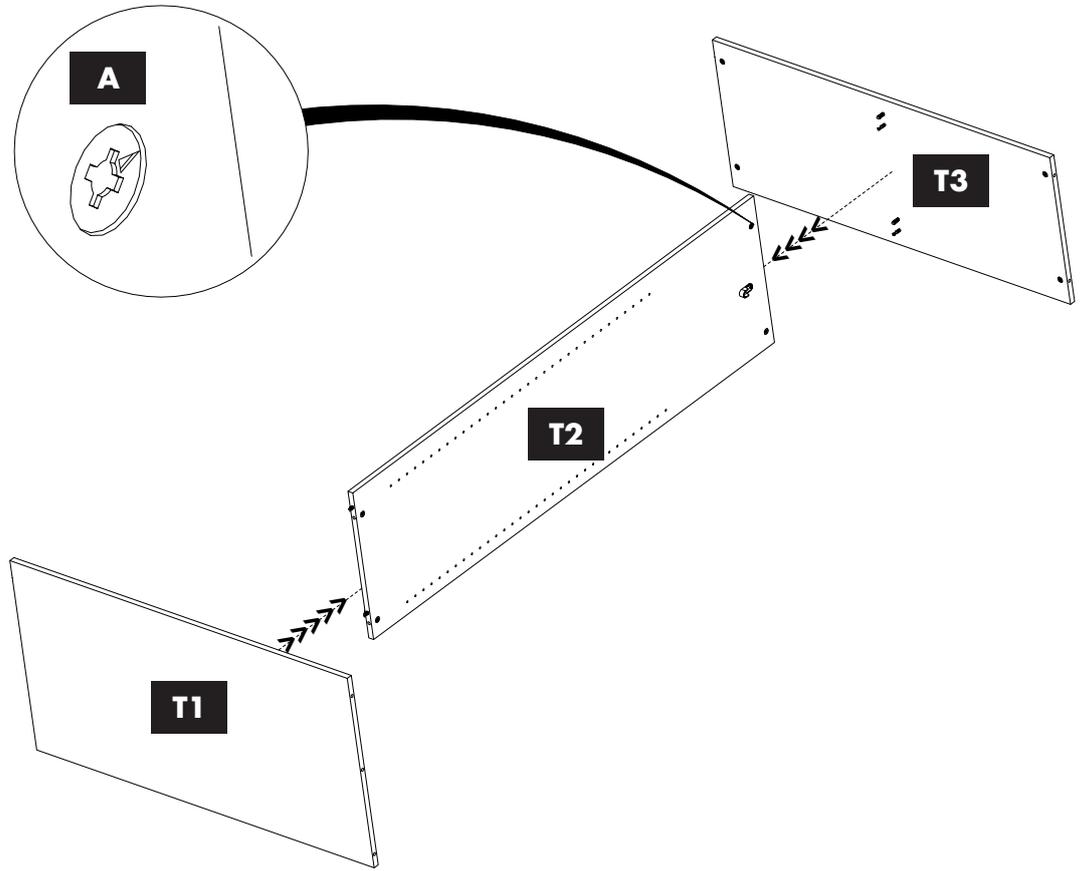


STEP 9

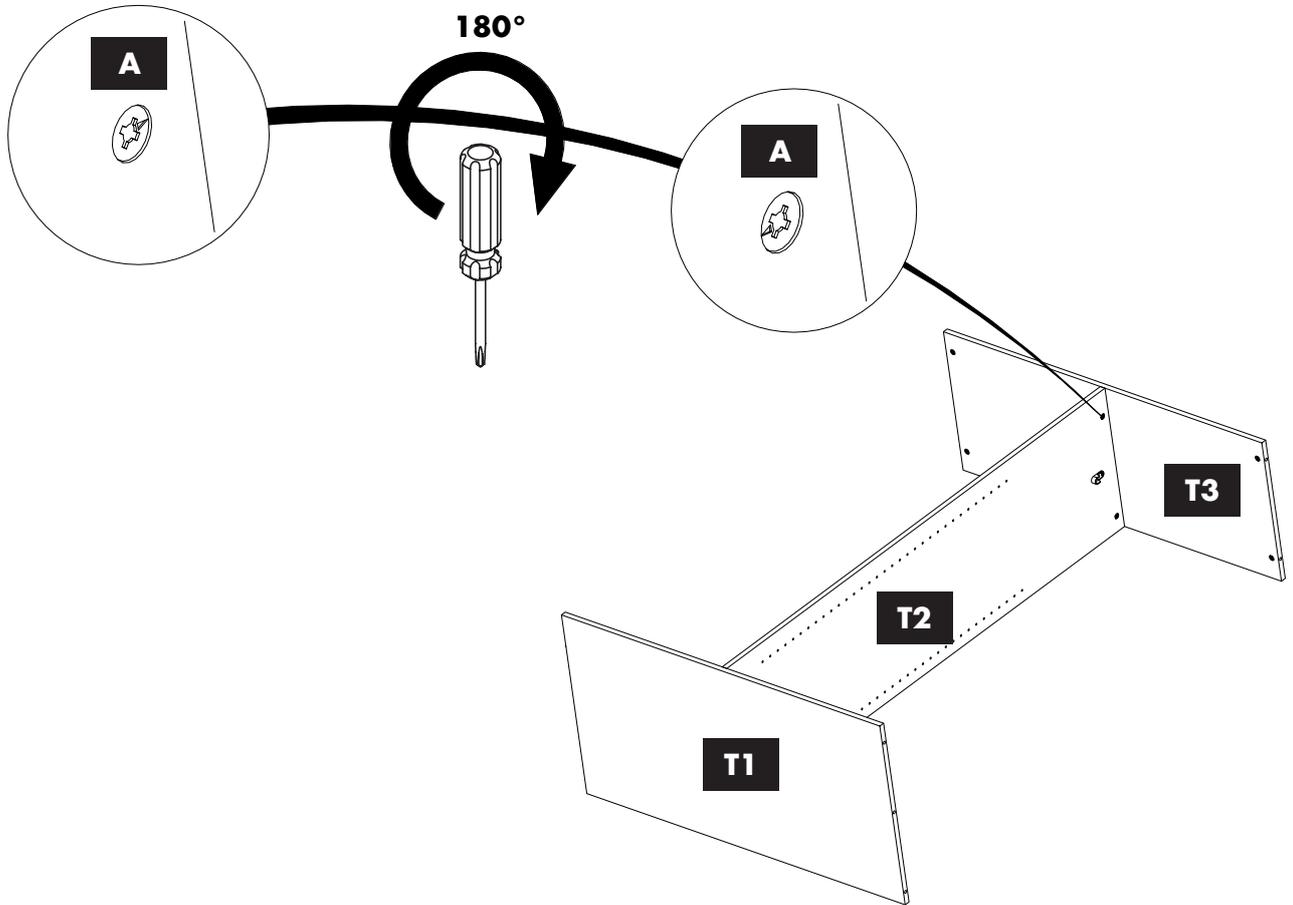


STEP 10

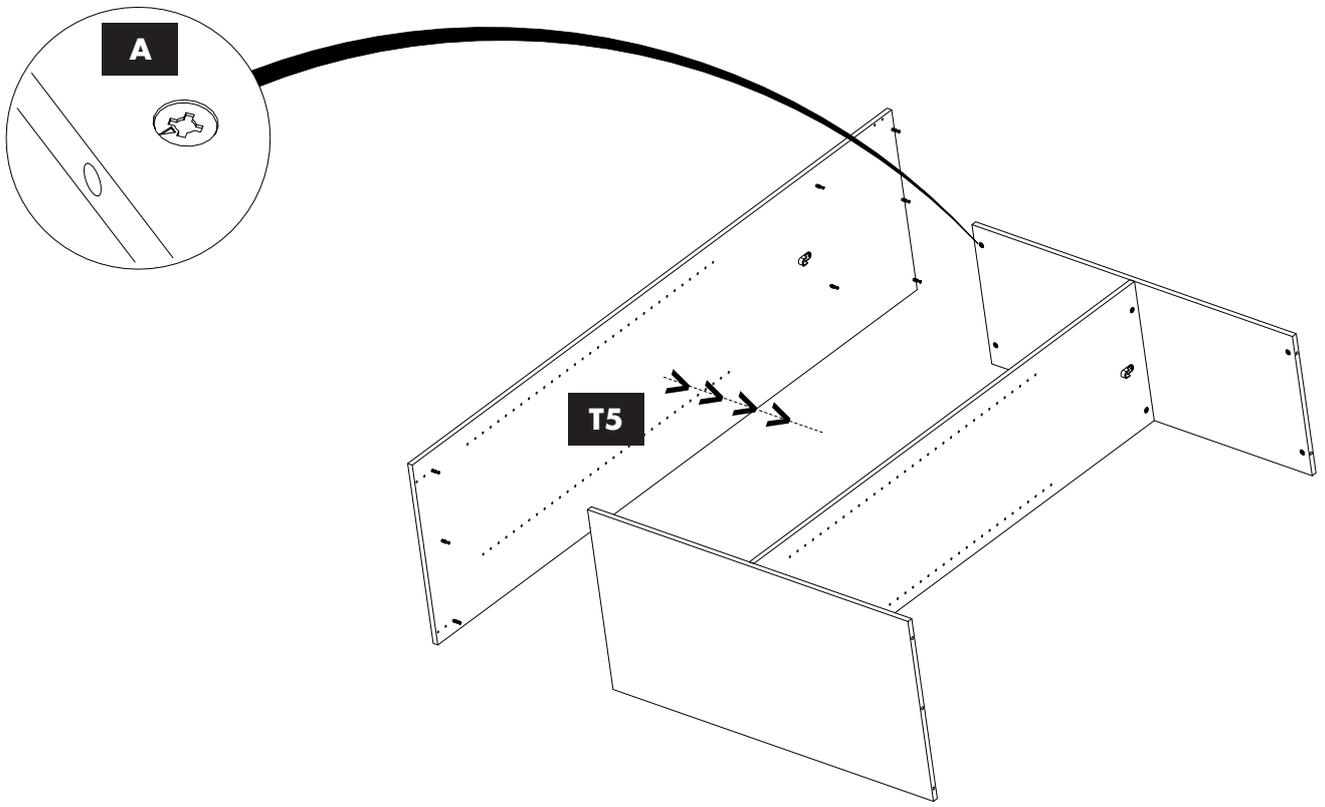


STEP 11

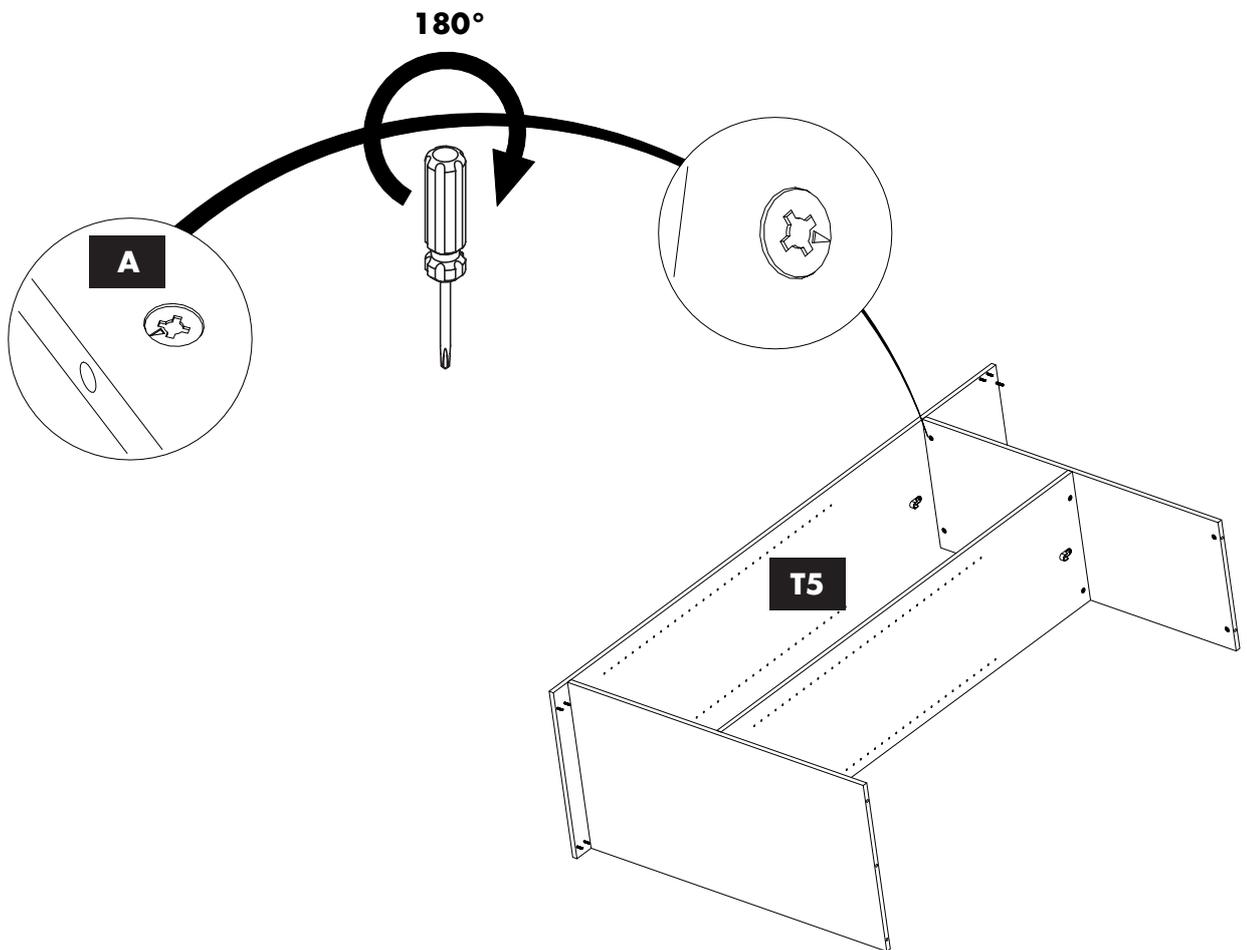


STEP 12

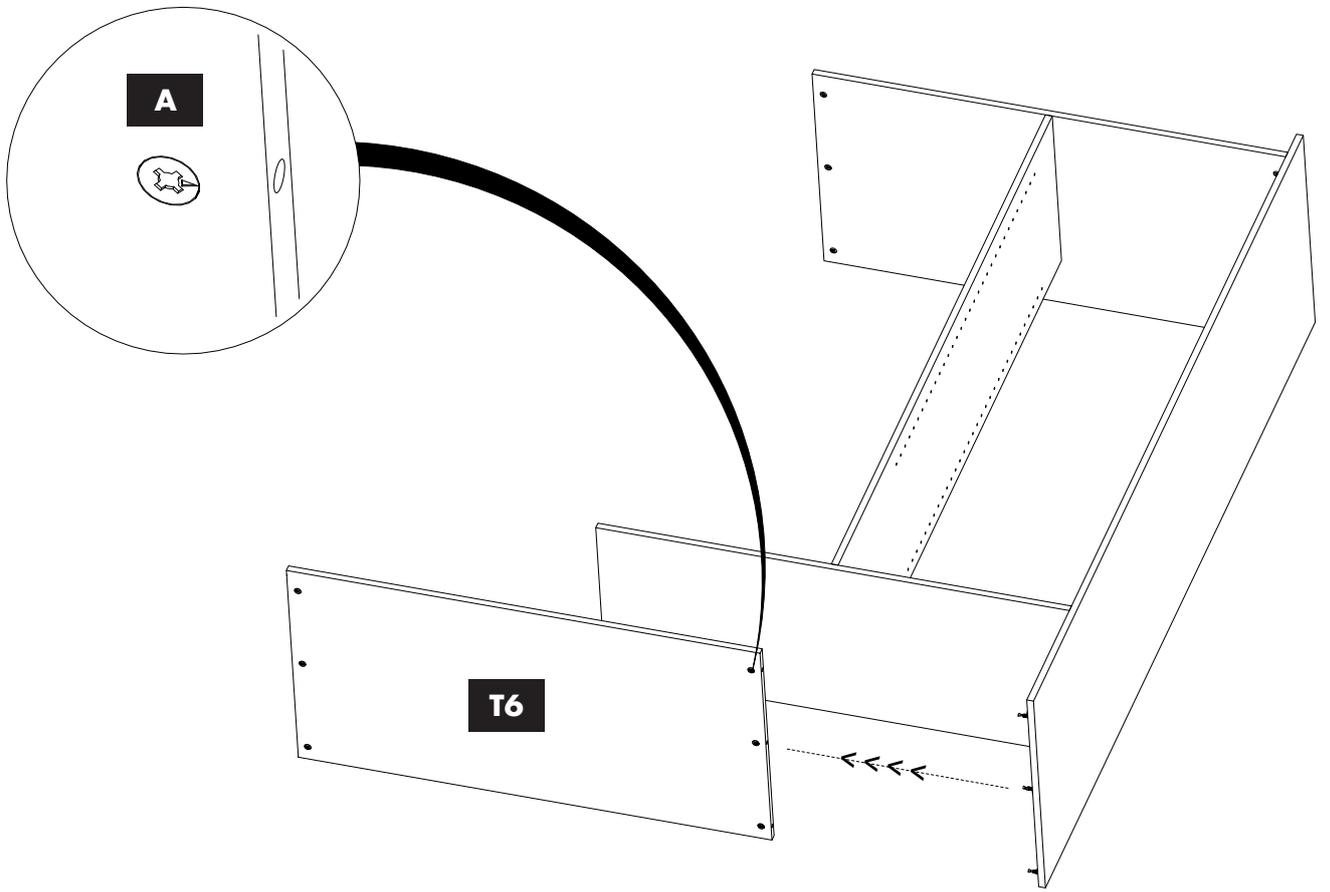


STEP 13

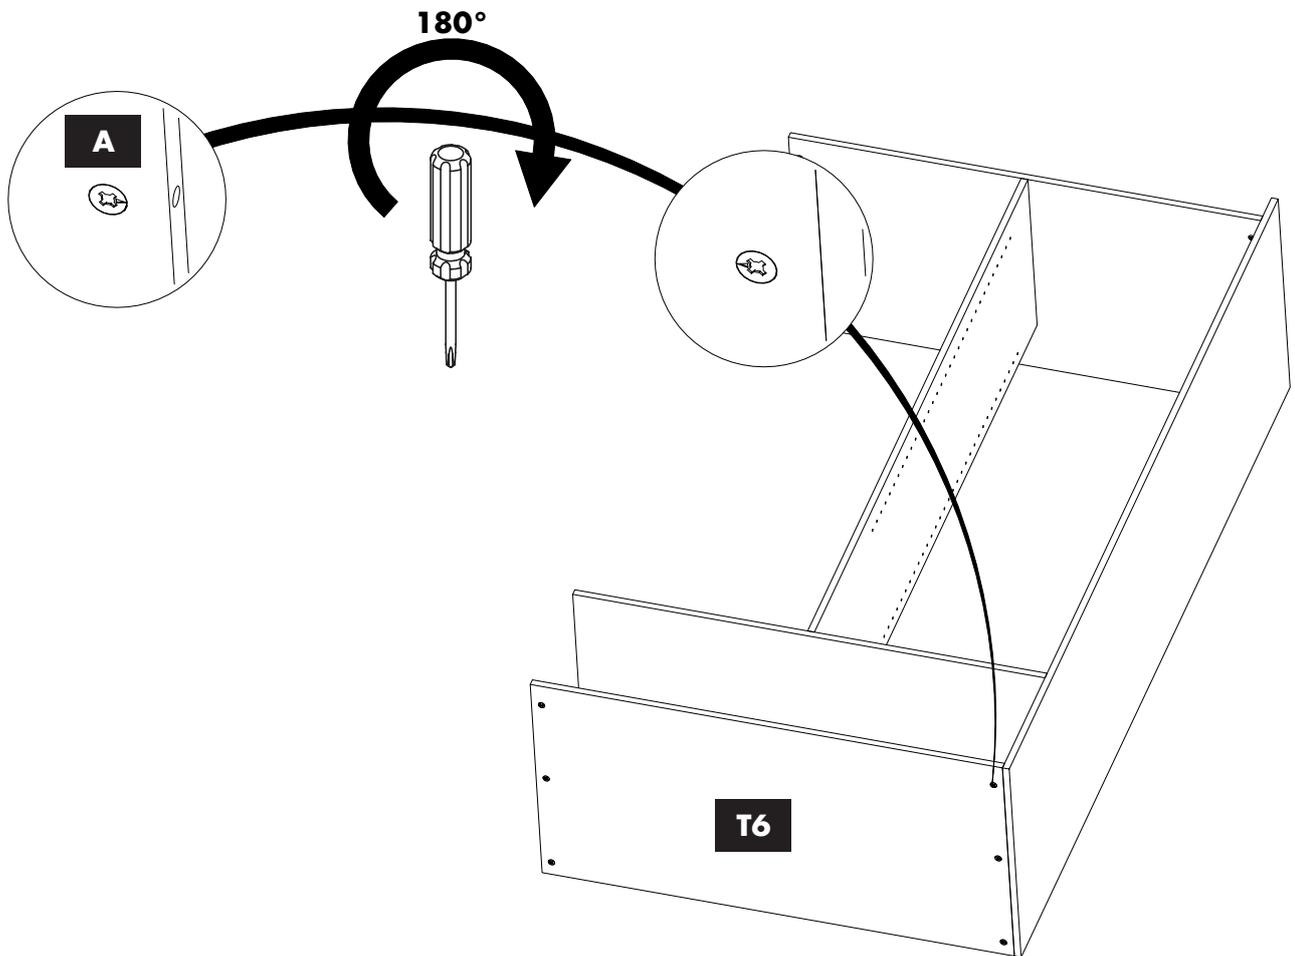


STEP 14

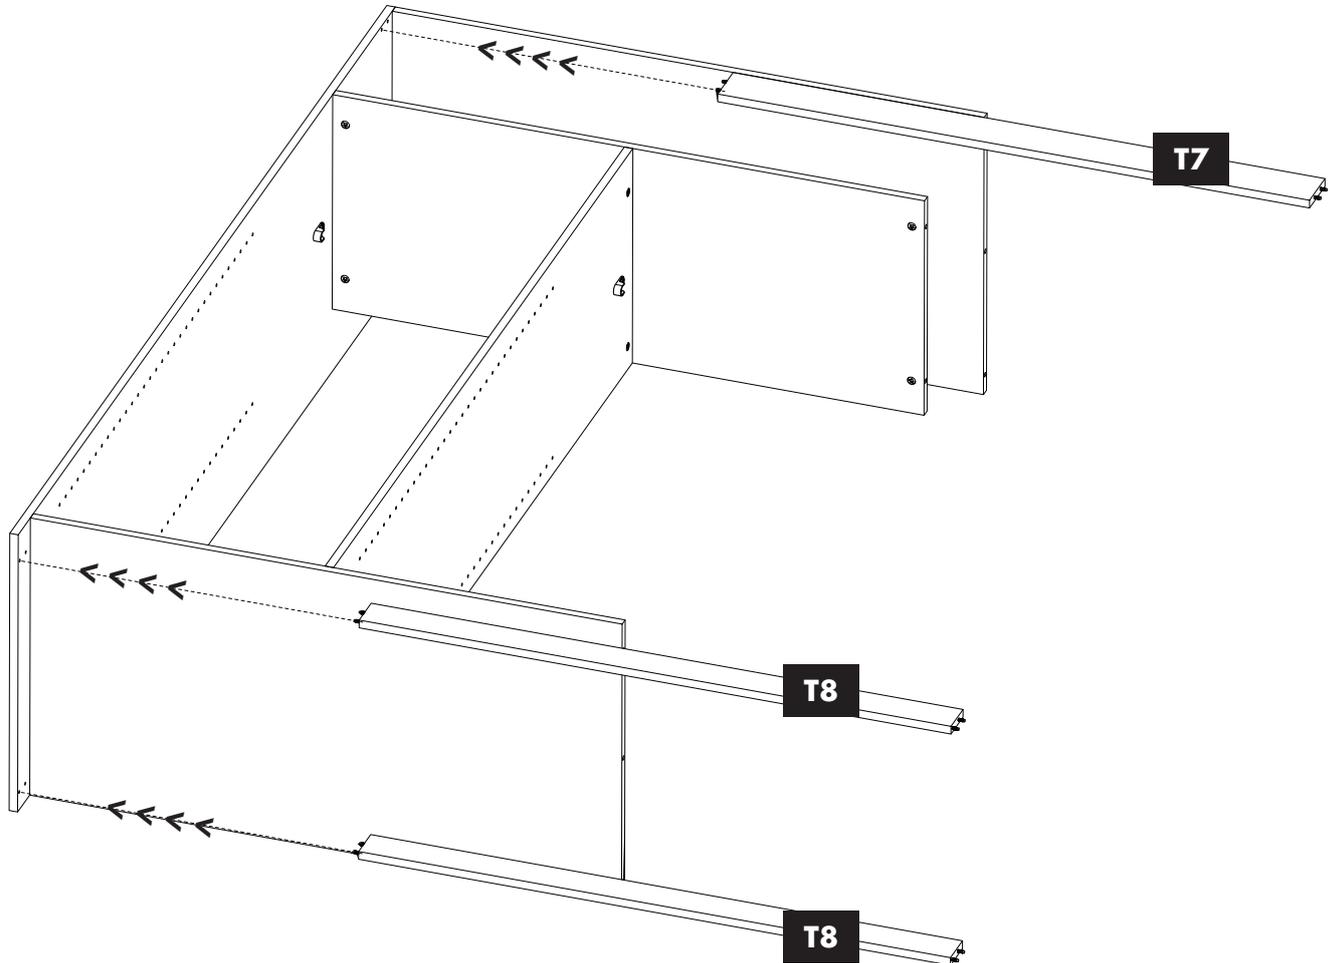


STEP 15

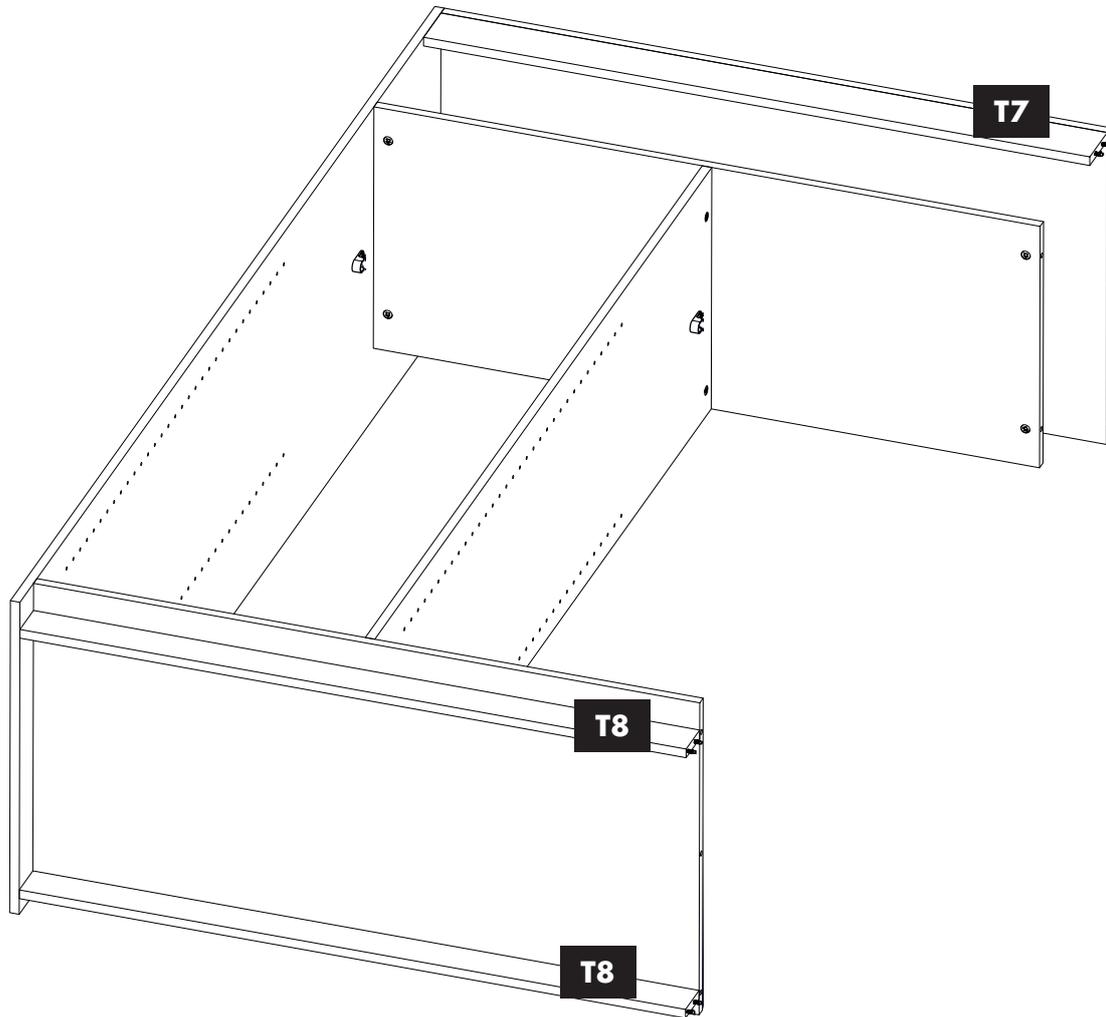

STEP 16

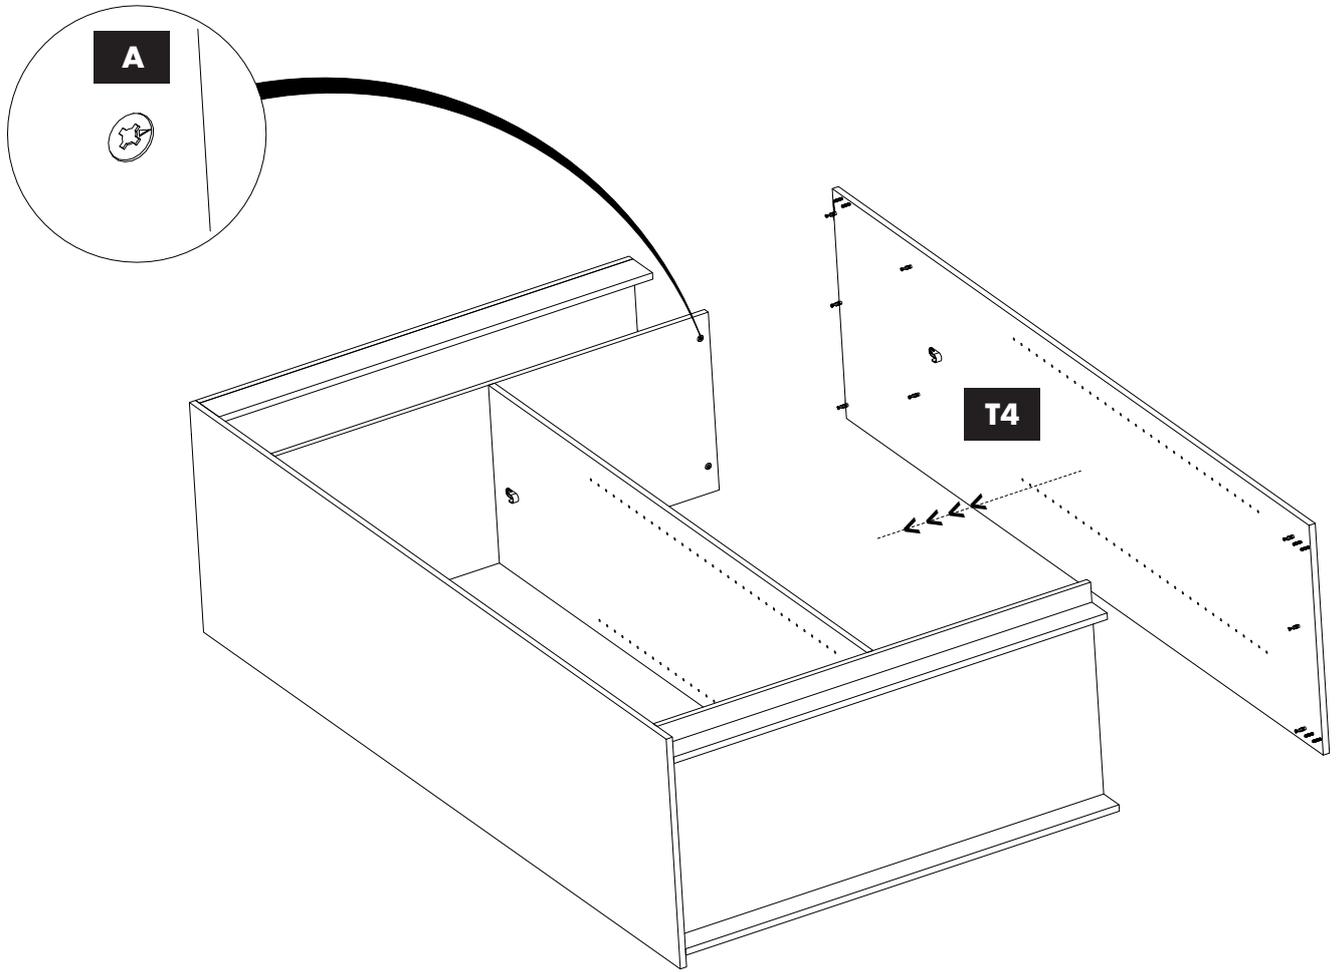


STEP 17

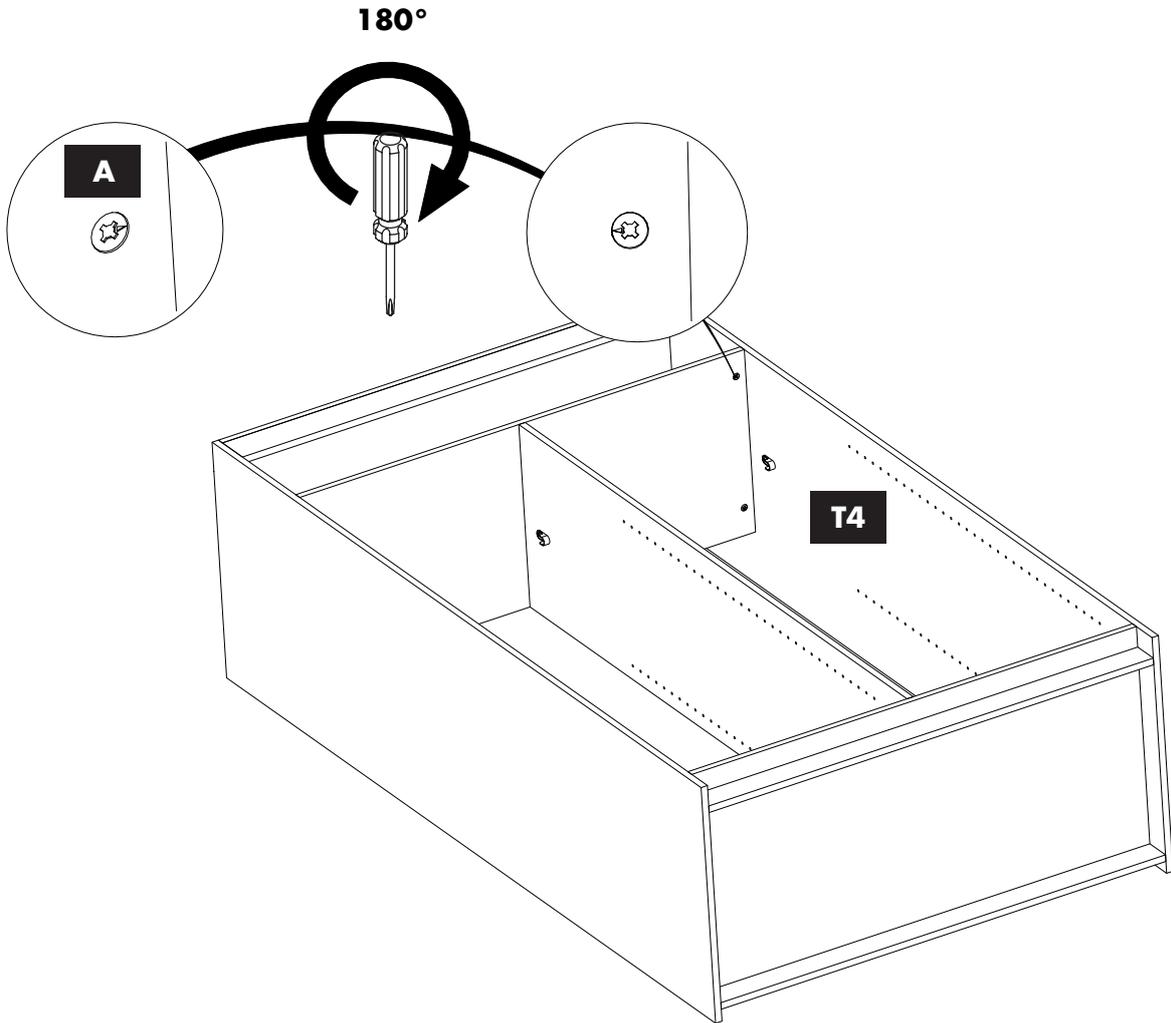


STEP 18

- I** x 4
- D** x 8

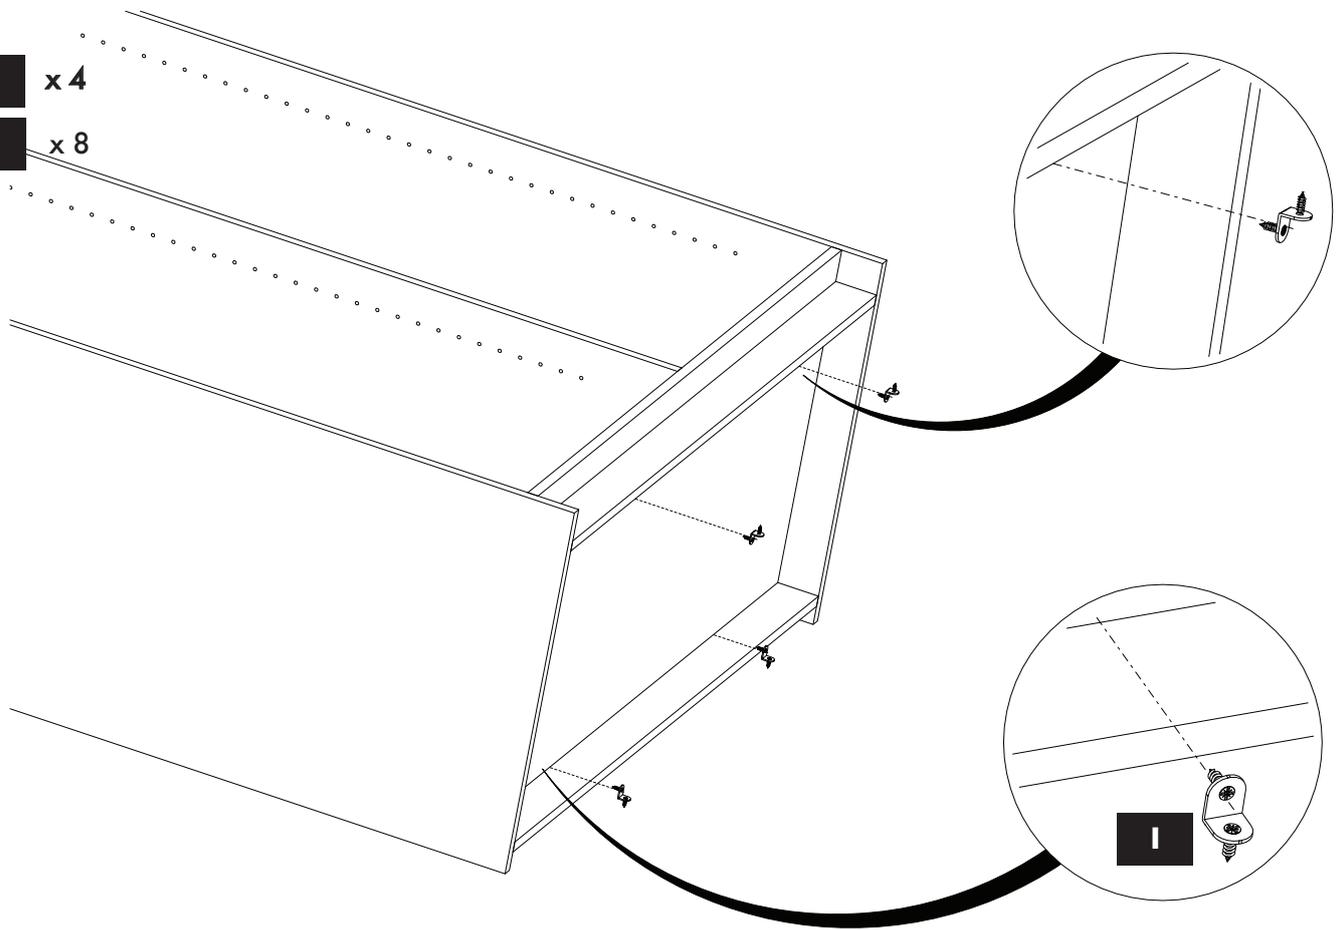


STEP 19

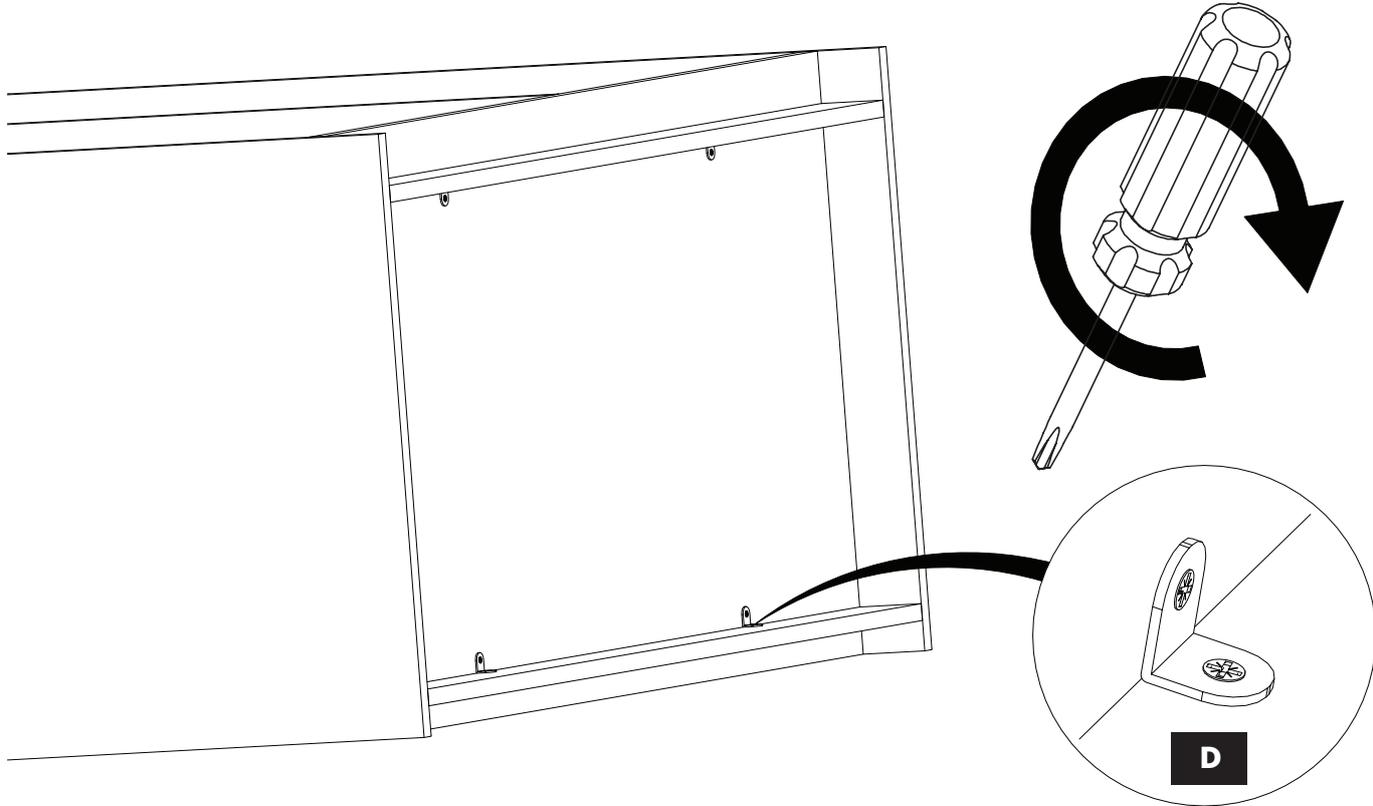

STEP 20

ASSEMBLY NOTE

Ensure the Unit is Squared before nailing Back Panel (T9) on.

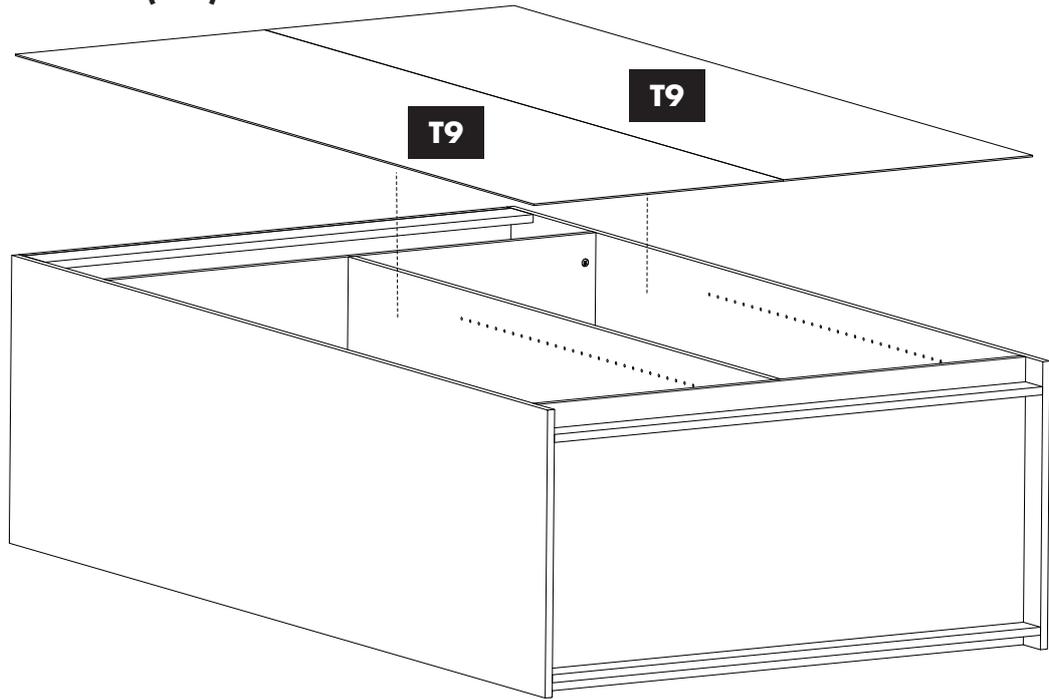


STEP 21

F x75

ASSEMBLY NOTE

Hammer nails on alternating sides of the joint between the two Back Panels (T9)




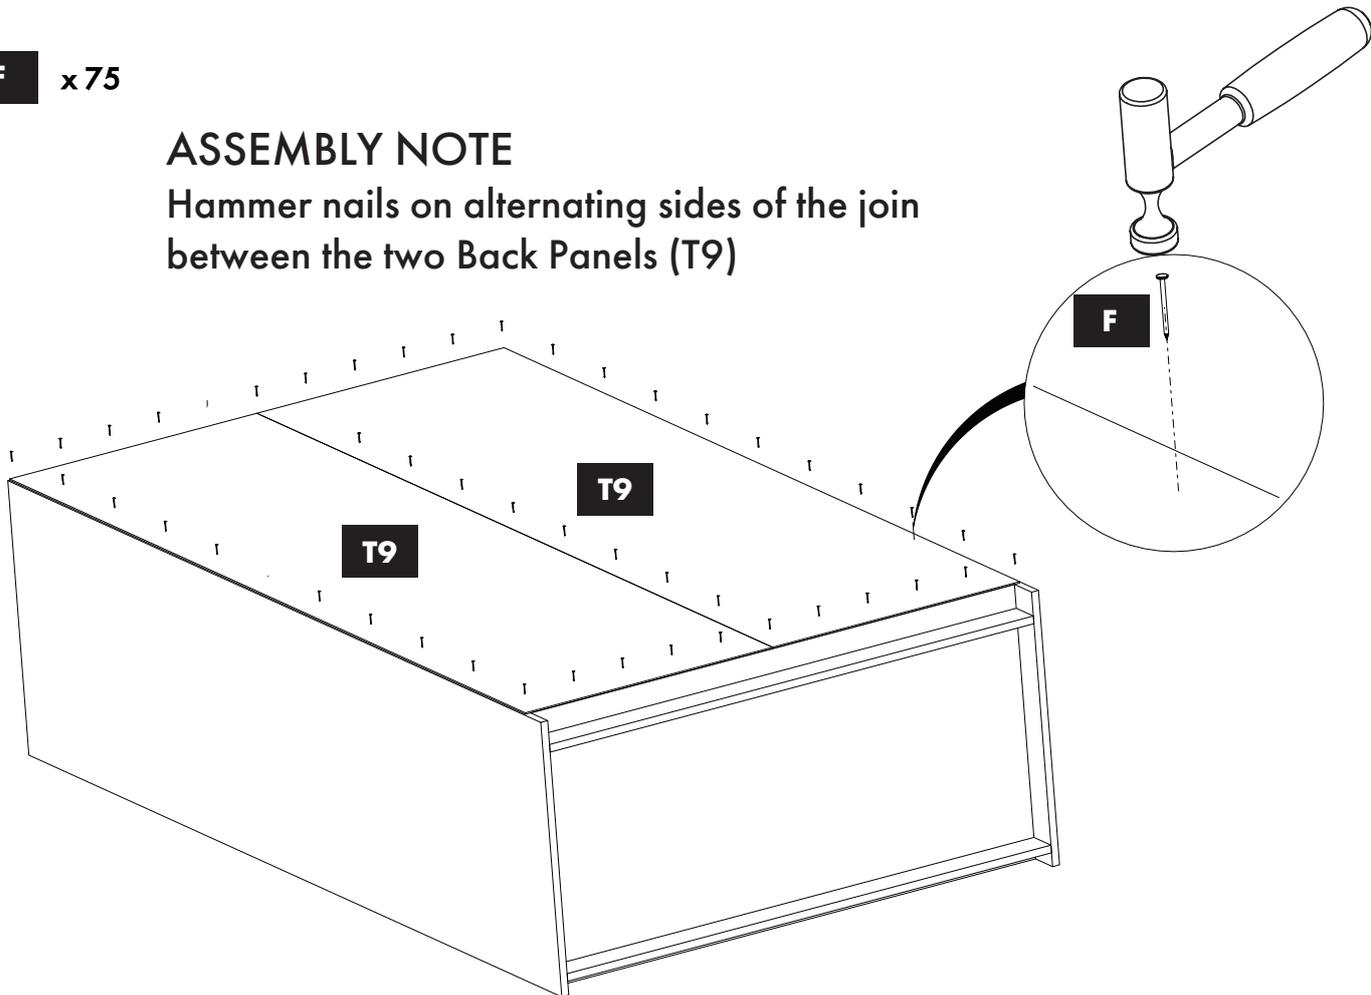


STEP 22

L x 6





M x 3

Assembly Note
Bottom Rail (O) to be installed 6mm in from front edge of Bottom Shelf (T1)

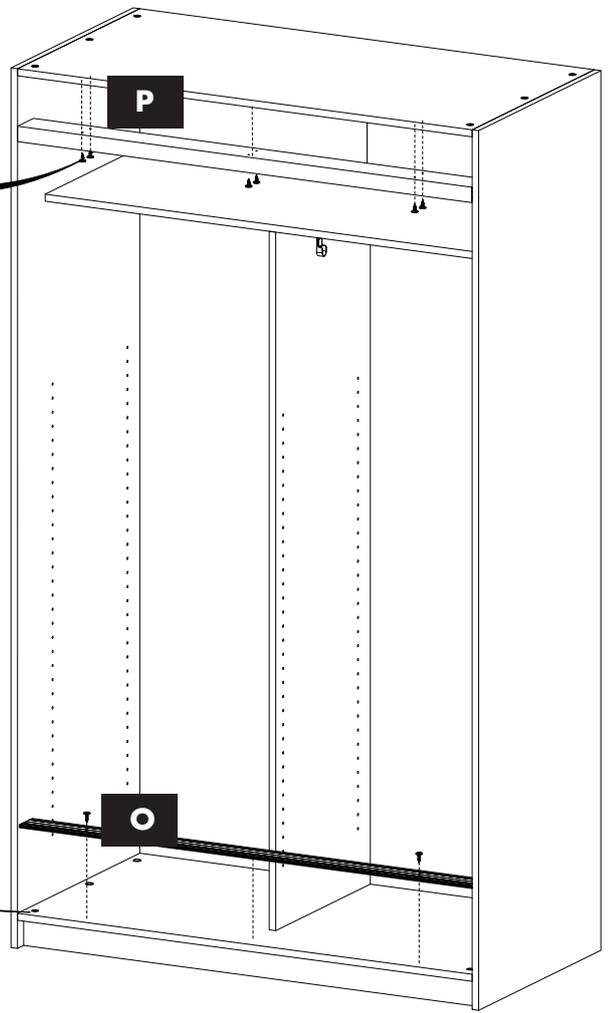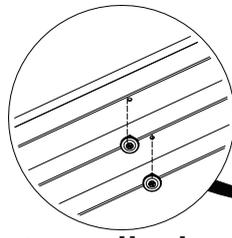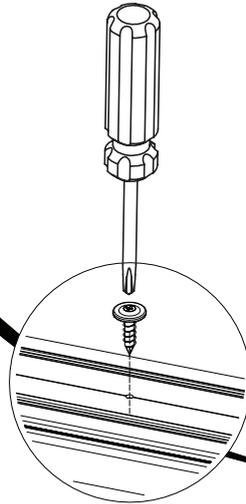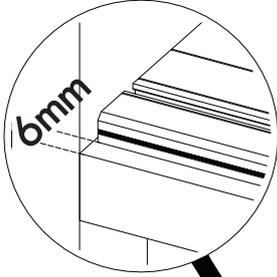


STEP 23

N x 2

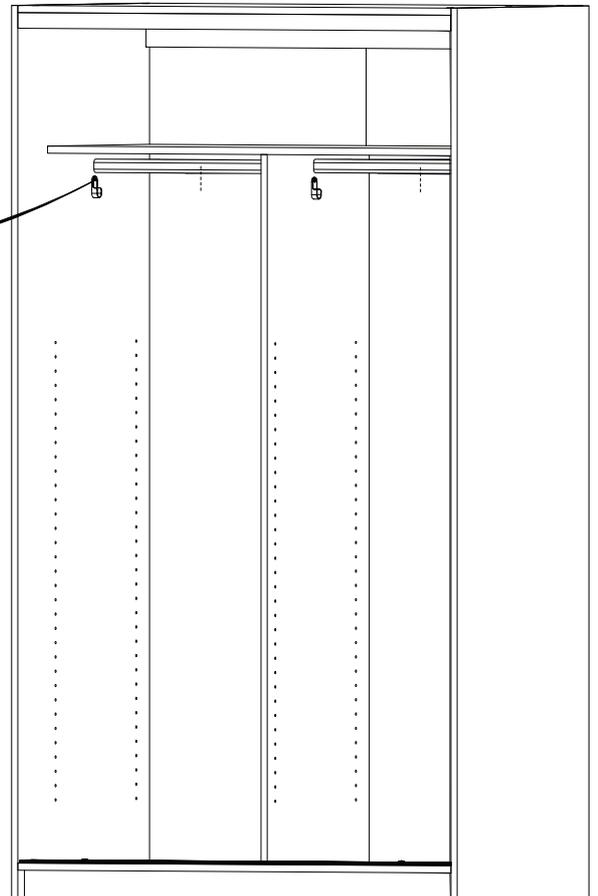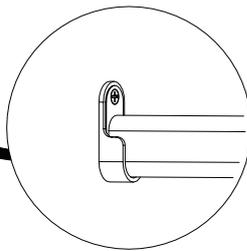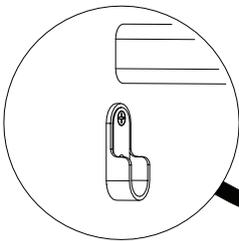


Installation of Sliding Doors

STEP 24

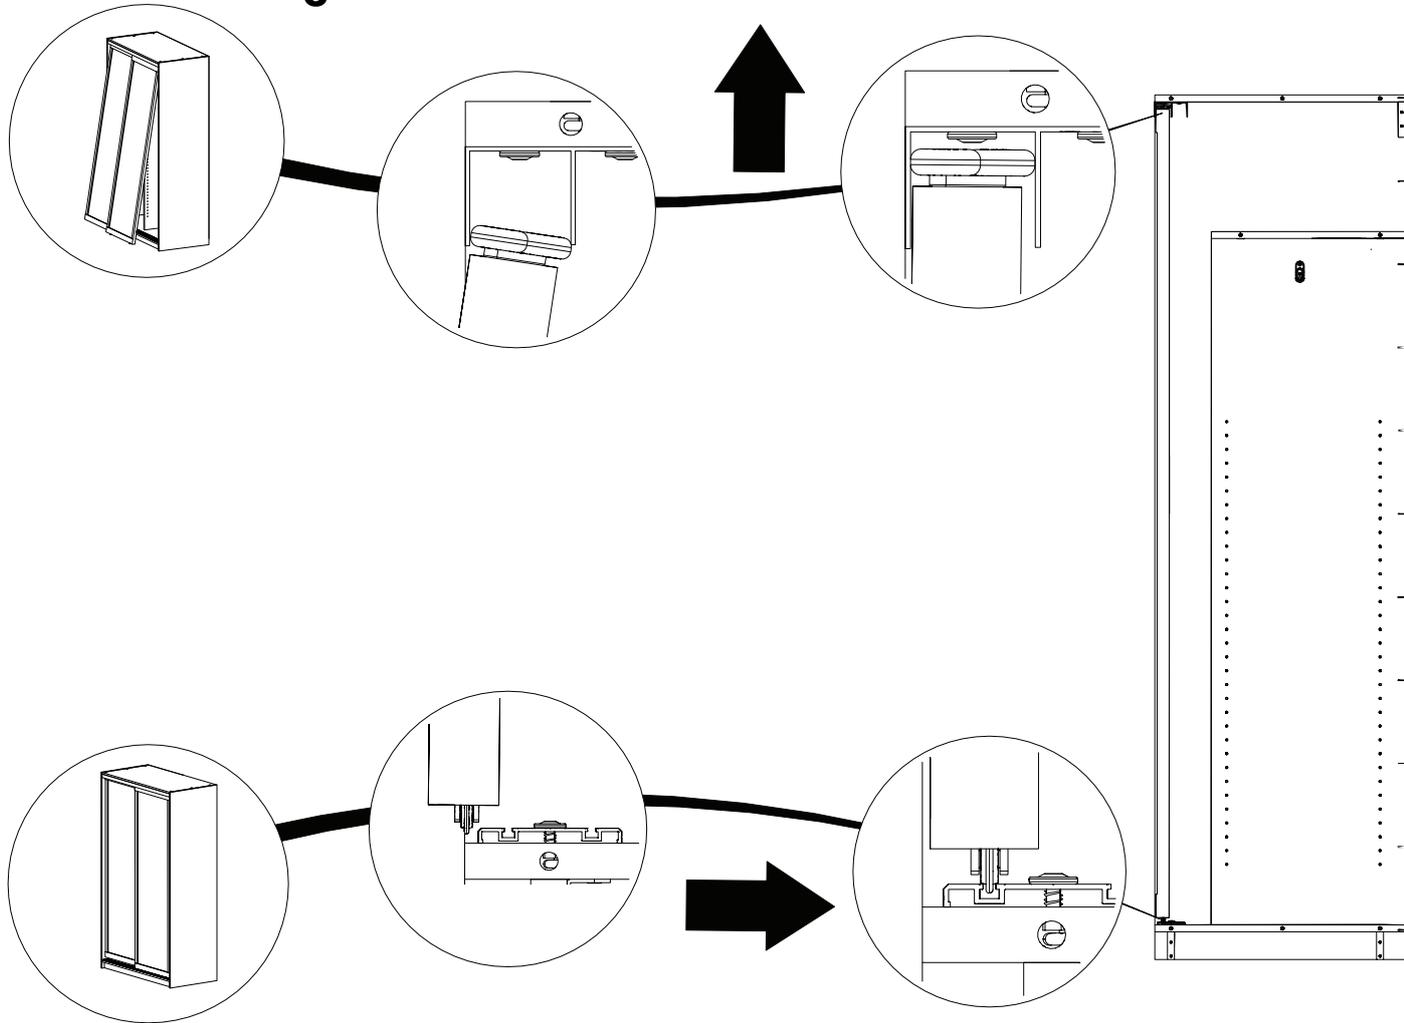

STEP 25

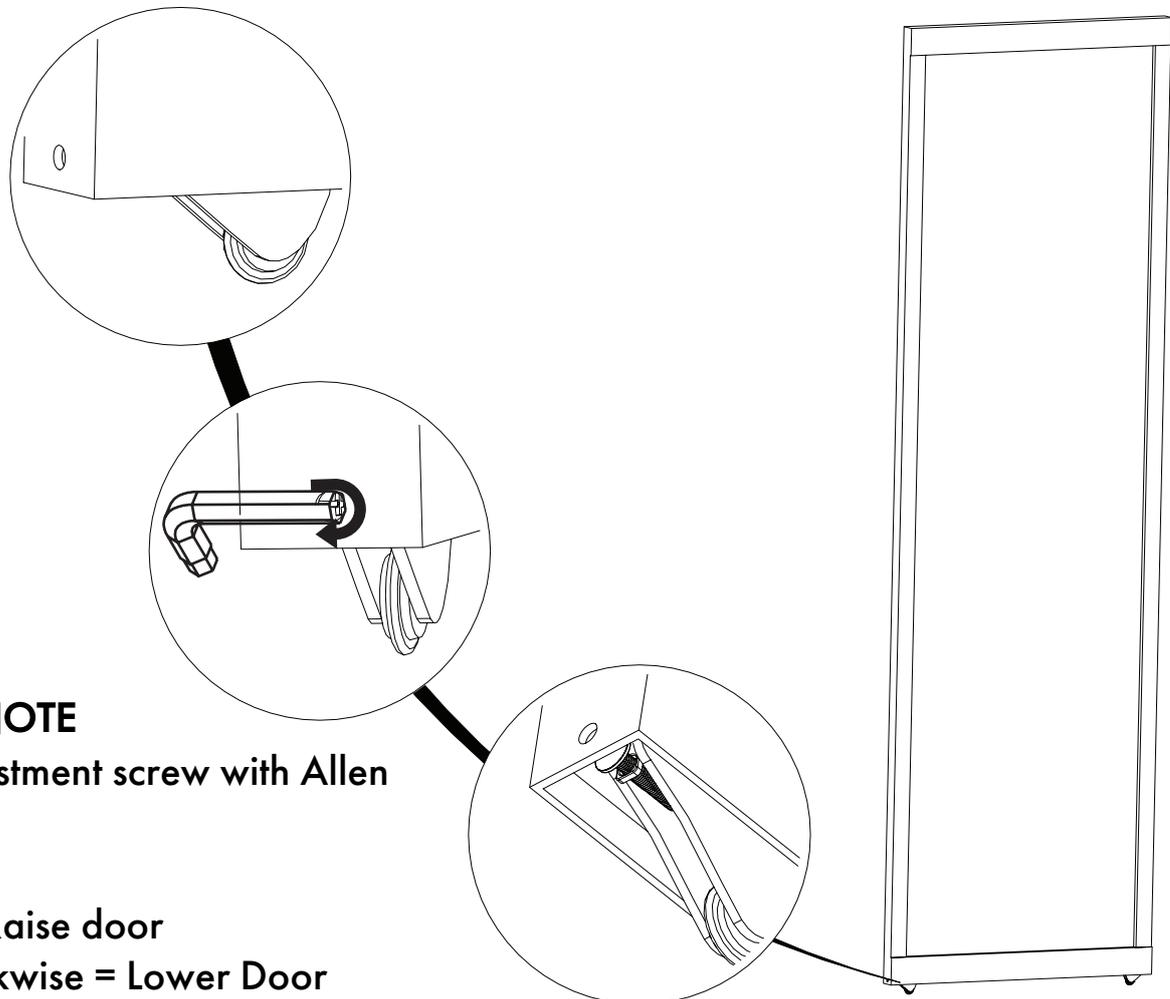

ASSEMBLY NOTE

Turn the Adjustment screw with Allen Key provided



Clockwise = Raise door

Counter Clockwise = Lower Door

Do you need Extra Shelves or Drawers?

Accessories can be purchased from Bunnings

- + Extra Shelves
- + Drawers

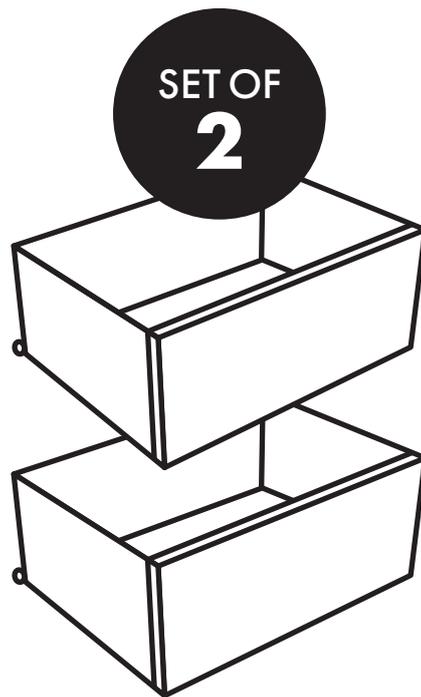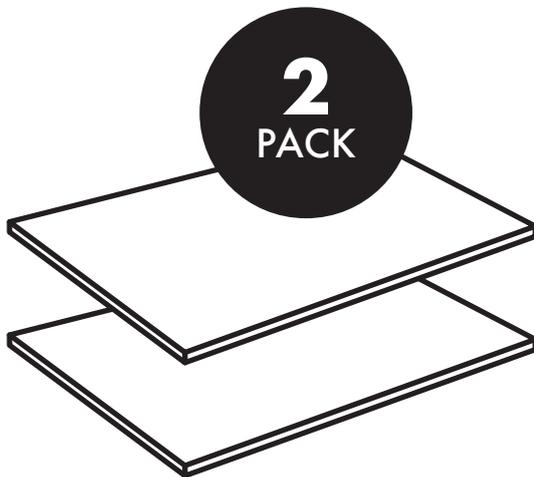

IT IS STRONGLY RECOMMENDED TO SECURE THE UNIT TO THE WALL.



Bedford[™]
FURNITURE

The Bedford Group exists to support people with disability to live the life they choose. Our mission is to provide a diverse range of opportunities, from skill-building social activities through to meaningful employment.

dovetail

ADVANCED
MANUFACTURING

BACKED BY
BEDFORD

Dovetail Advanced Manufacturing specialises in timber manufacturing and contract cutting for the construction and home furniture industry.

It provides innovative products and services that are competitively priced and of the highest quality and standard. Dovetail is a proud, long-term partner of Bunnings Warehouse.
