



Flyscreen Pet Door


INSTALLATION INSTRUCTIONS

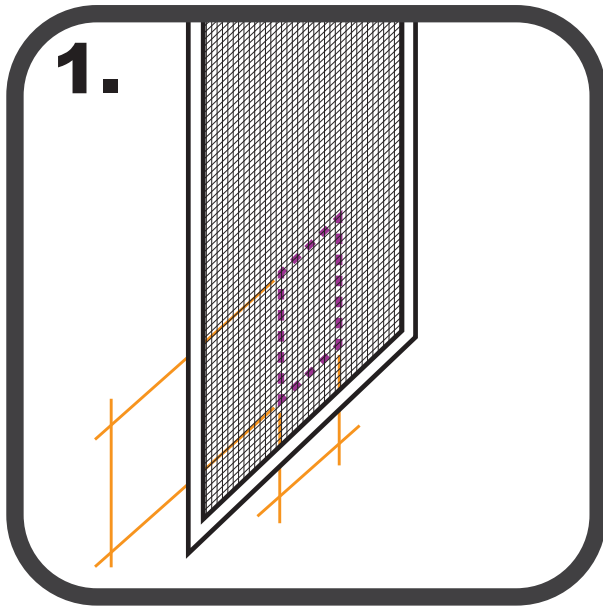


Measure and mark pet door position using masking tape or similar

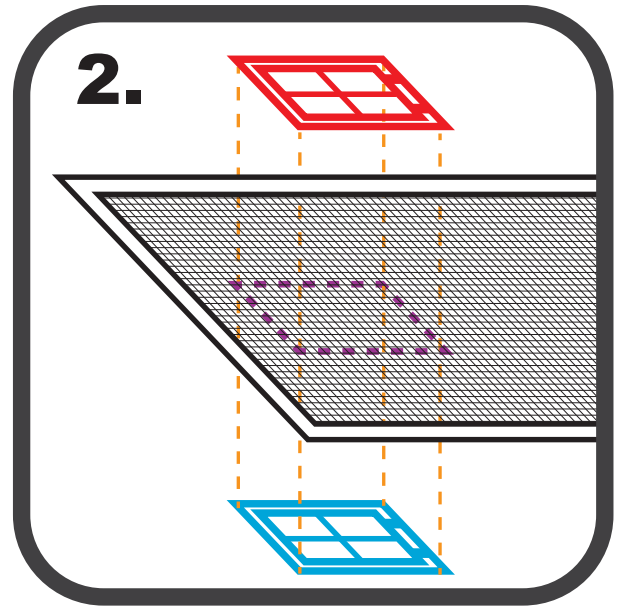

For installation ease, place door on flat surface & align pet doors sides

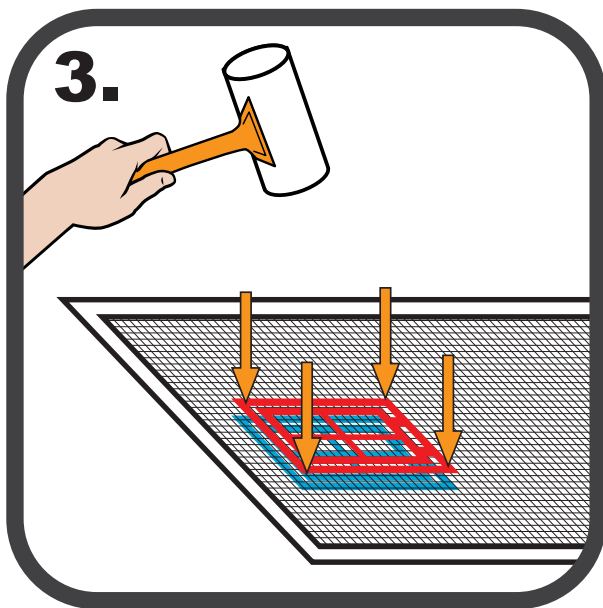

Using a rubber mallet, gently tap interlocking door sides together over flyscreen

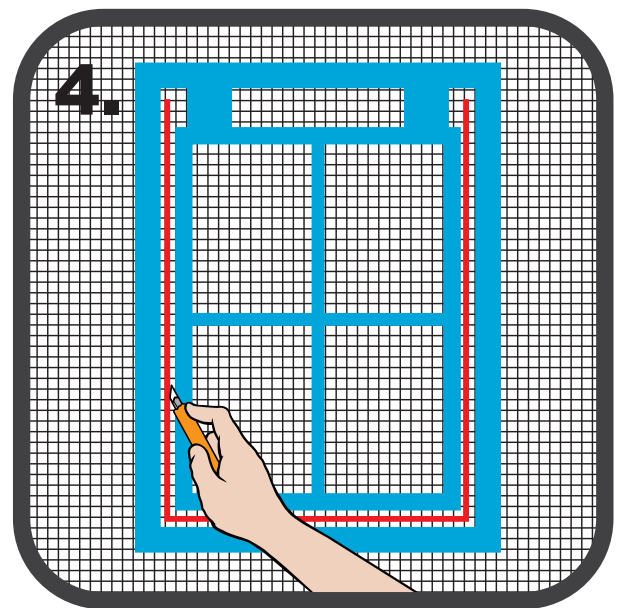

Using a sharp knife, cut along flap edge (red line) as shown above