


Mondella

INSTALLATION GUIDE INSET BATHTUB

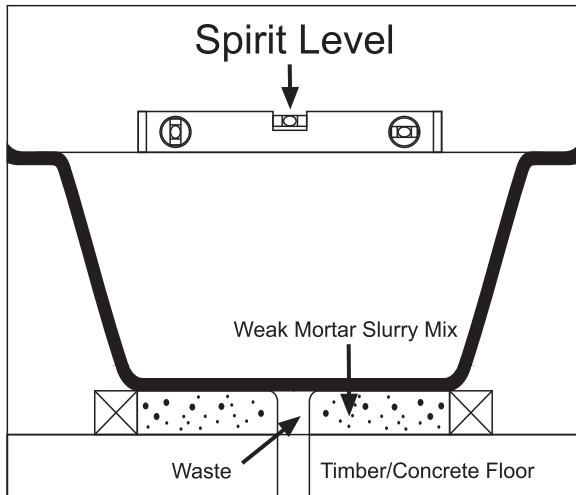

IMPORTANT

- Local or state regulations may require some work to be performed by a licensed tradesperson. Check these regulations before attempting any DIY work.
- Prior to installation, completely remove the protective film and thoroughly inspect the entire bath for damage or defects. Damage or defects found after installation are not covered by warranty.

INSTALLATION NOTES

- The bath must be level on all top edges.
- The rim and base of the bath must be fully supported.
- If timber supports are used to support the base, ensure that a generous amount of silicone is applied.

