

STEIN

GLASS SPLASHBACK

INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE COMMENCING INSTALLATION

GENERAL INFORMATION

- When you receive your splashback, please check that the type/size is correct and free of freight damage.
- Advise your supplier of Stein products of any fault within 12 hours of receiving goods.
- Any installation of incorrect or faulty product will invalidate later claims.

IMPORTANT

HEALTH & SAFETY

- In close proximity to a Splashback Installation there will be Electric Wires or Gas Pipes. Ensure you have a good understanding of their location prior to any drilling or fastenings in the wall cavity.
- Place soft covering on all hard surfaces to protect the glass from damage during storage or installation.
- Glass Splashback cannot be cut or reworked in any way as they are toughened glass.
- Wear protective gloves and eye protection.

OPEN-FLAME GAS COOK TOP

A Gas Burner closer than 200mm to a wall requires a specific wallboard behind the Glass Splashback to minimise heat transfer. A non-combustible backer board is specified as below.

- 9mm Villaboard installed direct to the framing.
- 6mm Villaboard as an overlay to already installed Gib Board.

WARRANTY

This covers any product defects for 5 years but glass breakage on site is not included.

TOOLS & MATERIALS REQUIRED (AVAILABLE FROM YOUR LOCAL RETAILER)

- Selleys Liquid Nails: **Mirror-Metal-Glass** (required) Not to be confused with regular Selleys Liquid Nails
- Cleaning materials
- Soft pencil
- Spirit level
- Masking Tape

RECOMMEND ADHESIVE (sold separately) Selleys Liquid Nail: **Mirror - Metal – Glass**
(Clear heat resistance neutral cure Silicone)

PREPARATION

- Ensure the wall frame is straight with no movement and install wallboard type as outlined above (refer "OPEN-FLAME GAS COOK TOP" for required backer board).
- It is recommended to prime or undercoat wallboard, concrete or brick surfaces. Ensure you give time for paint to be fully cured. This protects the backing of the splash back and provides the best adhesion for the glue.

GLASS SPLASHBACK INSTALLATION

Step 1: Position the Splashback in place to check alignment and mark the boundary points with a soft pencil or masking tape.

Step 2: Place 2mm soft plastic packers under the Splashback when placed on a hard surface. These packers can be removed after adhesive is cured. Refer Diagram A.

Step 3: Apply Mirror-Metal-Glass adhesive with 5mm diameter even vertical strips 80mm apart taking care to keep away from the outside edges.(40 mm to 50mm) Refer Diagram B.

Step 4: Align the splashback to the marks and onto the packers at the bottom. Press firmly to the wall starting from the bottom up. Set up support for the Spashback for 48hours to ensure the glue has built sufficient hold. Refer Diagram C

Step 5: Seal the outside edges of the glass 3 days after installation has passed. Take care to mask off and clean up excess without damaging surrounding wall finishes.

Note: *The Mirror-Glass-Metal adhesive can also be used to seal outside edges.*

DIAGRAM A



DIAGRAM B


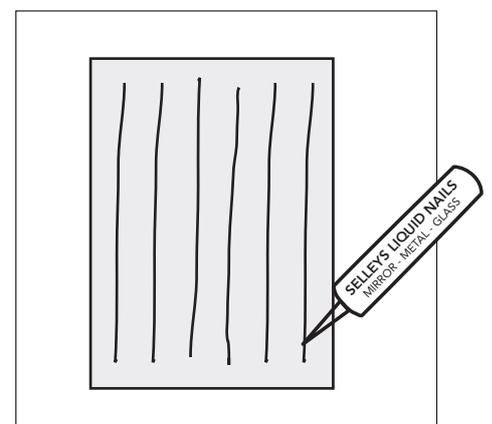


DIAGRAM C

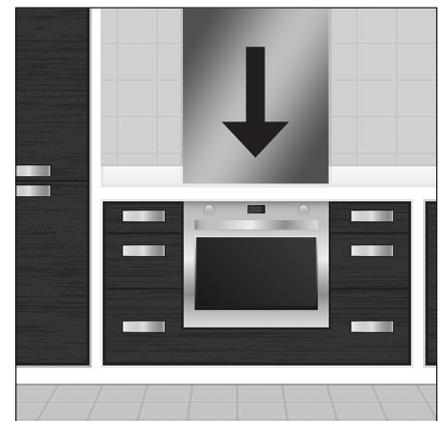

NOTE: The splashback will require temporary support both underneath and from falling outwards until the adhesive has cured.

STEIN

54 Unutoto Place, Tauriko, Tauranga, 3171
Freephone 0800 002 299 | Phone +64 7 928 9990
stein.nz