


Flap

Back

Front

OUR STOCK RANGE

Number of Treads	Height from Ground to Deck
1	320
2	480
3	640
4	800
5	960
6	1120
7	1280
8	1440
9	1600
10	1760
11	1920
12	2080
13	2240
14	2400
15	2560
16	2720
17	2880

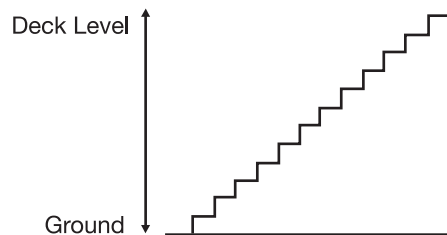

DISTRIBUTOR,



Outdoor Stair Kits Made in Australia

PHONE 0407 041 410

ENQUIRIES sales@oskaustralia.com.au

ASSEMBLY

STEP 1. Lay one stringer flat on an even surface.

STEP 2. Insert each tread into the routed groove, ensuring the reeded grip is at the front of the step.

STEP 3. Place the other stringer on top of the treads and slide into place. (Note) ensure treads are fully positioned into the groove).

STEP 4. Screw one of the stringers to the treads with the screws provided. Then screw the other stringer to the treads on the other side.

DETAILED INSTRUCTIONS INSIDE STRINGER KIT



Outdoor Stair Kits
Keeping Australians employed
Now and in the Future



Meets Rainforest Alliance requirements for Verified Legal Compliance

VERIFICATION REGISTRATION CODE : RA-VLC-006775

www.oskaustralia.com.au
Distributed by OSK Australia

OSK Australia

Outdoor Stair Kits Made in Australia

STAIR KITS



THE BUILDERS CHOICE
In Prefabricated External Stairs



EASY TO ASSEMBLE

Quality pre-assembled DIY external stairs are 900mm wide with a rise of 160mm between each step.

All Stair Kits are supplied with routed and pre-drilled stringers, screws and treads packaged for ease of storage, handling and quick assembly.

All you require is a power drill and you are done.

OSK-STAIRS manufacture DIY Timber Stair Kits that complies with the Building Code of Australia as well as the Australian Standard AS 1657.

SPECIAL ORDERS

At OSK Australia, we can manufacture customised stair kits to suit any requirements.

We can custom make stair kits in various rises and species of timber. To order a custom made stair kit simply contact us with your requirements.

All we need is your total rise height from ground level to deck level, the required width of your staircase, and what timber you would like.

AVAILABLE IN:

- Treated Pine
- Merbau
- Jarrah
- Spotted Gum
- Blackbutt



OSK-STAIRS are easy to assemble and ready to install....however taking care of your Stairs is important to you and important to us!

Your **OSK-STAIRS** stairs are made from timber, being a natural product it has a tendency to discolour from weathering.

Before you open up your new **OSK-STAIRS** stairs – please store them in a suitable place away from the natural elements so that you will not be disappointed with the product!

It is our recommendation as soon as you install your stairs (or have your **OSK-STAIRS** installed) that you apply a suitable timber oil or paint to protect your OSK-Stairs.

There is no doubt **OSK-STAIRS** stairs are easy to install and put together yourself; however it is our advice that you seek professional assistance from a qualified person to ensure that you are conforming to all Australian Building Codes!

Our stairs are not a self supporting product and need to be attached suitably and securely to a building or structure before use.