

PAN FLOOR FIXING GUIDE


| 1 | 2 X FLOOR BRACKET |
|---|---------------------------|
| 2 | 2 X FLOOR PLUGS S10 X 50 |
| 3 | 2 X HEX HEAD SCREW 6 X 60 |
| 4 | 2 X WASHERS |
| 5 | 2 X SS SCREWS 5 X 60 |
| 6 | 2 X NYLON BUSHES |
| 7 | 2 X CAPS |

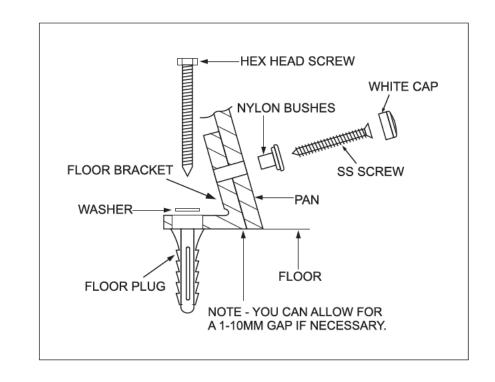

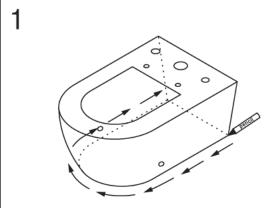


PLACE THE PAN INTO ITS DESIRED INSTALLATION POSITION. TRACE AROUND THE OUTSIDE OF YOUR PAN USING A PENCIL.

2

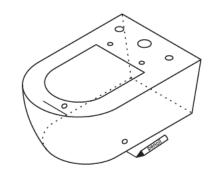

MARK OUT WHERE THE 2 HOLES ARE LOCATED ON YOUR PAN.

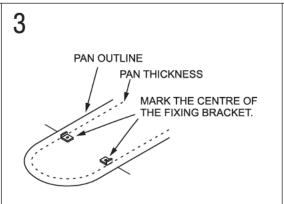

REMOVE THE PAN & MEASURE THE DESIRED SCREW FIXING POINTS. REMEMBER TO ALLOW FOR THE PAN THICKNESS. A 1-10MM GAP BETWEEN THE PAN & FIXING BRACKET IS ACCEPTABLE.



DRILL HOLES USING AN APPROPRIATE DRILL BIT. APPLY WET AREAS SILICONE INTO THE HOLES & TO THE BASE OF THE FLOOR BRACKET TO HELP KEEP THE FLOOR WATERPROOF. INSTALL THE FLOOR BRACKETS INTO POSITION. DON'T INSTALL SS SCREWS AT THIS POINT.