



## OPERATING INSTRUCTIONS:

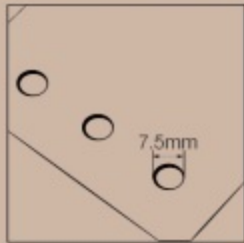

Create an approx 7.5mm hole in the material at the desired position.

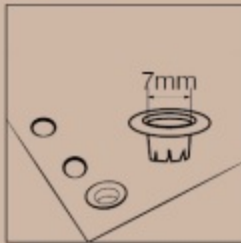

Place a single eyelet into the hole and ensure the flat side is attached to the outer surface of the material.



Align the concave jaw of the plier to the flat exterior side of the eyelet. Align the inner tube to the pointed plier jaw.



Squeeze the pliers to firmly attach the eyelet to the material.