

ESTILO®

VANITY WITH SEMI RECESSED BASIN

Installation Guide


Note - Please thoroughly inspect the vanity unit prior to installation.

- Product may vary to illustrations.


- Please refer to the warranty card for any claims or exclusions to the warranty.

1. Measure the locations that your plumbing will need to be transferred into the vanity unit.
2. Using a hole saw drill holes to suit the size of the plumbing in the marked out locations.
3. Place the vanity into desired location.
4. Install the ceramic basin onto the cabinet.

Wet area silicone is recommended to support and seal the basin to the cabinet.

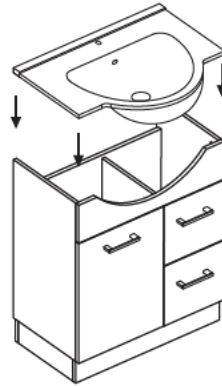

5. Install a waste (not included) into the basin. Wet area silicone is recommended to seal the top and bottom of the waste to the basin.

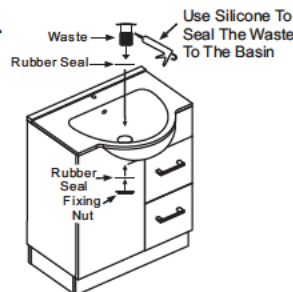

6. Connect all the plumbing (all plumbing must be installed by a licensed plumber).

7. Check for leaks.

8. It is recommended that silicone can be used to connect the vanity unit to the wall.

Use Silicone To Connect
The Vanity To The Wall



Care Instructions

- Wipe down the vanity using warm soapy water on a damp cloth. Do not use any abrasive cleaners, chemicals, disinfectants, acetone, alcohol or cleaners which can damage the vanity unit.
- When cleaning the cabinet make sure all moisture from the damp cloth has been removed with a dry cloth.
- The cabinet is water resistant not waterproof so make sure that the bathroom is well ventilated to prevent moisture build up. Do not allow water to stand for a long time, ensure that water is removed as soon as possible to prevent swelling.
- Be mindful of sharp objects that may scratch or damage the surface. Do not tap objects such as shaving razors or toothbrushes etc., against the surface.