Spigot Installation

Frameless Glass Pool and Balustrade Systems



Pack Contents:

Spigots

Included with every Spigot:

- 4 x Panel Height Packers
- 2 x Post and Panel Packers
- 1 x Tapered Packer
- 2 x Grub Screw (pre-installed)
- 1 x Domical Cover
- 1 x Stainless Steel Friction Plate (Matt Black Spigots also include Grub Screw Plugs)

Required:


String, Allen key, gloves, and a friend.

Steps:

- **1.** Mark the line of your fence using a string line.
- 2. Measure and mark the placement of your Spigots
- **3.** Use Post Packers to level and align Spigots, then fix in place using appropriate fixings through corners of base plate and fit Domical Covers if required.
- **4.** Loosen the 2 grub screws inside of Spigots, then using a 2 person lift, insert the glass panels into the Spigot, ensuring the Friction Plate and Packers are in the correct position. Check the glass spacing between panel is correct then tighten the grub screws with an Allen key.
- **5.** Check the glass is level and plumb. If required, an assortment of packers and spacers are provided to level the glass panels, simply loosen the grub screws to make any adjustments then retighten.
- **6.** (Balustrade System only) To fit Friction Fit Handrail, follow handrail instructions on our website **protectoral.com**.


Pool Fencing System

FOR SPACING AND FIXING DETAILS, REFER TO PRODUCT TECHNICAL STATEMENT POOL FENCING - PTS100101 (www.protectoral.com/support/guides-downloads/)

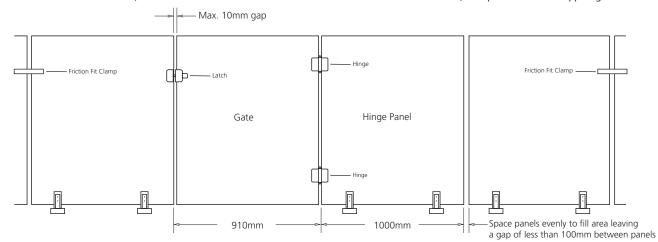

Balustrade System

FOR SPACING AND FIXING DETAILS, REFER TO PRODUCT TECHNICAL STATEMENT BALUSTRADE - PTS100110 (www.protectoral.com/support/guides-downloads/)

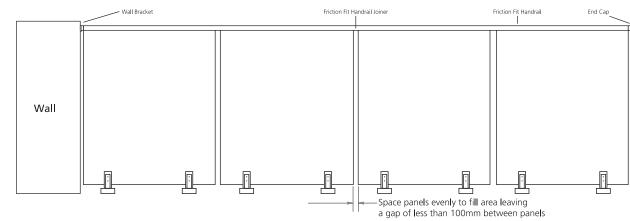



Before commencing works with this product, consult with your local building authority to determine product suitability. These Instructions are intended as a generalised guide only.

It is your responsibility to check with your local authorities on all relevant laws and regulations relevant to use of this product. For more information visit **protectoral.com**

