


3 DRAWER FILING CABINET ASSEMBLY GUIDE

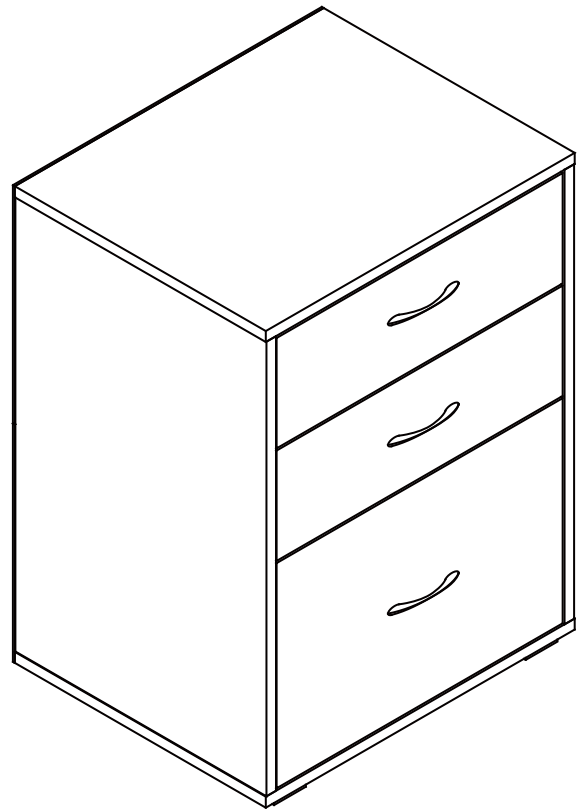

IMPORTANT




















Before commencing assembly:

- Read all instructions COMPLETELY.
- Hardware kit contains small parts; keep out of reach of children.
- Ensure all listed parts are present.
- Required tools to assemble:



Phillips head screw driver, Drill

- Required assembly work surface should be solid, level, clean and flat.
- Ensure all edged surfaces are facing to the front of the unit.


Hardware List

A  8 pcs	B  17 pcs	C  16 pcs	D  16 pcs	E  30 pcs
F  3 pcs	G  22 pcs	H  4 pcs	I  2 pcs	J  14 pcs
K  1 pc	L  1 pc	M  2 pcs	N  1 pc	O  Drill Bit 1 pc
CL  3 pcs	CR  3 pcs	DL  3 pcs	DR  3 pcs	


Panel Layout

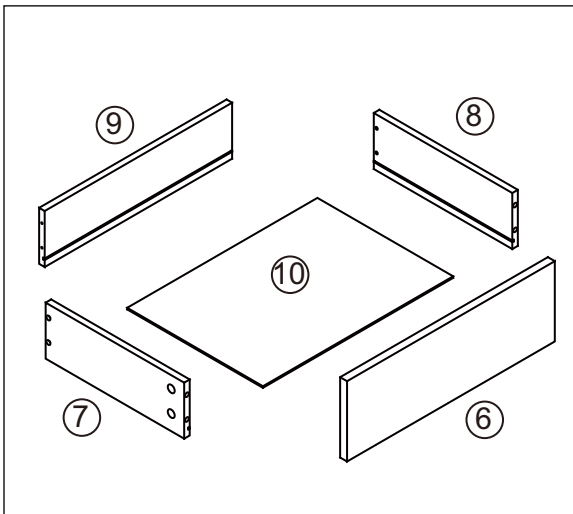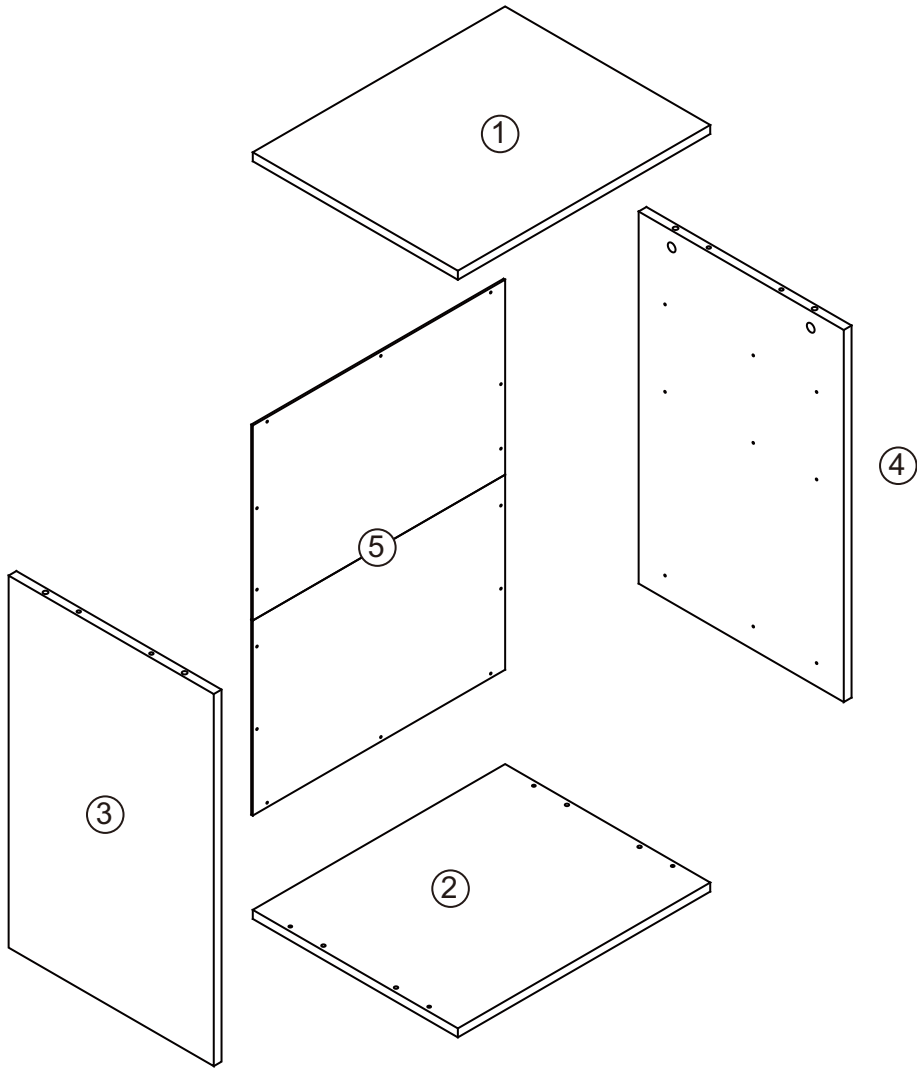


x2

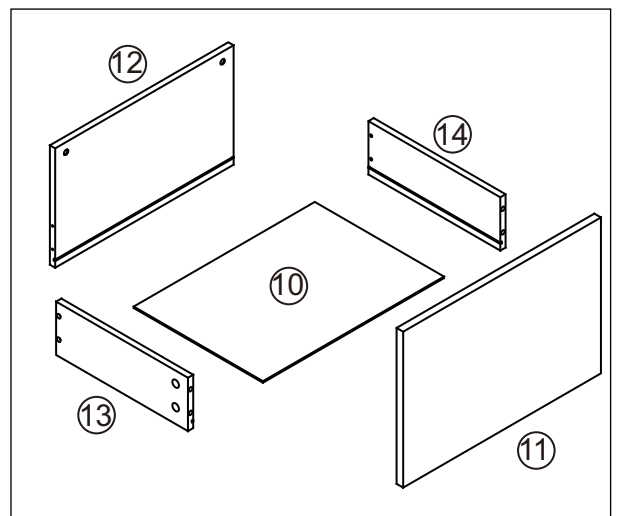


Step 1

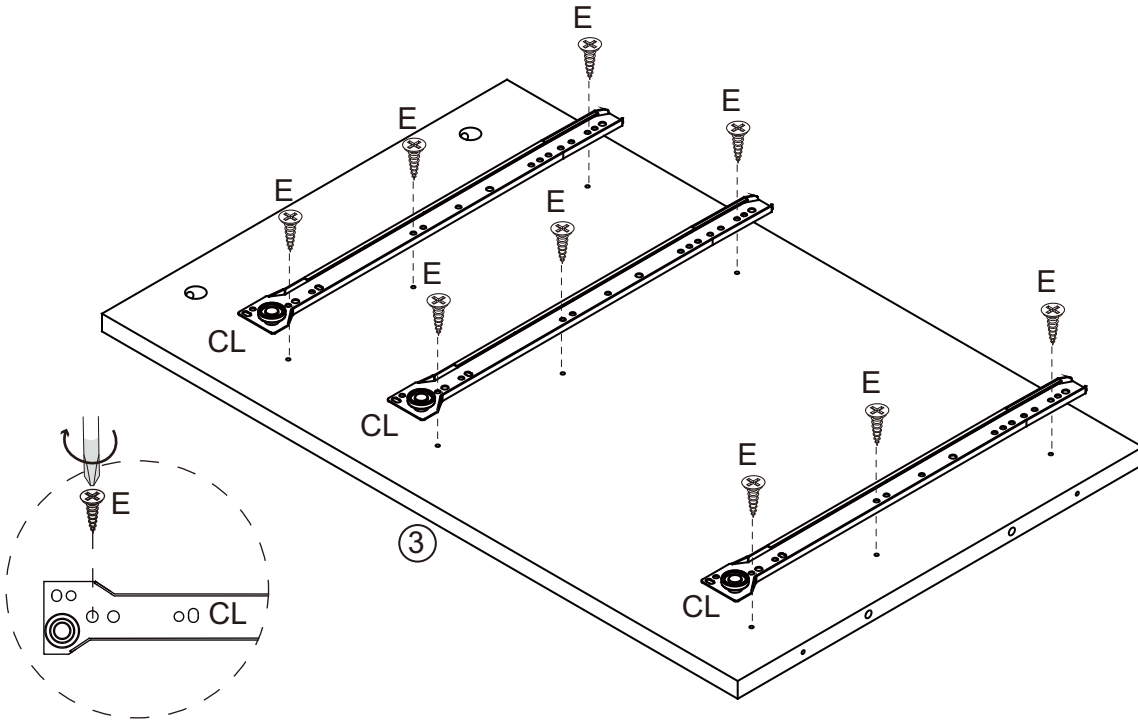


Step 2

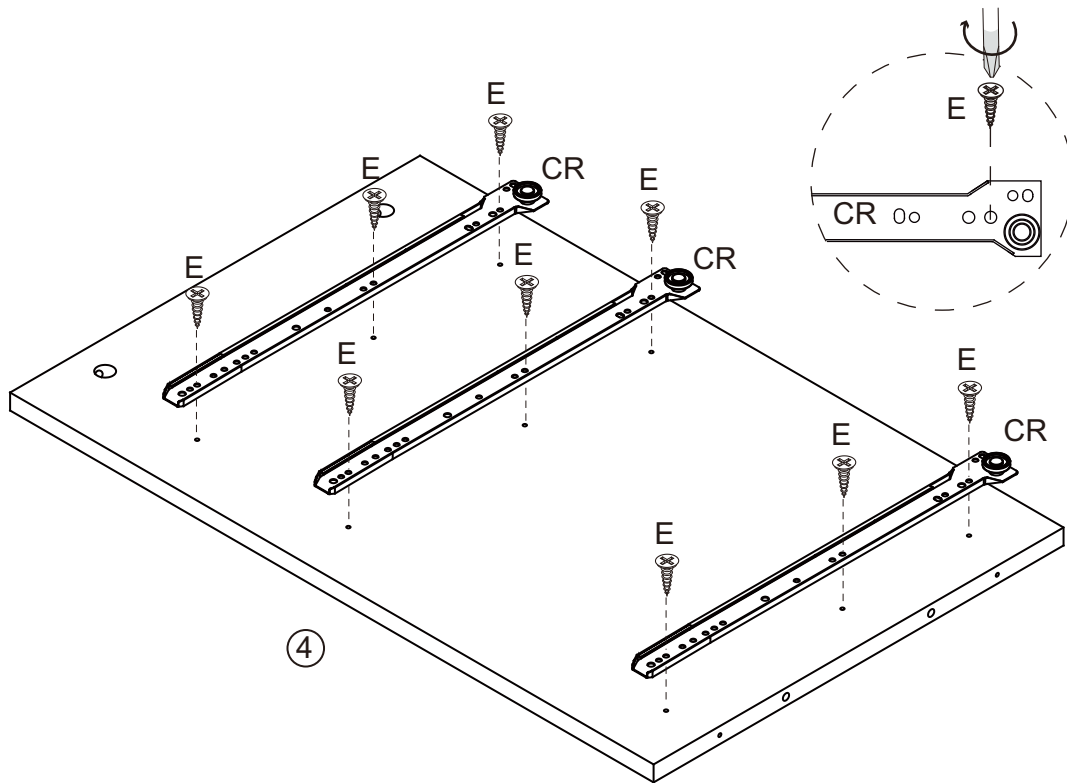


Step 3

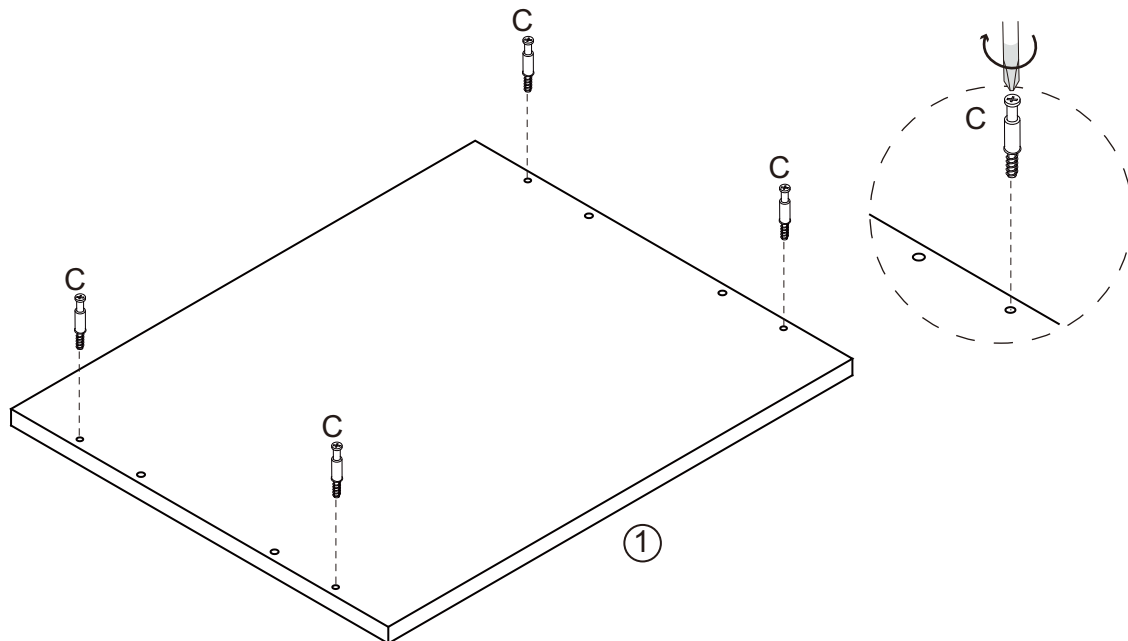


Step 4

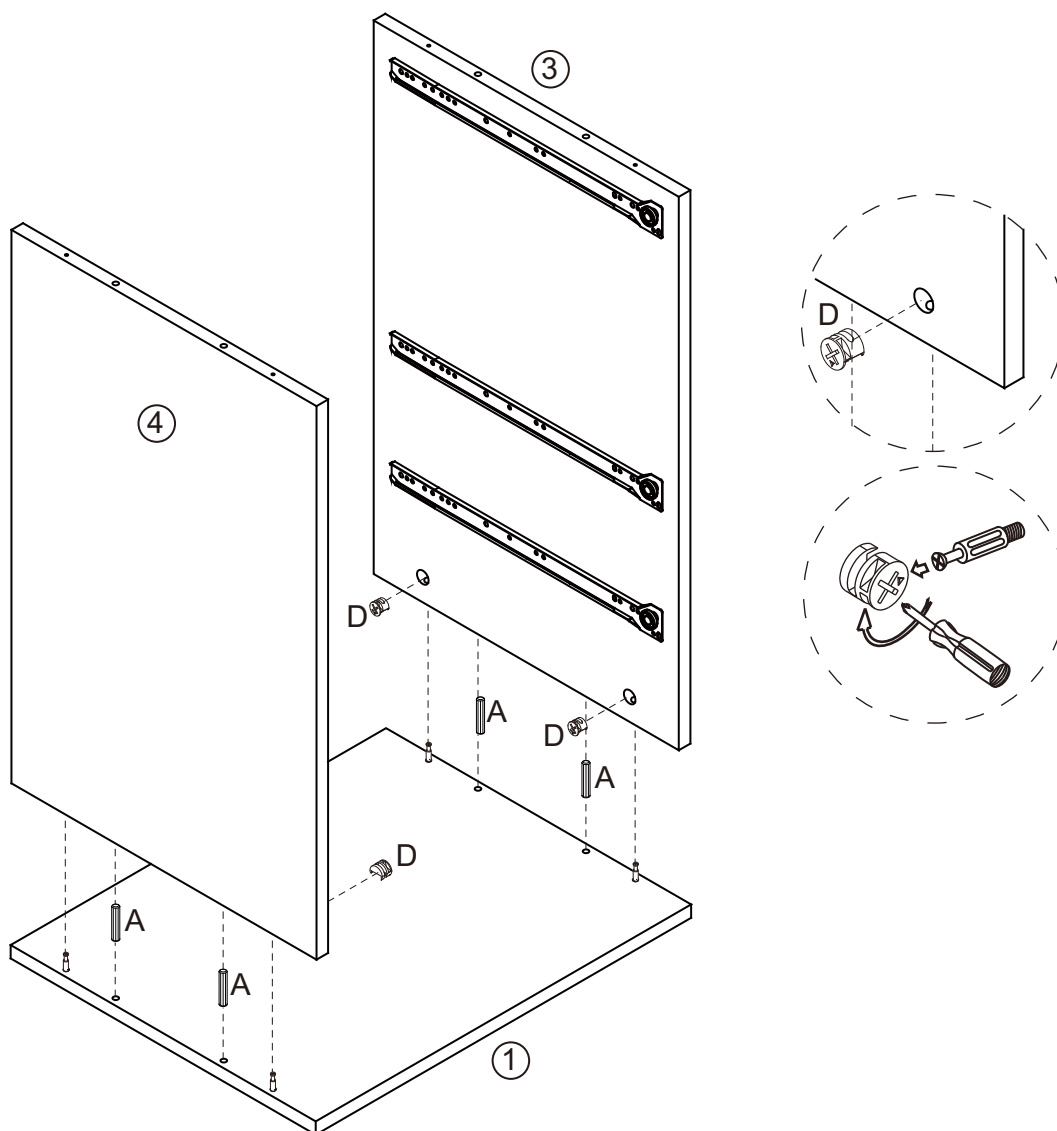


Step 5

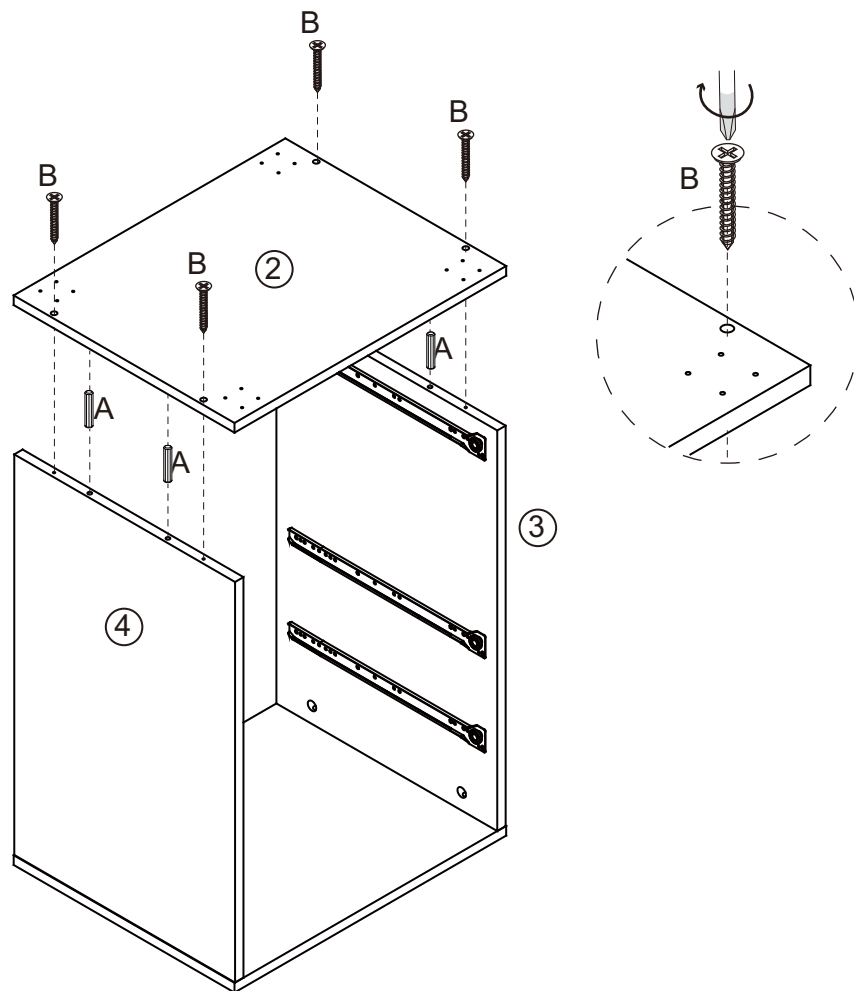

Step 6

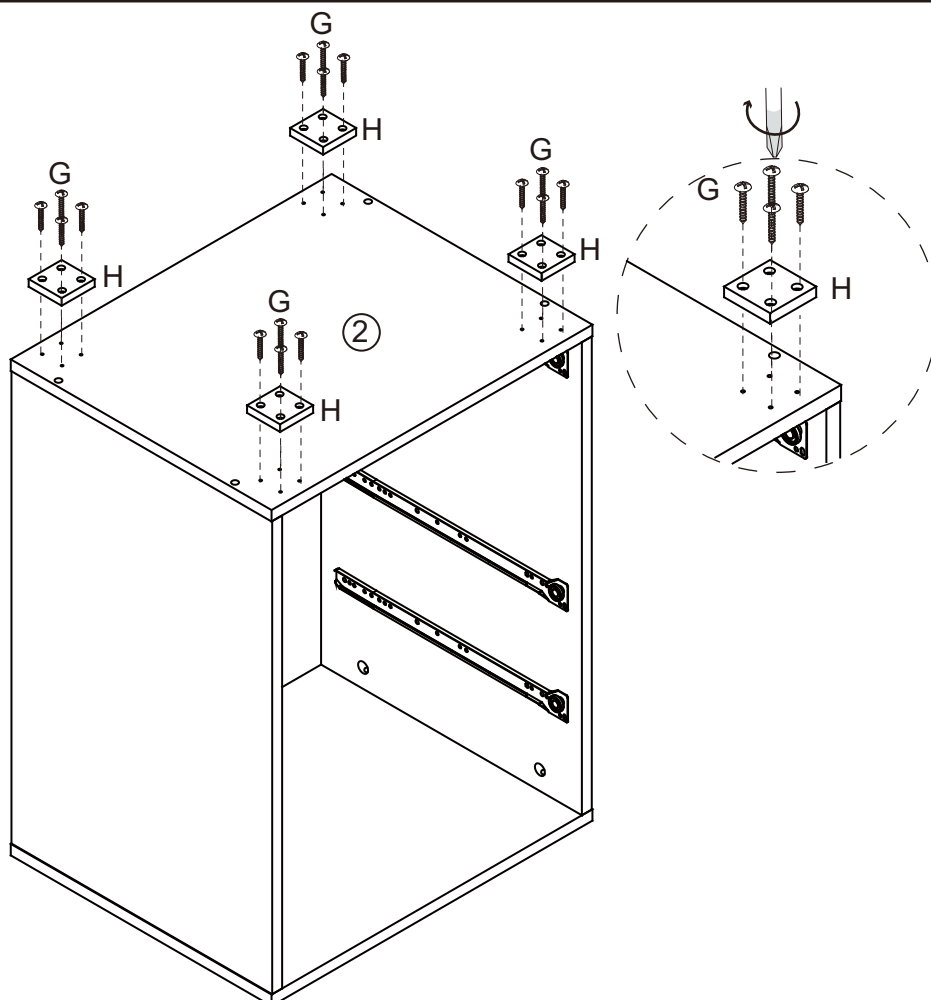


Step 7

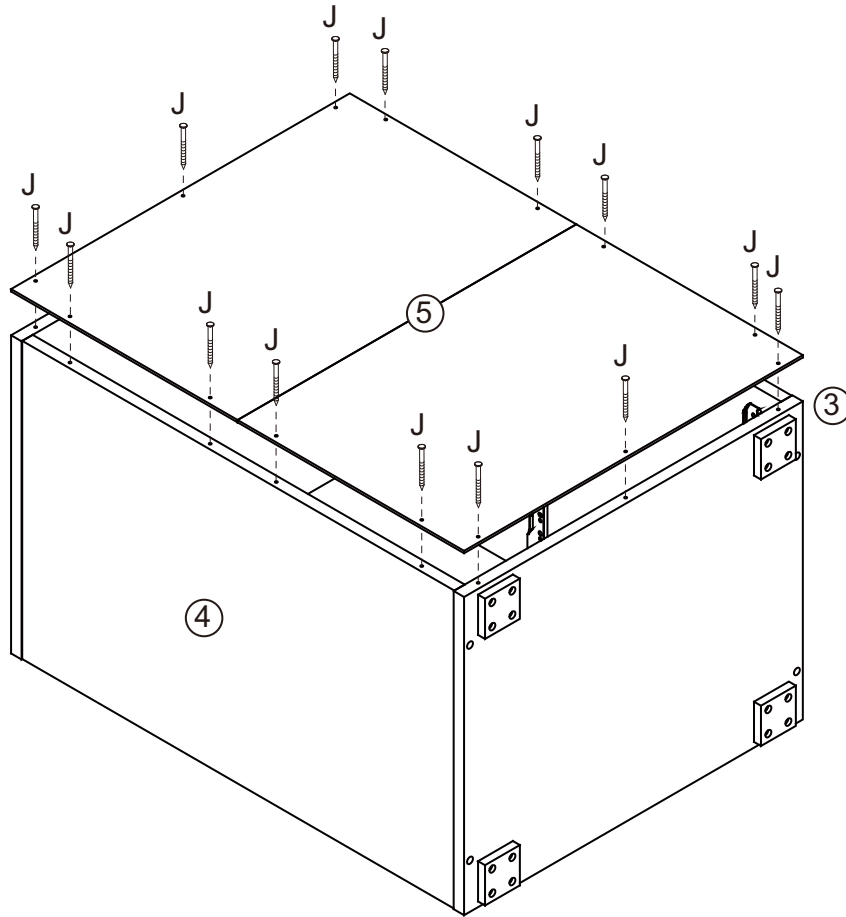

Step 8


All drawers have been pre-drilled to suit multiple handle hole spacings. If using the standard handle supplied, use the holes at 96mm hole centres marked (A) and complete the drilling process using the drill bit supplied.

Other holes have been pre-drilled to suit:
(B) centre knob
(C) 128mm handles
(D) 192mm handles

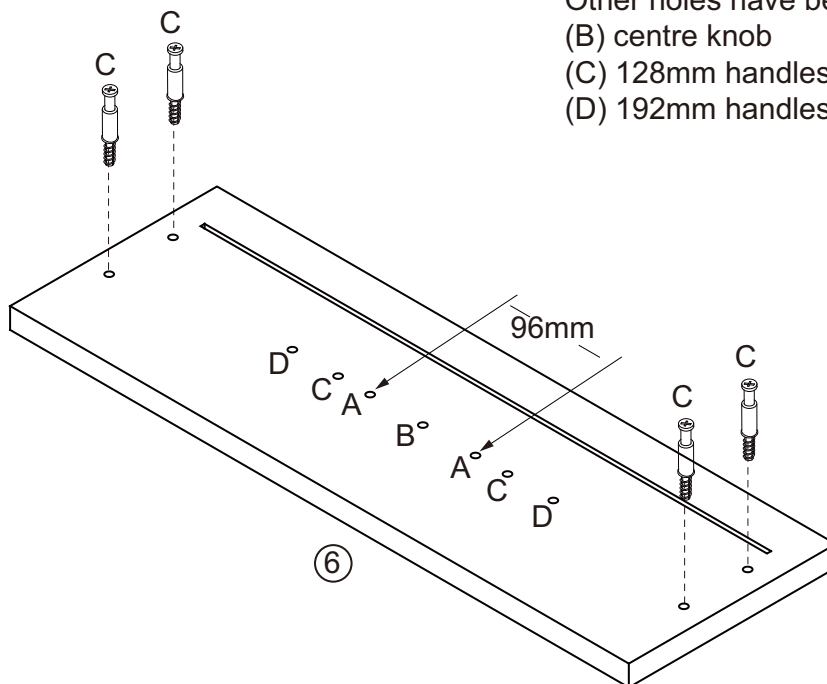


Drawer x2

Step 9

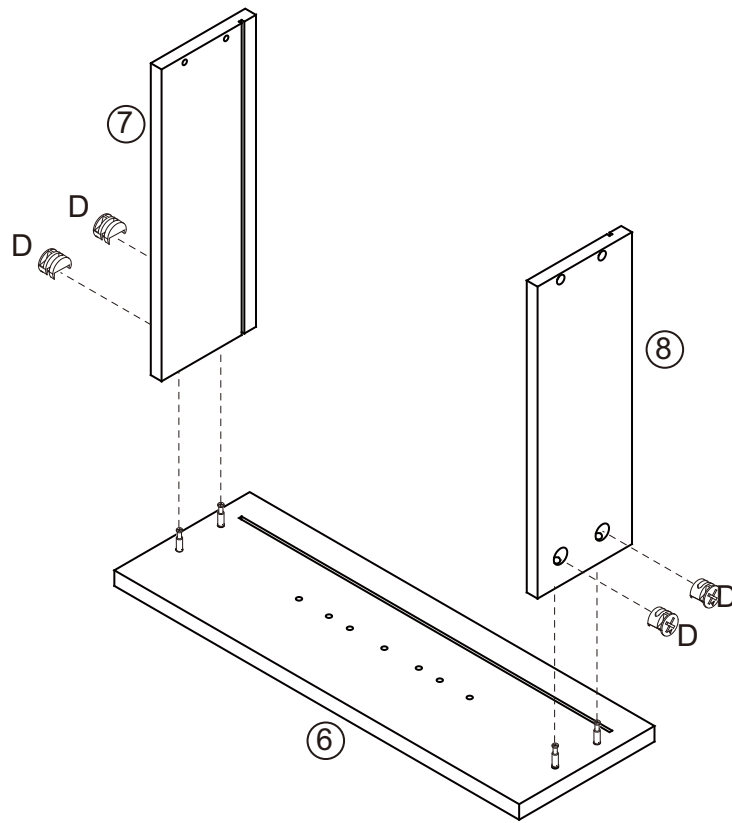


Drawer x2

Step 10

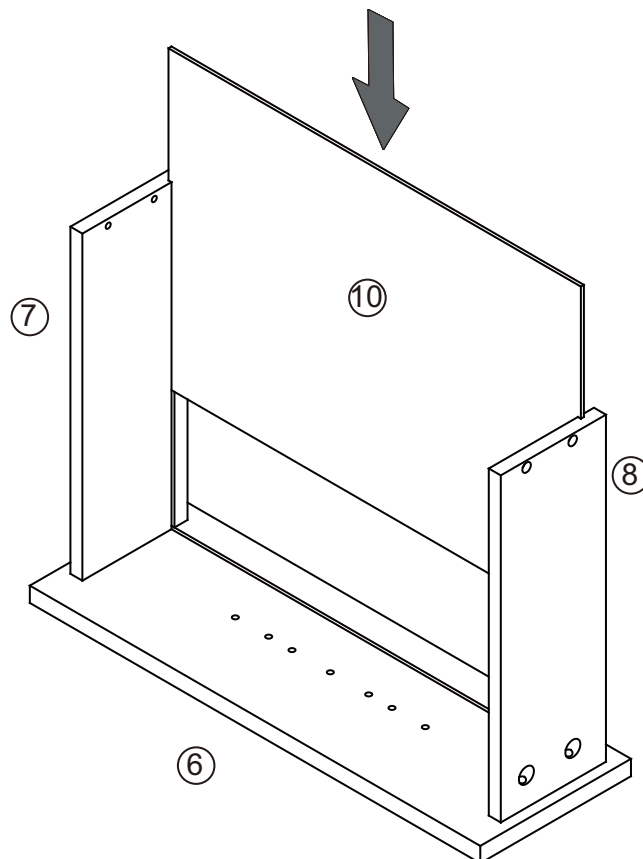



Drawer x2

Step 11

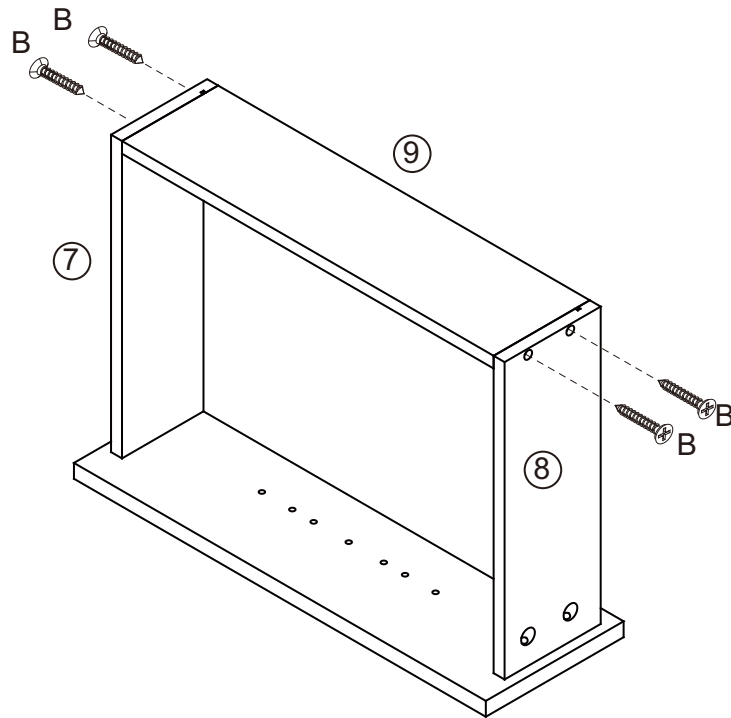


Drawer x2

Step 12

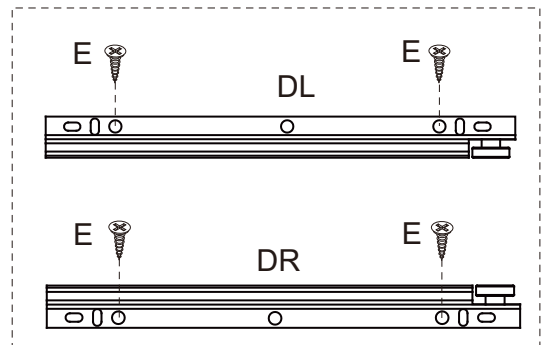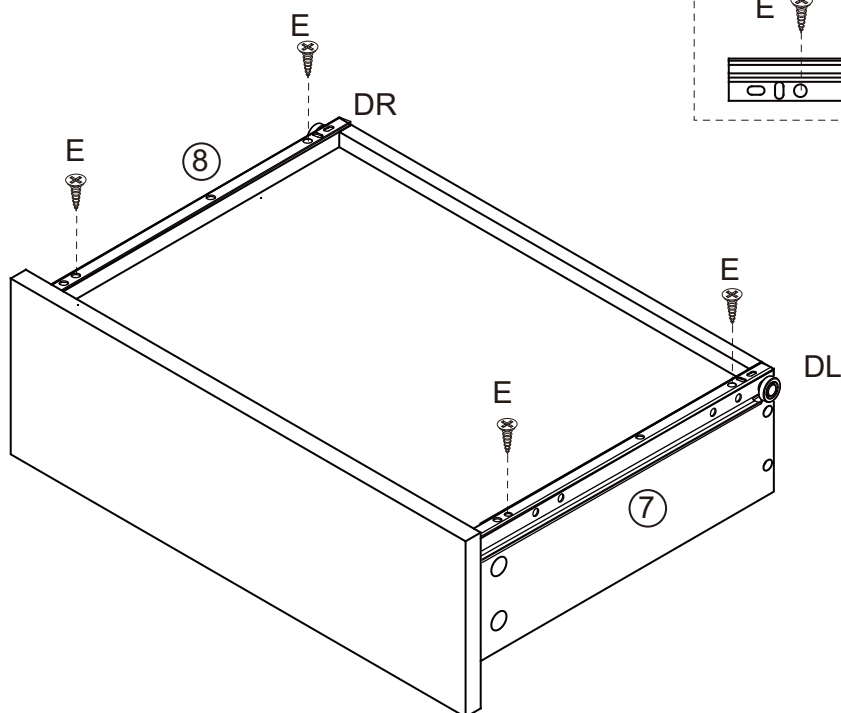

Drawer x2


Step 13

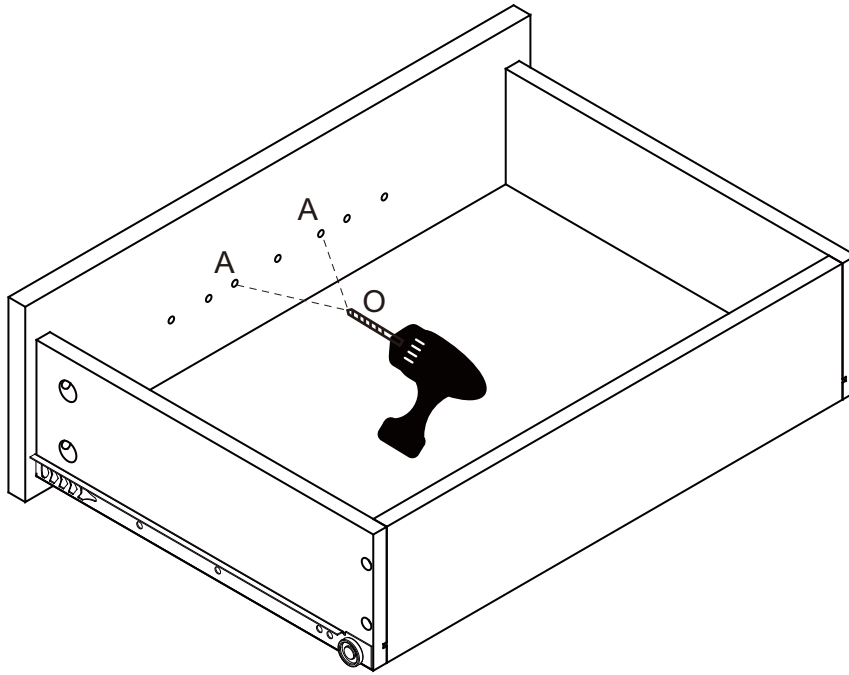

Drawer x2


* Refer to step 8 for hole drilling.

Step 14

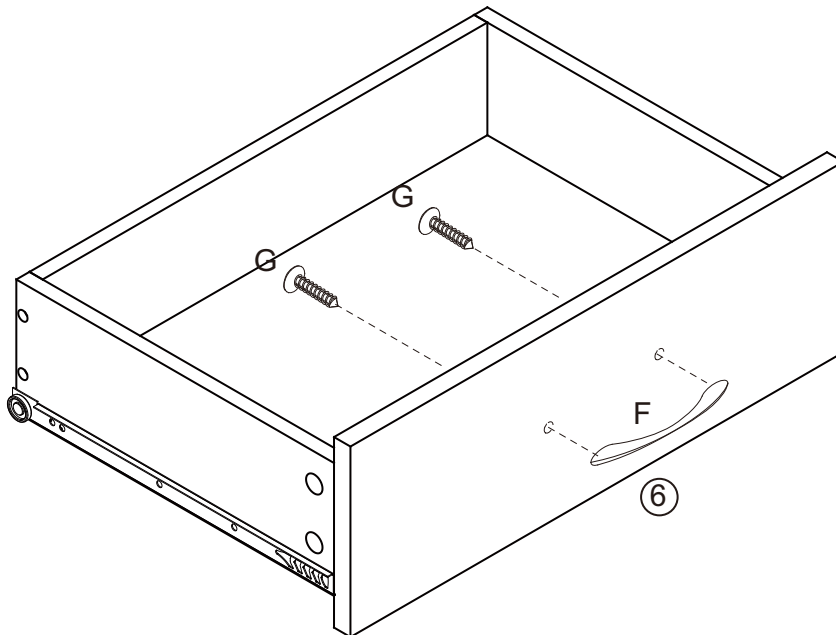


Select handle to install.


Step 15

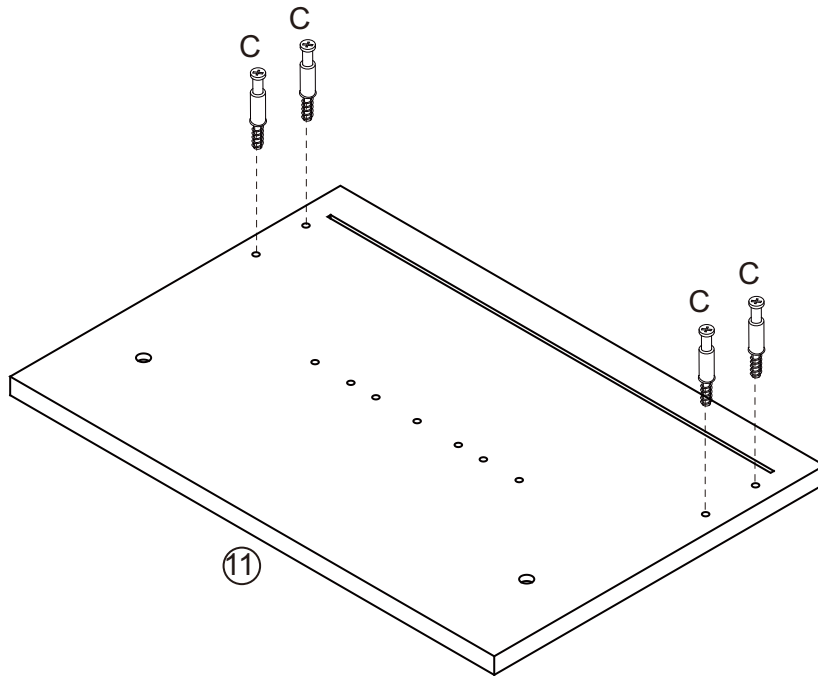


Step 16

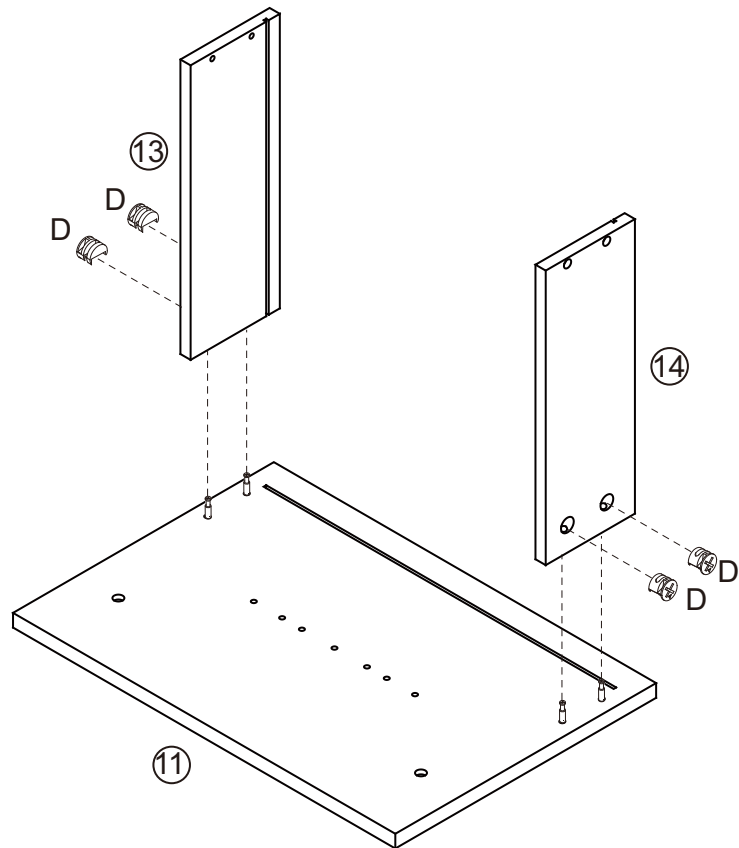



Step 17

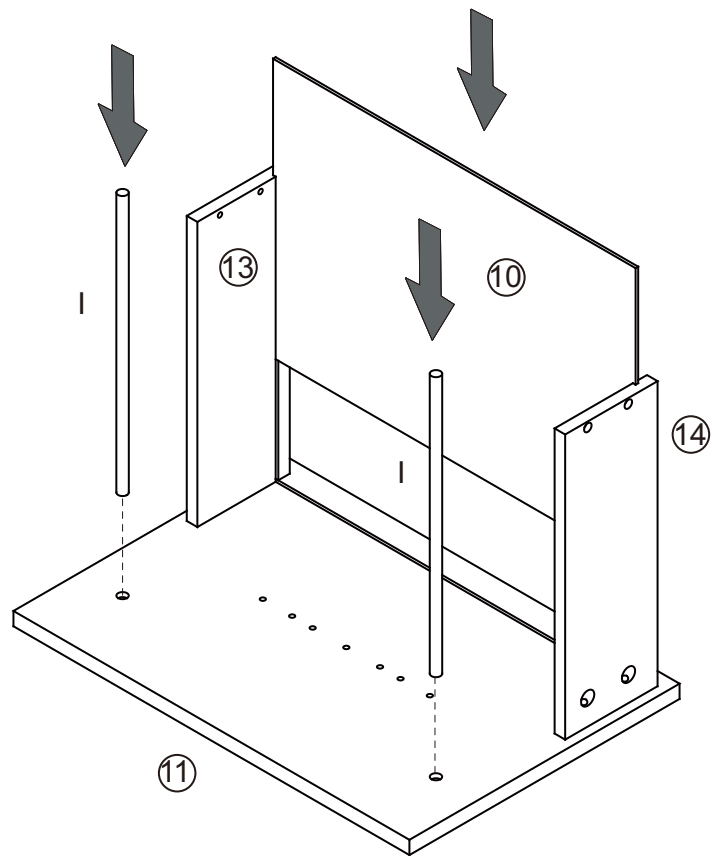


Step 18

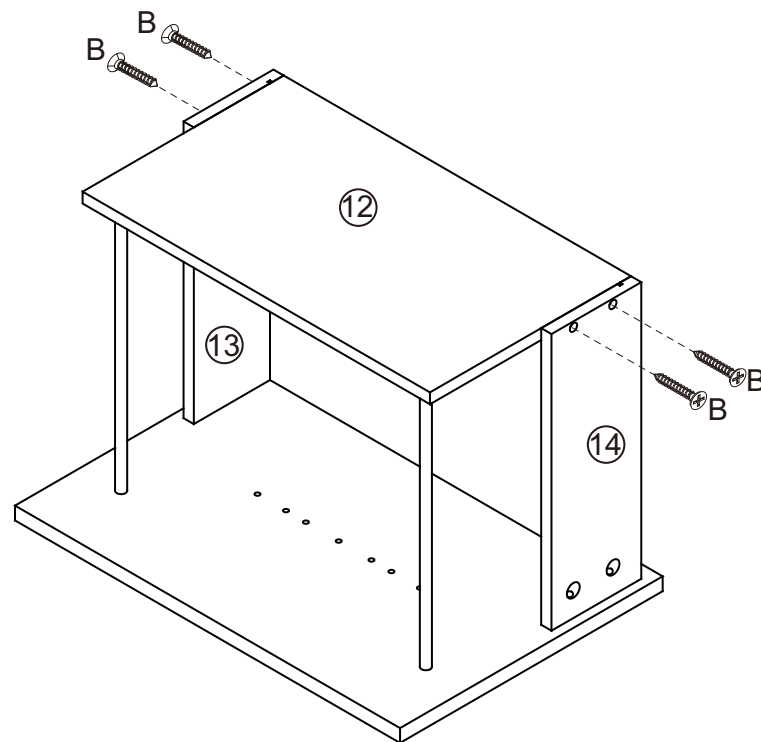

Step 19

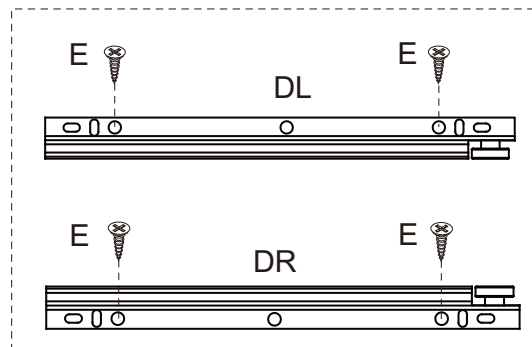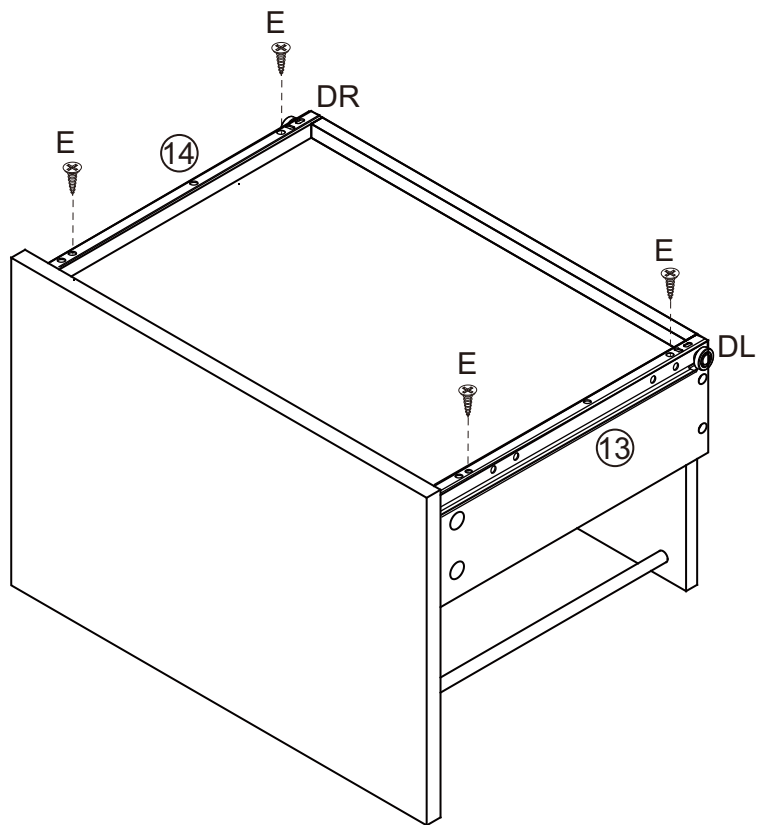


Step 20

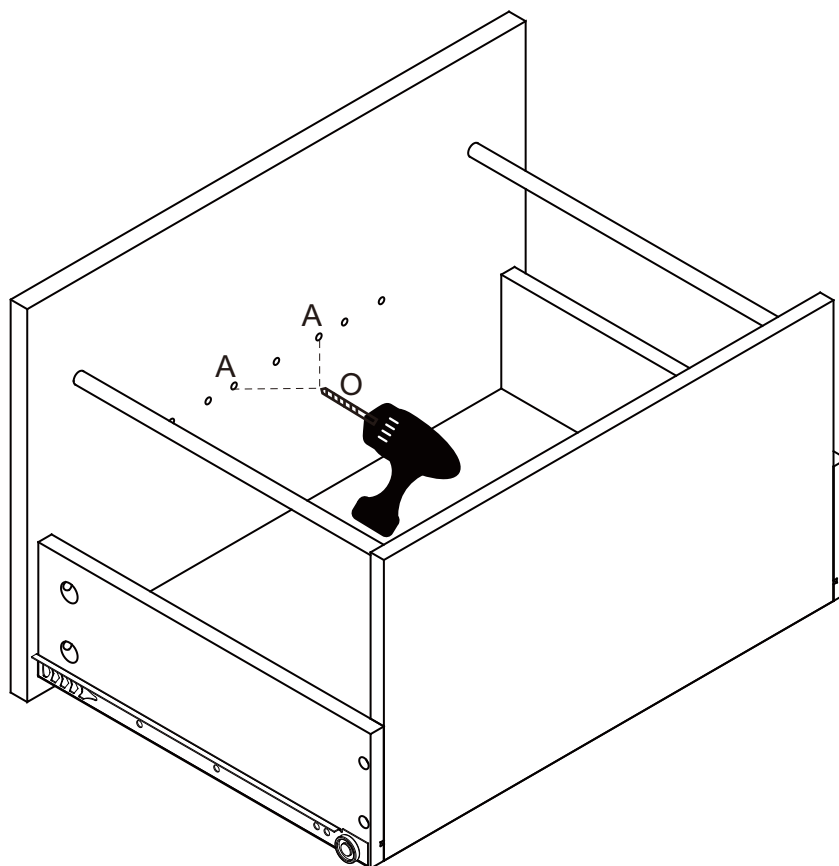



* Refer to step 8 for hole drilling.

Step 21

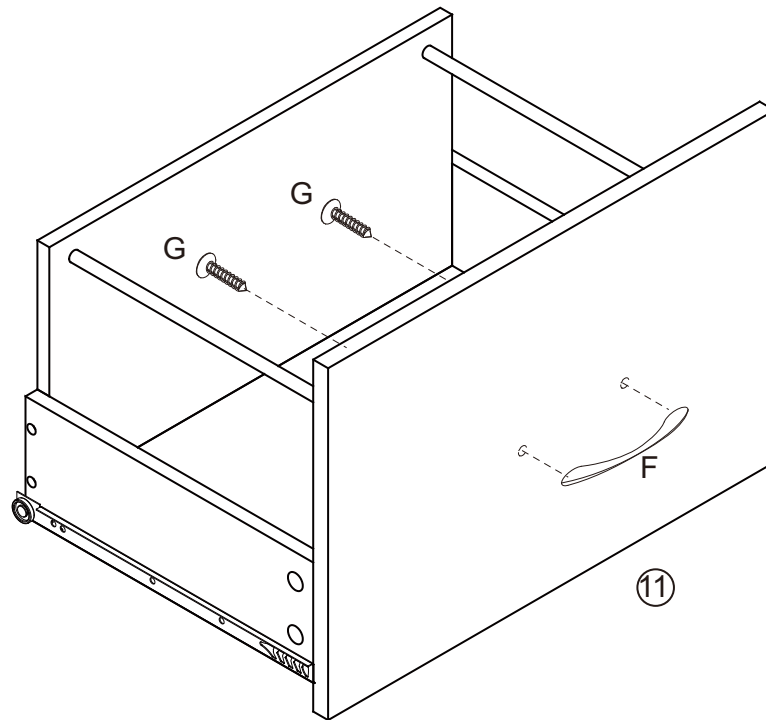



Select handle to install.

Step 22

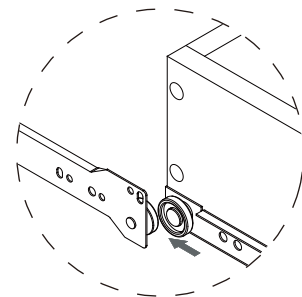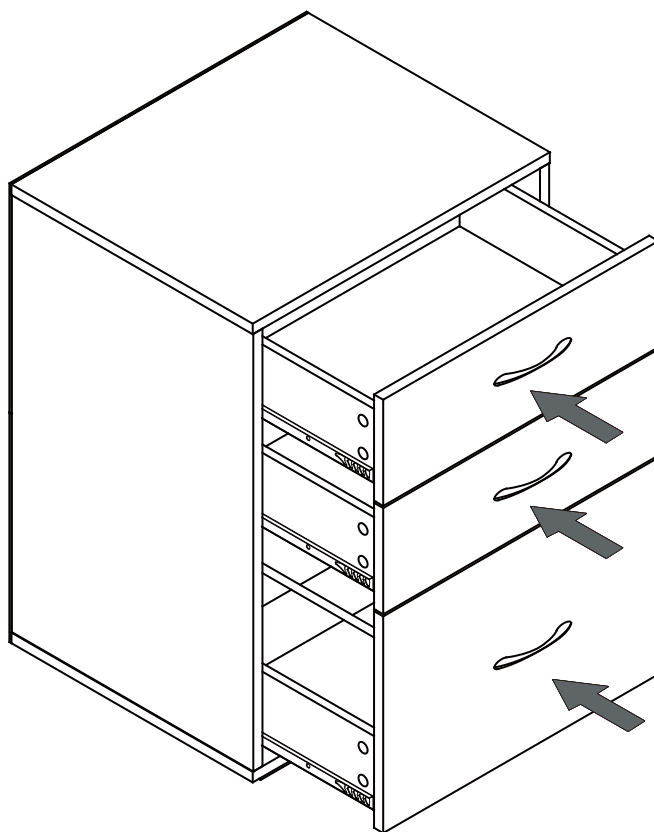

Carefully insert the drawers into the unit by gently guiding the runners into the tracks.

Step 23

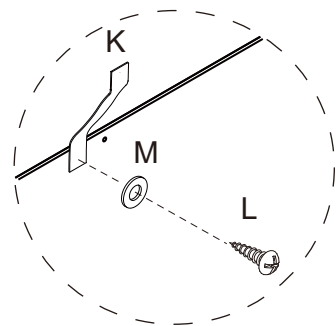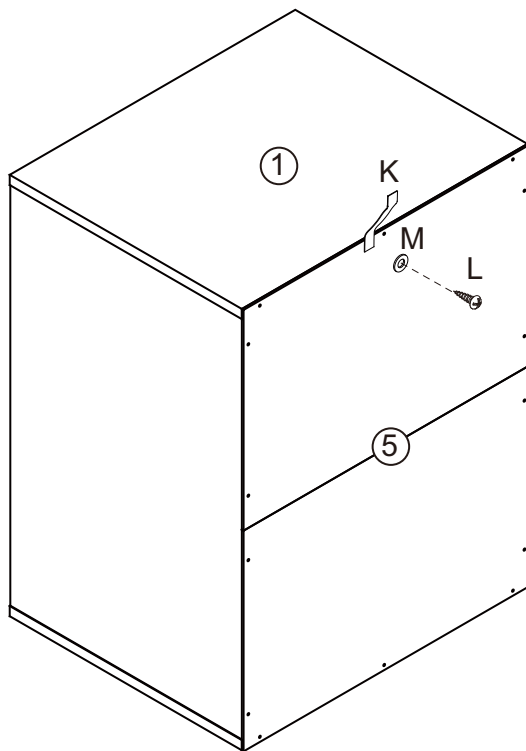

Step 24

Ensure unit is wall mounted to avoid tipping.

wall

