

100mm Bolt | 30mm Lock Padbolt Security Pack





Tools required: Pencil, No. 2 Phillips screwdriver, drill and 2mm drill bit.

Installation instructions:

1. Place padbolt in desired location. Mark screw locations and drill pilot holes using a 2mm drill bit. Fasten with screws.
2. Position the keeper over the extended padbolt (locked position). Mark and drill 2mm pilot holes and fasten with screws.

Hint: If using on a gate we recommend the padbolt should be fixed to the gate and the keeper fixed to the post.

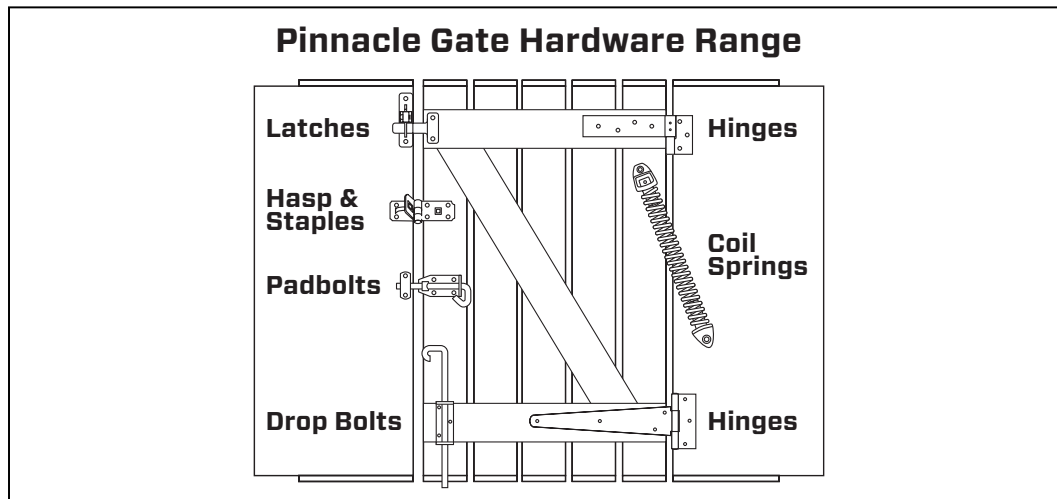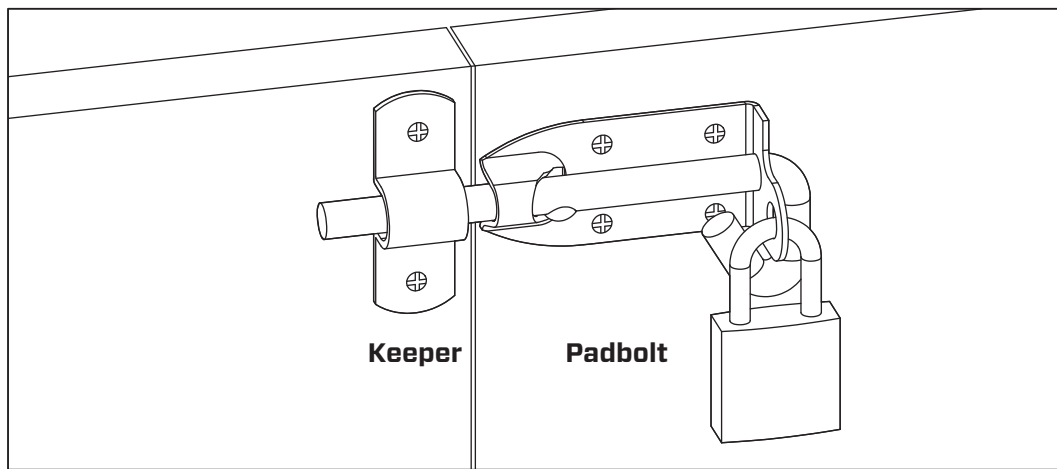

Corrosion Protection Chart

Finish:	Rating:
Stainless Steel	Ultimate
Galvanised	High
Zinc Plated	Moderate

Suitable for model no: GHS093.

CONNECT WITH US!
PINNACLE.NET.AU

