


## Pop-up Waste Assembly Installation Instructions

### Plug and Waste Installation Procedure

1. Disassemble product as shown in **Fig.1**.
2. Fit pop-up waste assembly, with flexible sealant applied as shown, into basin waste hole.
3. Fit rubber washer and waste nut on stud and centralise with the underside of the basin waste, secure with wing nut "A" as detailed in **Fig.1**.

DO NOT OVERTIGHTEN

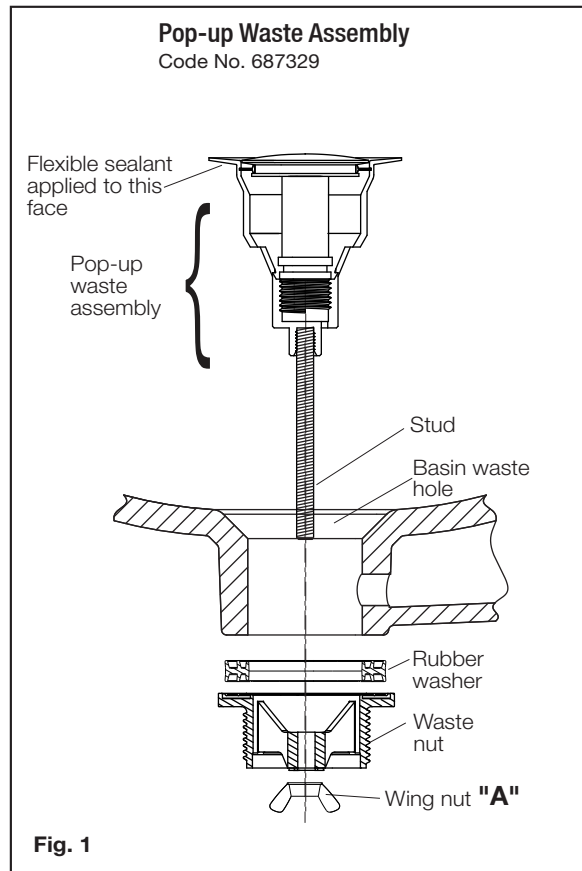

Installation must be in accordance with AS/NZS 3500.2 and Plumbing Code of Australia.