


SHOWER SCREEN INSTALLATION INSTRUCTIONS

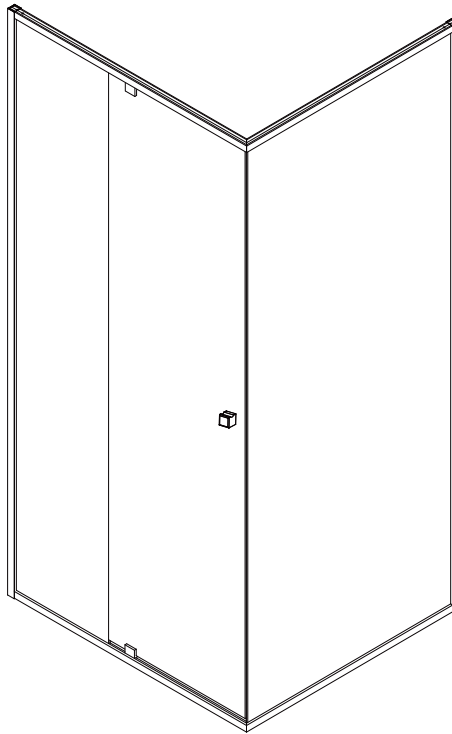

External Dimensions: (860-875) x (860-875) x 1830mm
(860-875) x (860-875) x 2000mm



Please read the following guidelines carefully prior to attempting installation.

This product is made of tempered glass which requires special handling. We recommend professional tradesman with experience in handling glass. Mishandling of the glass causing shattering or other damage is not covered by warranty.

Protective Equipment

It is recommended to wear safety glasses and gloves. Ensure the gloves provide adequate grip to prevent slippage.

Storage

Do not stand or lay the glass on hard surfaces. Use a thick blanket or similar to protect the glass. Some glass panels may come with rubber corner guards. It is recommended to keep these on the glass until installation is completed.

Temperature

Tempered glass ideally needs to be at room temperature to minimise the possibility of shattering. Store the glass in the house at least one day before planned installation.

Handling

It is important to be mindful of the edges of the glass. Over time, due to the glass expanding and contracting, small chips could result in the entire panel shattering. Do not torque the panel in any way (e.g. lifting up one corner when the panel is laying flat). Do not stand or tilt the panel with all the weight resting on one corner. The glass panels are heavy and assistance from another person is recommended. Heavy duty suction cups can also be used to assist in lifting and moving the glass.

GENERAL INFORMATION

Please inspect all parts and components immediately after upon receipt for transit damage, missing parts or manufacturing defects. Claims on the above will not be accepted after installation.

We highly recommend this shower unit be installed by a suitably qualified trades person as mishandling of tempered glass can result in shattered glass panels and/or serious injury.

It is the responsibility of the installer to ensure that the installation complies with council and/or local authority laws and regulations.

SAFETY INFORMATION

1. Please read instructions carefully before beginning installation.
2. Care should be taken when drilling into walls to avoid hidden pipes or electrical cables.
3. This product requires a two-person lift.
4. Wear safety boots, glasses and leather gloves when installing this product.

Note – This product cannot be trimmed or reworked, so ensure the size is correct for your application prior to installation.










CARE & MAINTENANCE

After use, your shower should be cleaned with warm soapy water using a soft cloth. This is particularly important in areas of hard water where insoluble lime salts and other minerals can build quickly.


Do not use abrasive cleaners or harsh chemicals, solvents, or strippers as it will eventually damage the glass and glass framing.

Note – Glass cleaners can be used, with caution. If in doubt, contact the manufacturer of the glass cleaner.




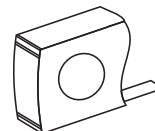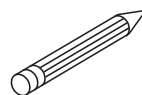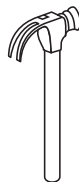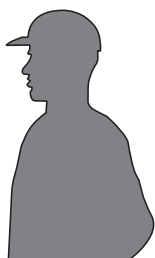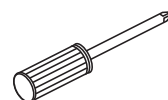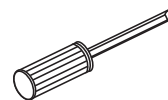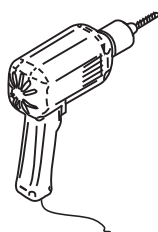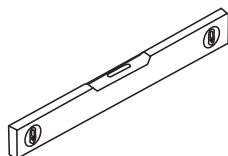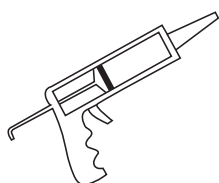




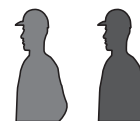


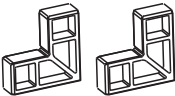


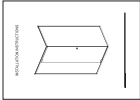

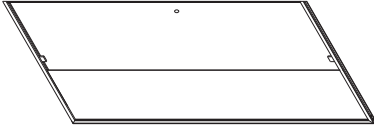
Recommended Tools




This product is heavy and may require two people to install.



BOX CONTENTS

1 x Installation Instructions	➔		
[1] 2 x Wall Profiles	➔		
[2] 1 x Door Panel + Fixed Panel	➔		
[3] 1 x Side Panel	➔		
[4] 8 x Wall Plugs [5] 8 x Screws St4x35	➔		
[6] 12 x Screws St4 x 10	➔		
[7] 12 x Screw Washers	➔		
[8] 12 x Screw Cover Caps	➔		
[9] 1 x Handle Set	➔		
[10] 2 x Profile Caps	➔		
[11] 2 x Corner Connectors	➔		
[12] 4 x Caps	➔		
[13] 1 x Door seal (hinge side)	➔		
[14] 2 x Door seal (bottom-hinge side)	➔		

ASSEMBLY DIAGRAM


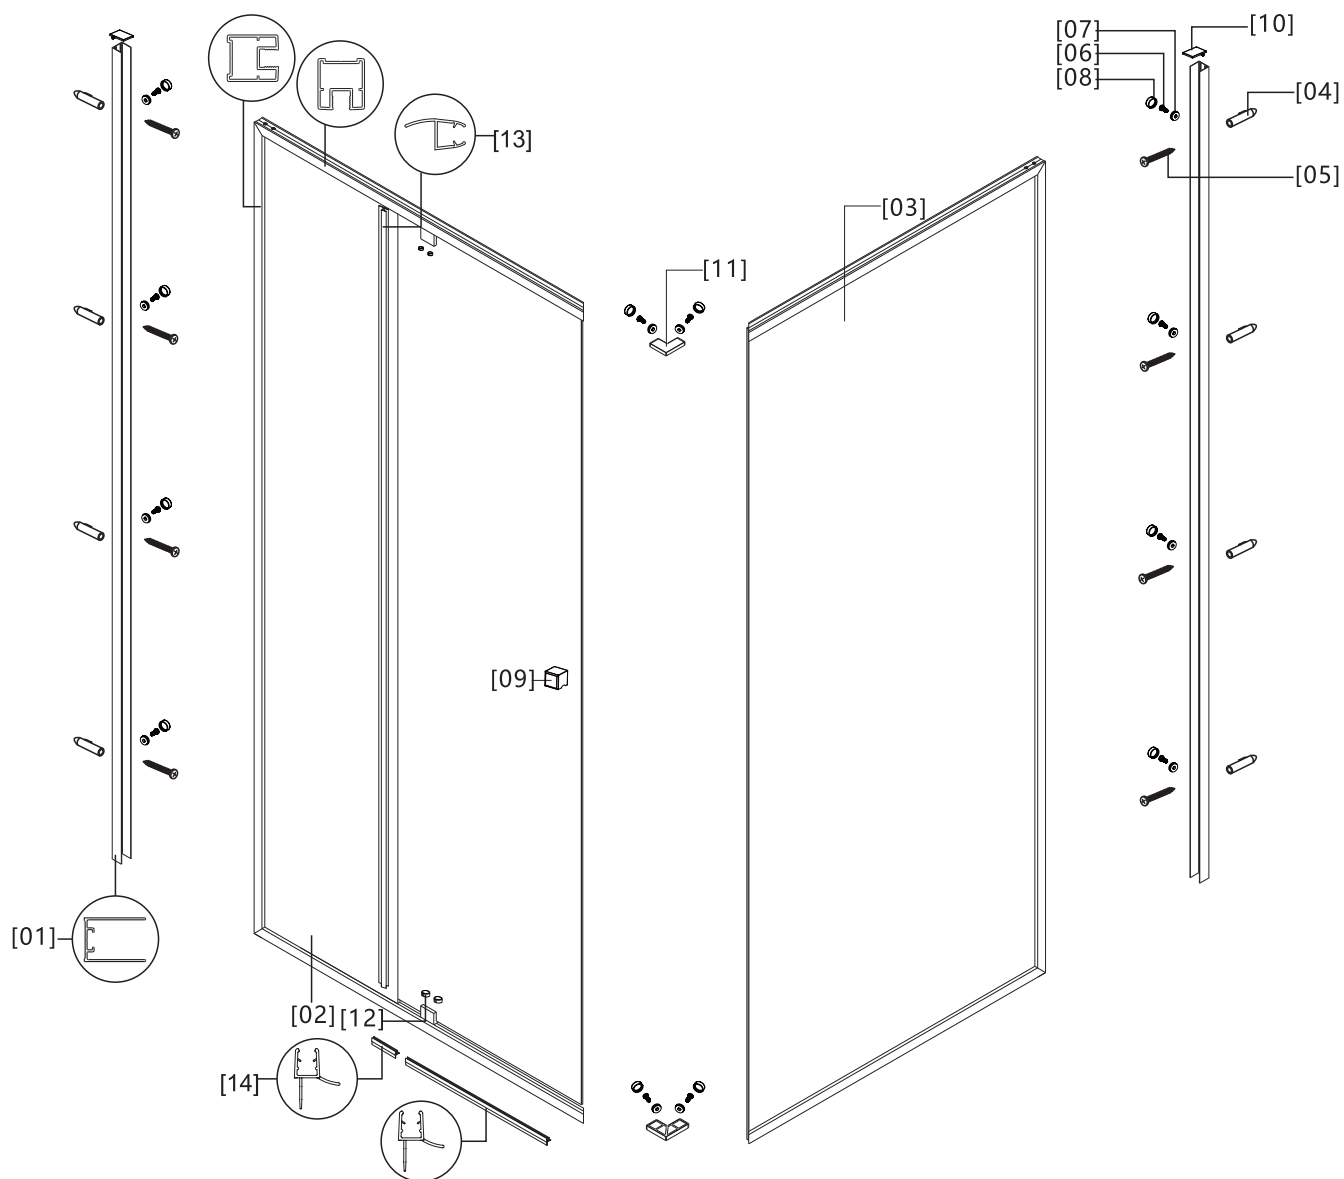


- [1] 2 x Wall Profiles
- [2] 1 x Door Panel + Fixed Panel
- [3] 1 x Side Panel
- [4] 8 x Wall Plugs
- [5] 8 x Screws St4x35
- [6] 12 x Screws St4 x 10
- [7] 12 x Screw Washers

- [8] 12 x Screw Cover Caps
- [9] 1 x Handle Set
- [10] 2 x Profile Caps
- [11] 2 x Corner Connectors
- [12] 4 x Caps
- [13] 1 x Door seal (hinge side)
- [14] 2 x Door seal (bottom-hinge side)



INSTALLATION STEPS

Step 1

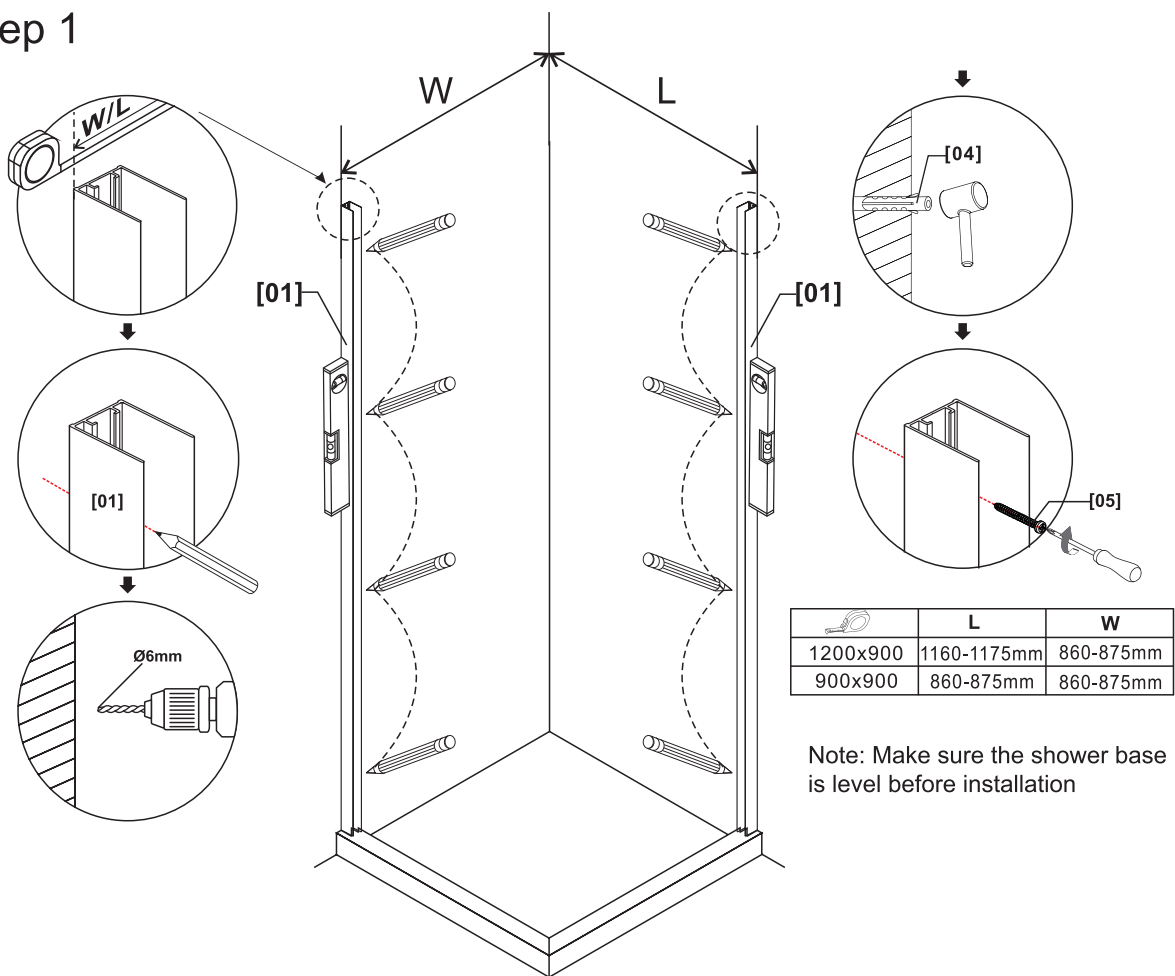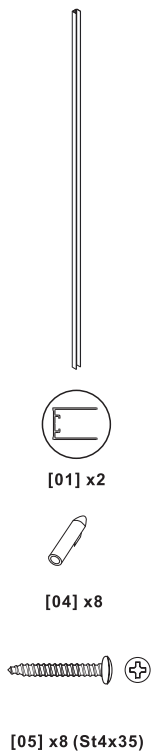

Note: Make sure the shower base is level before installation

Step 2

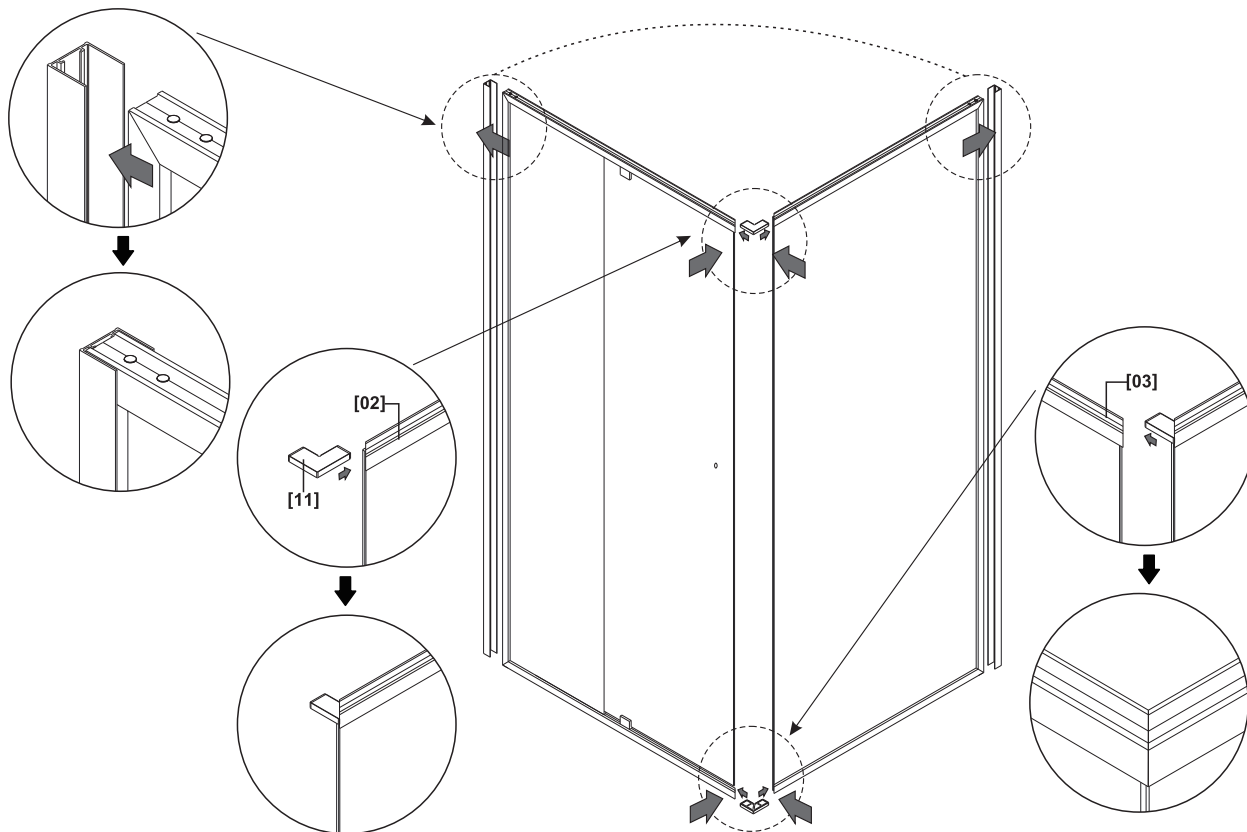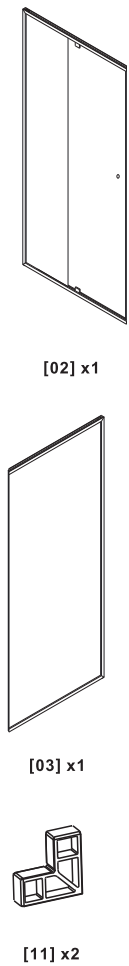



[06] x4 (St4x10)



[07] x4











[08] x4



[12] x4

Step 3

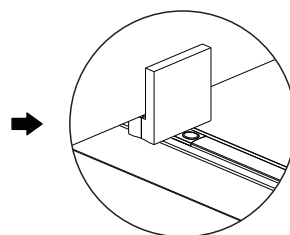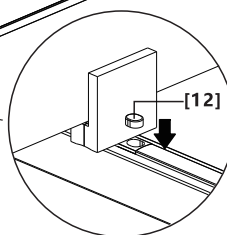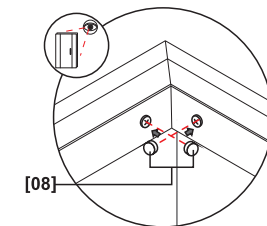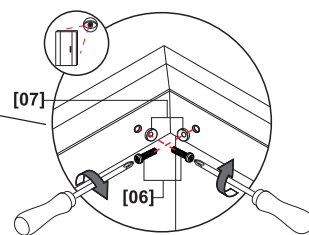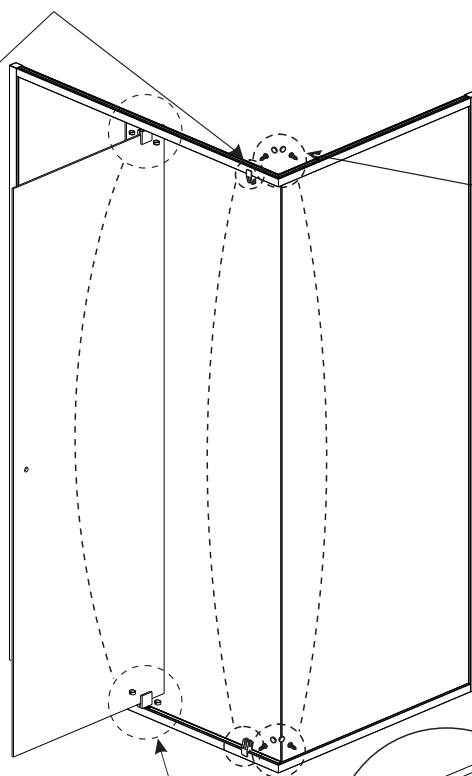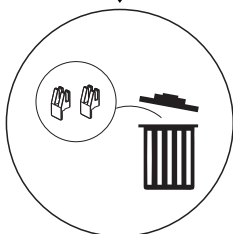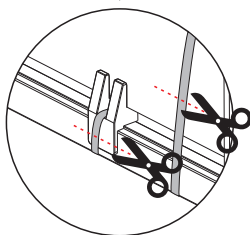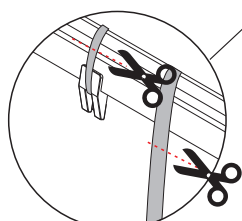


[06] x8 (St4x10)



[07] x8











[08] x8




[09] x1

Step 4

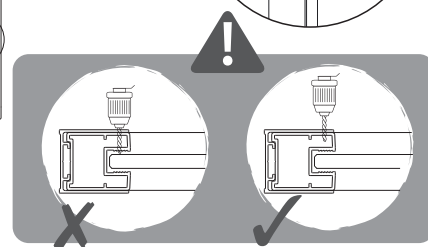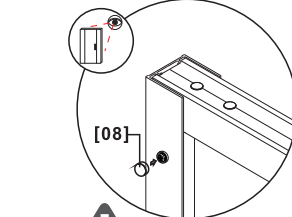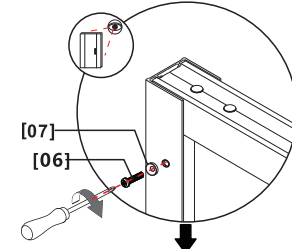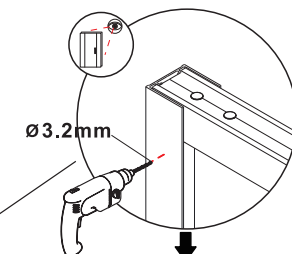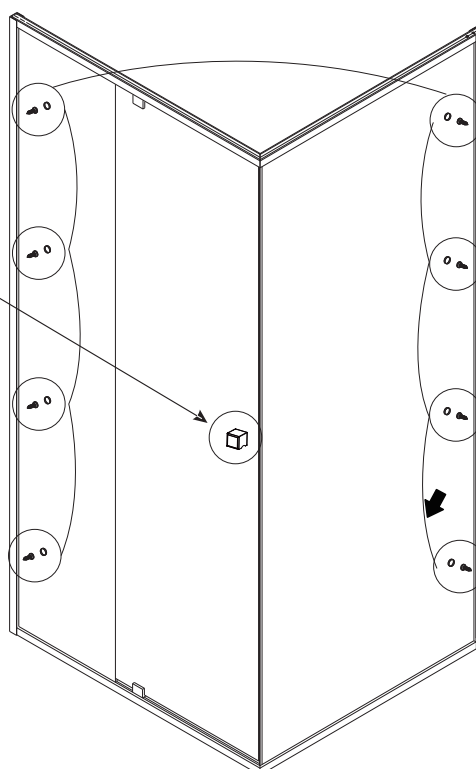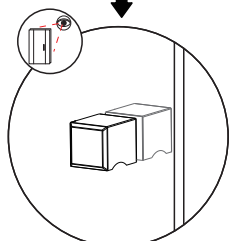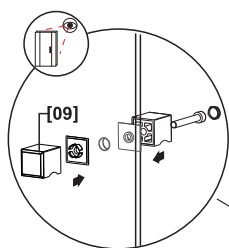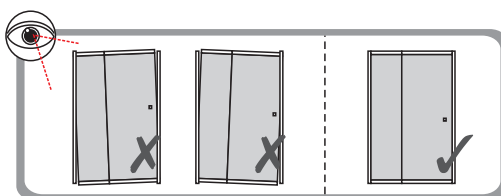



[14] x2

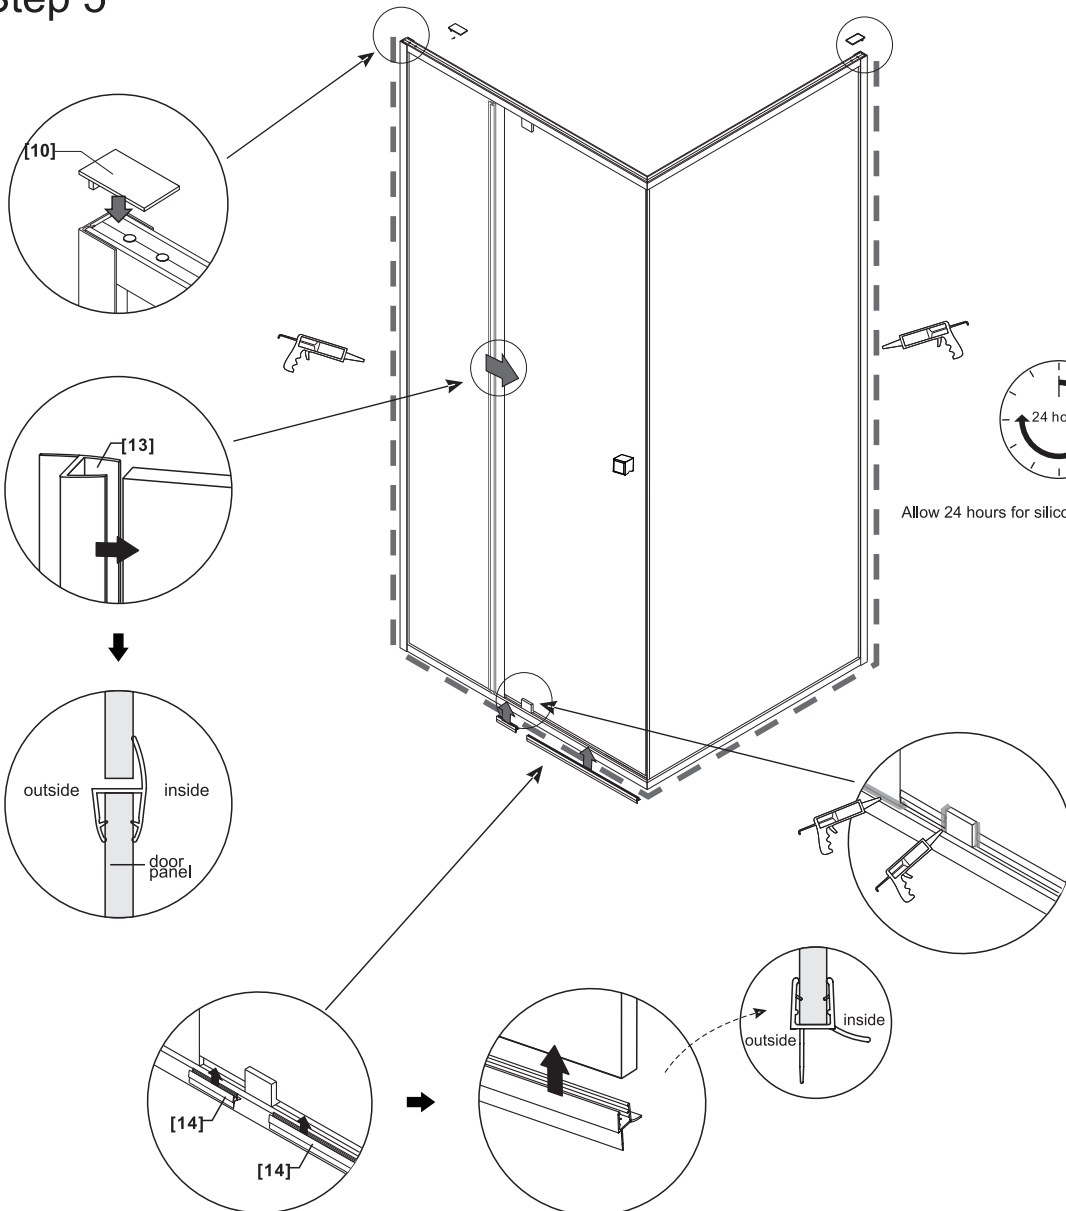

Allow 24 hours for silicone to dry before use.

Note: Make sure the door seal is installed according to the instructions and the door is opened outward. If the door seal is installed in the opposite direction, the door is opened inward, there may be water leakage.